Service Manual

STEREO AMPLIFIER

SA-8800

Original

PIONEER®

MODEL SA-8800 COMES IN FIVE VERSIONS DISTINGUISHED AS FOLLOWS:

Type	Voltage	Remarks
KU	120V only	U.S.A. model
KC	120V only	Canada model
HG	220V and 240V (Switchable)	Europe or Oceania model
S/G	110V, 120V, 220V and 240V (Switchable)	U.S. Military model
S	110V, 120V, 220V and 240V (Switchable)	General export model

The variation in safety standards in different countries has also necessitated variations in power supply and circuit component specifications.

This service manual is applicable to the KU type. For servicing of the other types please refer to the additional service manuals.

CONTENTS

1. SPECIFICATIONS 3
2. FRONT PANEL FACILITIES 4
3. REAR PANEL FACILITIES 7
4. BLOCK DIAGRAM 8
5. CIRCUIT DESCRIPTIONS
   - 5.1 Pre-Amplifier Section 8
   - 5.2 Power Amplifier Section 10
   - 5.3 Indicator Circuit 13
   - 5.4 Protection Circuit 14
6. DISASSEMBLY 15
7. PARTS LOCATION 16
8. PACKING 18
9. ADJUSTMENTS 19
10. EXPLODED VIEW 20
11. SCHEMATIC DIAGRAMS, P.C. BOARD PATTERNS AND PARTS LIST
    - 11.1 Miscellanea 23
    - 11.2 Schematic Diagram 24
    - 11.3 P.C. Boards Connection Diagram 27
    - 11.4 Terminal Assembly (GWX-242) 31
    - 11.5 Switch Assembly (AWS-134) 31
    - 11.6 EQ Assembly (GWF-113) 32
    - 11.7 Filter Assembly (GWS-164) 33
    - 11.8 TC Assembly (GWG-122) 34
    - 11.9 VR Assembly (GWX-243) 35
    - 11.10 PA Assembly (GWH-115) 36
    - 11.11 Indicator Assembly (AWV-001) 39
    - 11.12 Phones Jack Assembly (GWX-244) 41
    - 11.13 Power Supply Assembly (AWR-182) 42

1. SPECIFICATIONS

Semiconductors

ICs 3
FETs 6
Transistors 73
Diodes 49
Others 2

Power Amplifier Section

Continuous Power Output is 80watts* per channel, min., at 8 ohms from 10 Hertz to 20,000 Hertz with no more than 0.005% total harmonic distortion, or 80 watts* per channel at 4 ohms from 10 Hertz to 20,000 Hertz with no more than 0.005% total harmonic distortion.

Continuous Power Output
10Hz to 50,000Hz: 80W + 80W (T.H.D. 0.01%, 8 ohms)
100W + 100W (T.H.D. 0.02%, 4 ohms)
Total Harmonic Distortion (10 Hertz to 20,000 Hertz)
continuous rated power output
. . . . . No more than 0.005%
40 watts per channel power output,
8 ohms . . . . . No more than 0.004%
1 watt per channel power output,
8 ohms . . . . . No more than 0.004%
Intermodulation Distortion (50 Hertz : 7,000 Hertz = 4 : 1)
continuous rated power output
. . . . . No more than 0.002%
40 watts per channel power output,
8 ohms . . . . . No more than 0.002%
1 watt per channel power output,
8 ohms . . . . . No more than 0.002%
Frequency Response . . . . . 5 to 200,000 Hertz $^{+0}_{-2}$ dB
(POWER AMP IN)
Input (Sensitivity/Impedance) . . . . . 1V/50 kilohms
(POWER AMP IN)
Output
Speaker . . . . . A, B, A+B
Headphones . . . . . Low impedance
Damping Factor
(20 Hertz to 20,000 Hertz, 8 ohms) 55
Hum and Noise
(IHF, short-circuited, A network) 118dB

Preamplifier Section

Input Sensitivity/Impedance
PHONO 1 . . . . . 2.5 mV/50
PHONO 2 . . . . . 2.5 mV/50
CARTRIDGE LOAD . . . . . Both Phono 1 and 2
100, 10k, 25k, 50k, 100k ohms
100, 200, 300, 400, 500pF
TUNER . . . . . 150mV/50 kilohms
AUX . . . . . 150mV/50 kilohms
TAPE PLAY 1 . . . . . 150mV/50 kilohms
TAPE PLAY 2 . . . . . 150mV/50 kilohms
Phono Overload Level (T.H.D. 0.002%, 1 kHz)
PHONO 1, 2 . . . . . 250mV
Output (Level/Impedance)
TAPE REC 1 . . . . . 150mV
TAPE REC 2 . . . . . 150mV
PRE OUT . . . . . 1V/600 ohms, 3V/600 ohms (max.)
Total Harmonic Distortion
(10 to 50,000 Hertz, 1V output) : No more than 0.006%
Frequency Response
PHONO (RIAA Equalization)
. . . . . 20Hz to 20,000Hz ±0.2dB
TUNER, AUX, TAPE PLAY : 5Hz to 100,000Hz $^{+0}_{-1}$ dB
Tone Control
BASS . . . . . +10dB, −10dB (100Hz)
TREBLE . . . . . +10dB, −10dB (10kHz)
Filter SUBSONIC 15Hz (6dB/oct)
HIGH 8kHz (6dB/oct)
Hum and Noise (IHF, short-circuited, A network)
PHONO 90dB
TUNER, AUX, TAPE PLAY 110dB
Muting . . . . . −20dB
Loudness Contour (Volume control set at −40dB position)
. . . . . +6dB (100Hz), +3dB (10kHz)

Miscellaneous

Power Requirements 120V, 60Hz
Power Consumption . . . . . 260W (UL), 500VA (CSA)
Dimensions . . . . . 453(W) x 155(H) x 425(D) mm
17-11/16(W) x 6-1/8(H) x 16-3/4(D) in
Weight Without package . . . . . 15.6kg (34 lb 6 oz)

Furnished Parts

Operating instructions 1

* *Measured pursuant to Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier.*

NOTE:
Specifications and the design subject to possible modification without notice due to improvements.

2. FRONT PANEL FACILITIES

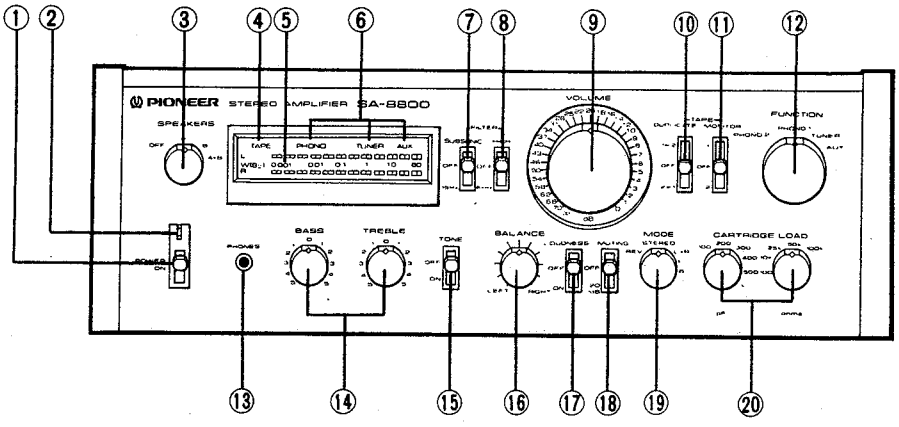

① POWER SWITCH

Set this switch to ON to supply power to the amplifier. There will be a short delay when it is set to ON, because the muting circuit has been actuated to suppress the unpleasant noise that is sometimes generated when the power is on and off.

② POWER INDICATOR

When the power switch is set to ON this lamp lights up, indicating the amplifier is turned on.

③ SPEAKER SELECTOR

Use this selector to select the speaker system.

OFF: Sound not obtained from speakers.

A: Sound obtained from speakers connected to the A speaker terminals.

B: Sound obtained from speakers connected to the B speaker terminals.

A+B: Sound obtained from speakers connected to both A and B speaker terminals.

④ TAPE MONITOR INDICATOR

The TAPE lamp lights up when the tape monitor switch is set to either position "1" or "2".

⑤ POWER METER

This meter allows you to read out the rated power level on the fluorescent display tube when speakers with a nominal impedance of 8 ohms are connected to the amplifier's speaker terminals.

⑥ FUNCTION INDICATORS

The PHONO, TUNER, AUX function indicators light up in accordance with the position of the function selector.

NOTE:
The function indicator will not go off when the tape monitor switch is set to position "1" or "2". This indicates a program at the recording source end during the monitoring of a recording.

⑦ SUBSONIC FILTER SWITCH

When this switch is set to the 15Hz position, the subsonic filter with a cut-off frequency of 15Hz is actuated. The subsonic filter serves to attenuate frequencies lower than 15Hz in a 6dB/oct slope. It is therefore effective in suppressing ultra-low-frequency noise which is generated by record warp and other causes. You cannot actually hear this noise but it is a factor in the generation of intermodulation distortion and it may damage your speaker system. Set this switch to the 15Hz position during record play for the best effect.

⑧ HIGH FILTER SWITCH

The high filter with a cut-off frequency of 8kHz is actuated when this switch is set to the 8kHz position.

The high filter serves to attenuate frequencies higher than 8kHz in a 6dB/oct slope. This is why it is effective in suppressing high-frequency noise or noise from scratches on records being played.

⑨ VOLUME CONTROL

Use this control to adjust the output level to the speakers and headphones. Turn it clockwise to increase the output level. No sound will be heard if you set it to ∞. The scale is graduated in dB which indicate the attenuation when the maximum output level is 0dB.

⑩ TAPE DUPLICATE SWITCH

Use this switch when employing two tape decks to duplicate recorded tapes or edit tapes. This switch is otherwise kept at the OFF position.

1▶2: When playing back the tape on a deck connected to the TAPE 1 jacks and recording (duplicating) on a deck connected to the TAPE 2 jacks.

OFF: Set to this position when not duplicating.

2▶1: When playing back the tape on a deck connected to the TAPE 2 jacks and recording (duplicating) on a deck connected to the TAPE 1 jacks.

⑪ TAPE MONITOR SWITCH

Use this switch to select the program source which is being reproduced.

1: Set here to monitor a recording or a tape being played back on a tape deck which is connected to the TAPE 1 jacks.

OFF: Set here whenever you are not playing back a tape or monitoring a recording (i.e. when you have set the function selector to PHONO 1, PHONO 2 or TUNER, or AUX for an alternative program source).

2: Set here to monitor a recording or a tape being played back on a tape deck which is connected to the TAPE 2 jacks.

⑫ FUNCTION SELECTOR

Use this selector to select the program source. When set, the function indicator above the meter panel corresponding to the position of the function selector will light up.

PHONO 2: Set here when playing records on a turntable connected to the PHONO 2 jacks. (The PHONO function indicator lights up.)

PHONO 1: Set here when playing records on a turntable connected to the PHONO 1 jacks. (The PHONO function indicator lights up.)

TUNER: Set here when listening to broadcasts on a tuner connected to the TUNER jacks. (The TUNER function indicator lights up.)

AUX: Set here when listening to a program source which is connected to the AUX jacks. (The AUX function indicator lights up.)

⑬ HEADPHONE JACK

Plug the headphones into this jack when you want to listen through your stereo headphones.

NOTE:
Set the speaker selector to OFF when listening only with headphones.

⑭ BASS AND TREBLE CONTROLS

Use these controls to adjust the bass and the treble. If you set the tone switch to ON and turn the bass control to right from its center position, you will be able to emphasize the sound in the low-frequency range. Conversely, turning the bass control to the left from the center position, you will attenuate the sound.
You can use the treble control to adjust the sound in the high-frequency range.

⑮ TONE SWITCH

Set this switch to ON when adjusting the bass and treble controls. When set to OFF, the tone control circuits are disengaged and frequency response is flat. This function is convenient for checking phono cartridge and speaker tone quality and listening room acoustics.

⑯ BALANCE CONTROL

Use this control to balance the volume of the left and right channels. First, however, set the mode selector to mono (L+R, L, or R), and adjust so that the sound appears to come from somewhere exactly between the two speakers. If the sound appears to be louder on the right, it means that the volume of the right channel is higher. Turn the balance control to the left and adjust.
Conversely, if the sound appears to be louder on the left, it means that the volume of the left channel is higher. Therefore, turn the balance control to the right and adjust. After adjusting, return the mode selector to STEREO.

⑰ LOUDNESS SWITCH

When listening to a performance with the volume control turned down, set this switch to ON and the bass and treble will be accentuated.
When the volume is low, the human ear finds it harder to hear the bass and treble than when the volume is high. The loudness switch is thus designed to compensate for this deficiency. By setting it to ON, the bass and treble come through much more strongly and the sound takes on a punch even when the volume control is turned down.

⑱ MUTING SWITCH

Set this switch to −20dB to attenuate the audio output indicated by the volume control by 20dB. There is no need to adjust the volume control if you use this switch when turning down the audio output temporarily and when changing over records or tapes.

⑲ MODE SELECTOR

Use this selector for selecting the performances.

REV: Reverses left and right channel stereo signals and reproduces them stereophonically.

STEREO: Set to this position for normal stereo reproduction.

L+R: Mixes left and right channel signals and reproduces them monophonically.

L: Left channels signal is reproduced monophonically from both speakers.

R: Right channel signal is reproduced monophonically from both speakers.

⑳ CARTRIDGE LOAD SELECTORS (ohms and pF)

These selectors allow you to select the input resistance and input capacitance in line with the rated load impedance and load capacitance of a moving magnet (MM) cartridge for record play.
Use these two switches to produce the sound quality of your preference or the ideal conditions for your cartridge.

VOLUME CONTROL AND MUTING SWITCH

The volume control scale is directly calibrated in dB. By adjusting it in combination with the muting switch, it is possible to adjust the attenuation more finely across a very wide range. The attenuation (volume) is equal to the volume control indication plus 20dB.

- There will be no need to adjust the volume control every time you change over a tape or record if you set the switch to −20dB position for reducing the volume temporarily during play.
- You will not be able to finely adjust the volume if the volume control is near the ∞ position when listening to a program at a low sound level at night, for example. In such cases, set the muting switch to −20dB and you will then be able to adjust the sound with the volume control to more fine steps.

NOTE:
Always turn the volume control right down when returning the muting switch to OFF during a performance when the sound is set to a high level with the volume control.

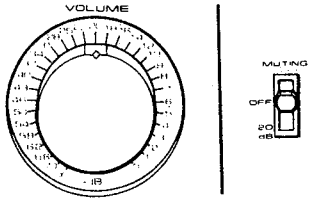

3. REAR PANEL FACILITIES

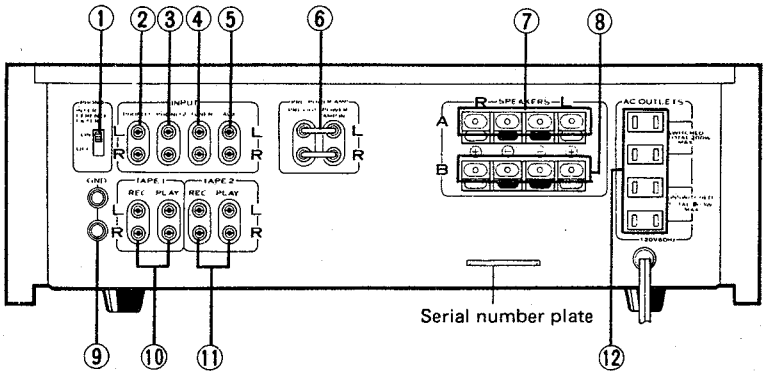

① PHONO INTERFERENCE FILTER SWITCH

This is used to attenuate radio-frequency interference from external electronic or electrical appliances or products during record play.
When this switch is set to ON during record play with the cartridge load resistance switch is at 100Ω position, the sound volume will be reduced.

② PHONO 1 JACKS

Connect the turntable output cords to these jacks.

③ PHONO 2 JACKS

Connect your second turntable output cords to these jacks.

④ TUNER JACKS

Connect the tuner cords to these jacks.

⑤ AUX JACKS

These are auxiliary input jacks. Connect a TV tuner or cartridge tape player to them.

⑥ PREAMPLIFIER/POWER AMPLIFIER CONNECTOR BAR

When this connector bar is disconnected from the jacks, you can separate the SA-8800's preamplifier and power amplifier. For normal use, however, it is connected.

NOTE:
If this bar is not connected properly, you will not hear any sound from the speakers connected to the SPEAKERS terminals.

⑦ SPEAKERS TERMINALS A

Connect your first pair of speakers to these terminals.

⑧ SPEAKERS TERMINALS B

Connect your second pair of speakers to these terminals.

⑨ GND TERMINALS

These are the ground terminals. Connect the ground wire of the turntable, etc. to these terminals.

⑩ TAPE 1 JACKS

Connect the tape deck cords to these jacks. Connect the REC (recording) jacks to the INPUT jacks on the tape deck, and the PLAY (playback) jacks to the OUTPUT jacks.

⑪ TAPE 2 JACKS

Connect your second tape deck cords to these jacks. Connect the REC (recording) jacks to the INPUT jacks on the tape deck, and the PLAY (playback) jacks to the OUTPUT jacks.

⑫ AC OUTLETS

These are spare power outlets. Insert the power plug on the stereo components (turntable, tuner, tape deck, etc.) into these outlets.

SWITCHED: The power supplied through these outlets is coupled to the operation of the amplifier's power switch. The maximum power capacity which may be connected to the two SWITCHED outlets is 200W (For the Canadian model, the maximum power capacity is 100VA).

UNSWITCHED: The power is always supplied through these two outlets regardless of the position of the power switch. The maximum power capacity which may be connected to these two outlets is 200W (For the Canadian model, the maximum power capacity is 100 VA).

4. BLOCK DIAGRAM

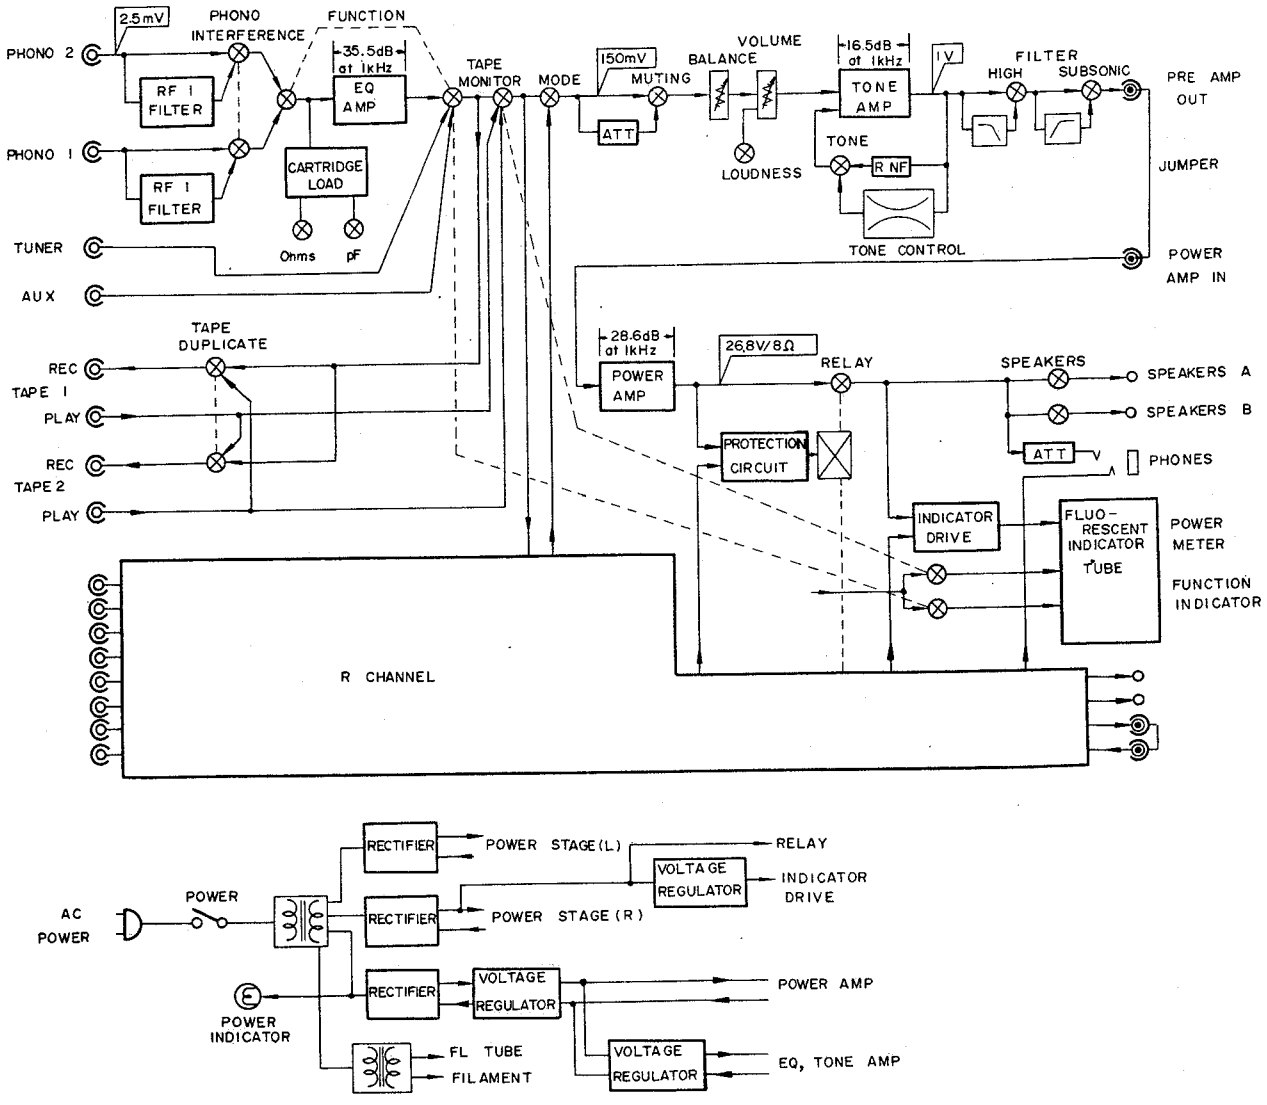

5. CIRCUIT DESCRIPTIONS

5.1 PRE-AMPLIFIER SECTION

Cartridge Load Selectors

The input resistance and input capacitance of the PHONO input may be varied. The EQ amplifier input resistance is set to 100kΩ, and the input capacitance to 100pF. By operation of the CARTRIDGE LOAD selectors, different resistors and capacitors will be in parallel with the PHONO input circuit. Five different input resistance levels (100Ω, 10kΩ, 30kΩ, 50kΩ and 100kΩ) and five different input capacitance levels (100pF, 200pF, 300pF, 400pF and 500pF) are available, permitting the user to select optimum load conditions for the phono cartridge being employed in the turntable connected to the PHONO terminals.

Phono Interference Filter

Because of the high sensitivity of the phono input circuits, a certain amount of radio frequency interference may occur. This may be reduced by simply turning the rear panel PHONO INTERFERENCE FILTER on (thereby connecting a resistor in series with the phono input circuits).

EQ Amplifier

Fig. 5-1 shows the basic configuration of the circuit. The EQ amplifier is a completely symmetrical DC-coupled 3-stage amplifier, the first stage of which employs newly developed ultra-low-noise NPN and PNP transistors.

The output stage is a symmetrical complementary SEPP Class A configuration. The output current is of the same order of magnitude as that of a small power amplifier, and is sufficient to cope with low-impedance loads.

The resultant S-N ratio of the EQ amplifier is 90dB, while the equalizer deviation is ±0.2dB (20Hz to 20,000Hz).

Tone Controls

Fig. 5-2 shows the basic tone control circuit. The tone amplifier is a 3-stage DC-coupled amplifier, the first stage is a differential amplifier consisting of a ultra-low-noise twin FET. The second stage is a differential amplifier consisting of a PNP twin transistor, and the output impedance lowered by using an emitter follower at the output stage.

Tone control (BASS, TREBLE) is accomplished by providing the tone amplifier NFB circuit with a frequency selective characteristic. The NFB circuit is changed to a flat frequency characteristic when the TONE switch is in the OFF position.

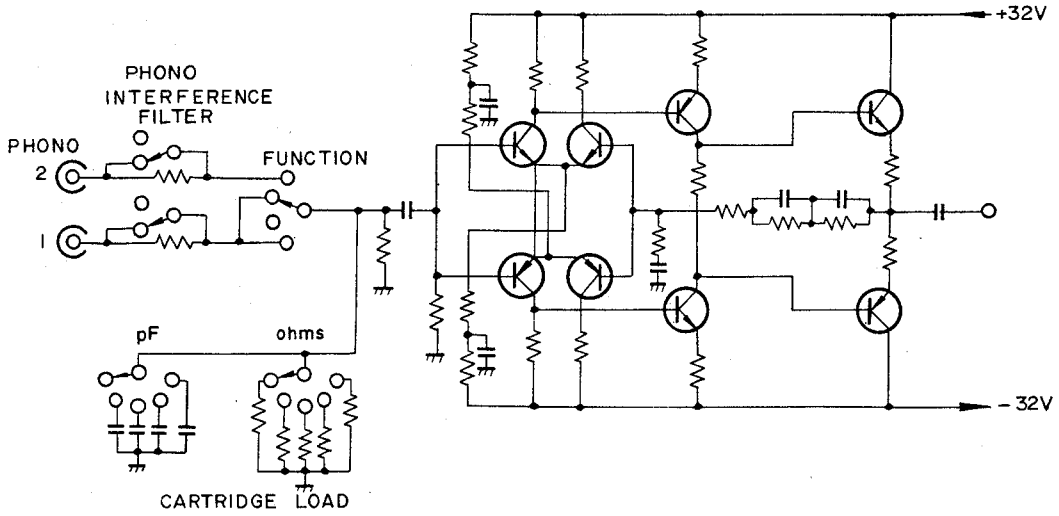

Fig. 5-1 EQ Amplifier

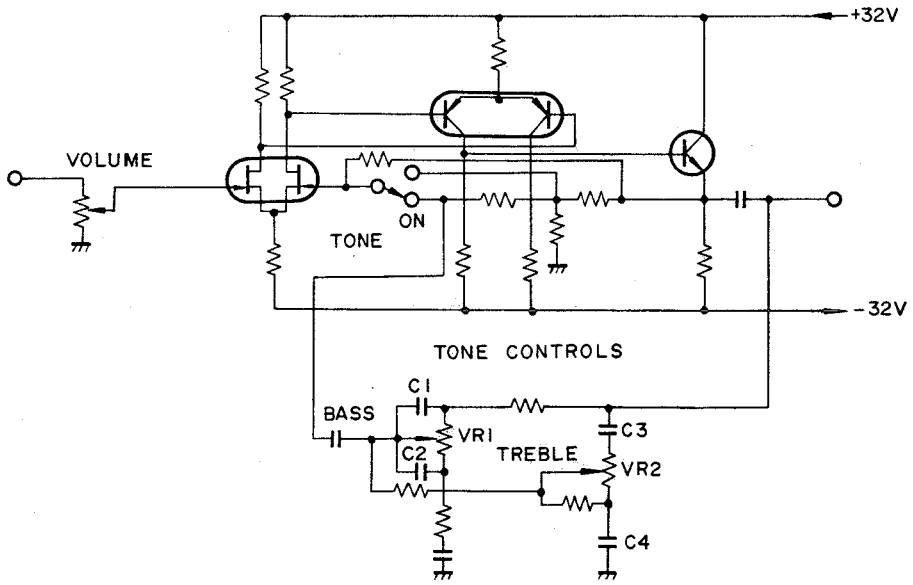

Fig. 5-2 Tone Control Circuit

5.2 POWER AMPLIFIER SECTION

Amplifier Circuit

The basic circuit arrangement of the power amplifier is shown in Fig. 5-3. The first stage is a differential amplifier comprising PNP twin transistor (Q_2), the load circuit of which is a current mirror employing an NPN twin transistor (Q_3). The current mirror provides push-pull operation in this stage, which serves to cancel even harmonics and further increase gain.

Q_1 in the input circuit absorbs outflow of base current from Q_2, and prevents the generation of a DC voltage. Because Q_1 follows any temperature drift in Q_2, temperature drift of the center point voltage is prevented.

The pre-drive stage (Q_4, Q_5) is a Darlington arrangement, the load circuit of which employs a constant-current source (D_1, Q_6) resulting a high voltage gain.

The power stage bias voltage is supplied by the NSA circuit. The NSA circuit provides non-switching operation in the power stage (refer to "NSA Circuit").

The power stage ($Q_7 - Q_{12}$) is a 2-stage Darlington arrangement, the last stage is parallel SEPP circuit employing an SL RET (Super Linearity Ring Emitter Transistor). The RET is a kind of IC consisting of a number of small transistors on a single chip, with each transistor being connected in parallel via an emitter resistor. This provides excellent high frequency characteristics comparable to those of a small-signal transistor. Furthermore, because there is no time constant in the NFB circuit in the low-frequency region, amplification is possible down to DC (DC inputs will be cut off, however, by the input coupling capacitor).

The circuit features described above provide an extremely wide power frequency range (80W + 80W, 10Hz to 20kHz, THD 0.005%, 8Ω).

Power Limiter

The power limiter is a high-speed protection circuit which operates to protect the power transistors from overcurrent conditions caused by load shorts, etc.

The circuit (Fig. 5-4), constitutes a Wheatstone bridge (Fig. 5-5), one arm of which is the load (R_L), which is arranged so that Q_1 (Q_2) is biased by the potential difference between the opposite corners of the bridge. As the value of R_L decreases, Q_1 (Q_2) start to conduct, thus holding down the drive voltage and controlling the magnitude of the current flowing in to the power transistors. Q_3 (Q_4) is link connected to Q_1 (Q_2) which provides sharp clipping characteristics.

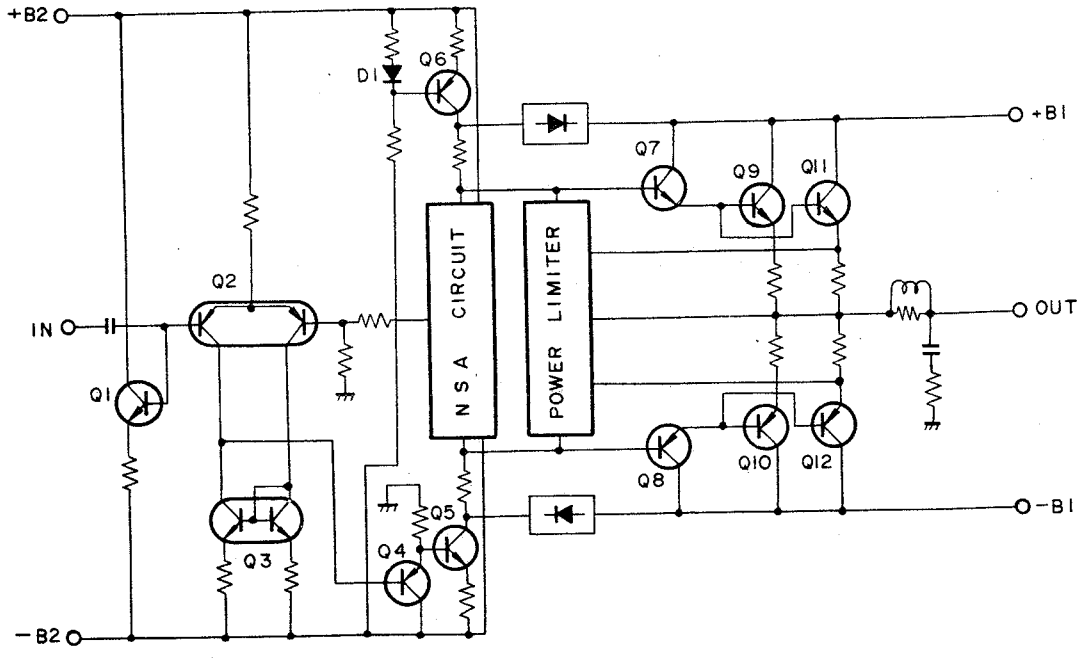

Fig. 5-3 Power amplifier circuit

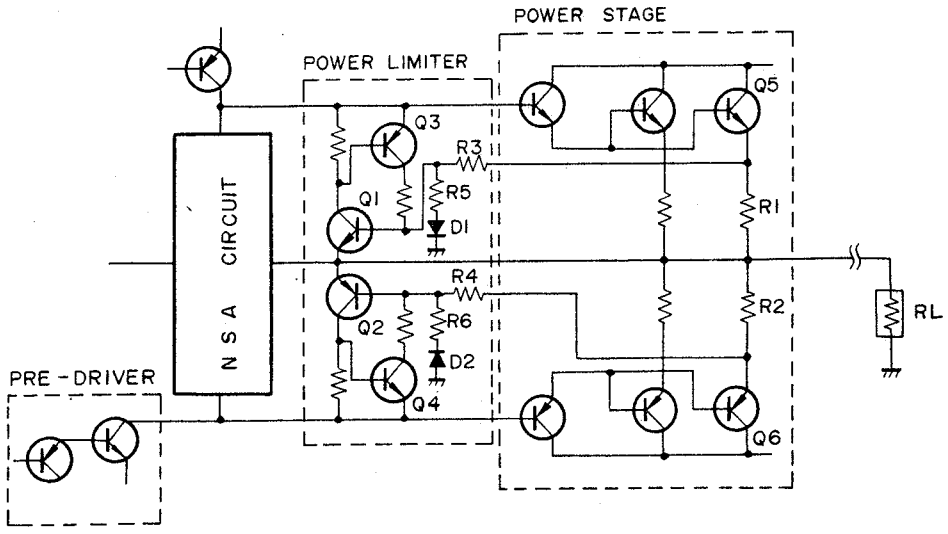

Fig. 5-4 Power Limiter Circuit

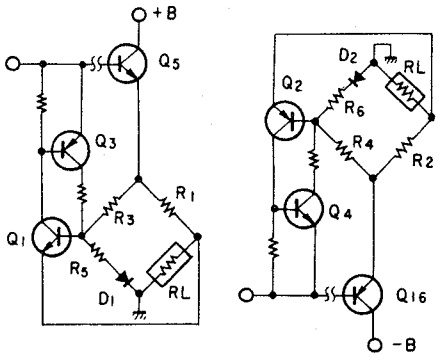

Fig. 5-5 Bridge Circuit

NSA (Non-Switching Amplifier) Circuit

By operating the power stage only within the active region (no possible cut-off) and with minimum idle current, the NSA circuit prevents the generation of switching distortion and reduces heat loss.

Operating Principle

Since idle current flows through normal class B SEPP power stages (see Fig. 5-6) when no signal is applied, the DC level is shifted by D and VR by a fixed amount (with the voltage across points P and R serving as a bias). The voltages across points P and Q, and Q and R at this time will be equal. When the positive portion of a signal is applied to this circuit, the power stage current on the NPN side is increased resulting in the voltage across points P and Q also being increased. However, since the voltage across points P and R is practically constant (see note), the voltage across points P and R (PNP power stage bias) will be decreased, resulting in the PNP power stage being cut off.

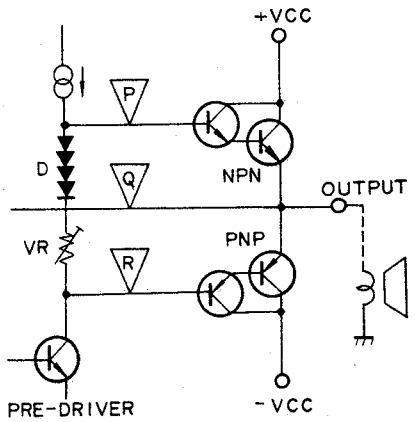

Fig. 5-6 Normal Power Stage

The NSA circuit increases the voltage across points P and R by the same amount as the voltage increase across points P and Q, thereby cancelling the voltage decrease across points Q and R, and preventing the PNP power stage from being cut off.

This NSA circuit is outlined in Fig. 5-7. When there is no signal applied to the circuit, Q_1 and Q_2 are almost cut off, while Q_3 and Q_4 will be on. The voltage across the collector and base of both of these transistors (Q_3 and Q_4) at this time may be disregarded. Consequently, with the power stage bias circuit consisting of 4 PN junctions formed by Q_3, D_3, and Q_4, and VR_1, this circuit is equivalent to the previous circuit shown in Fig. 5-6.

With R_1 and D_1 ensuring a constant flow of current, the base of Q_1 and point Q may be brought to the same level (see Fig. 5-8) on an AC basis (level fluctuations due to the signal) by a simple shift in DC level. Furthermore, Q_1 may be considered emitter-follower with R_3 as the emitter resistance.

When the voltage across points P and Q is increased by the positive portion of the signal applied to this circuit, it becomes the input signal of this emitter-follower (Q_1). Since the emitter-follower voltage gain is practically 1, a voltage more or less equal to that of the input signal (that is, the voltage increase across points P and Q) is produced at R_3. And the R_3 voltage is the voltage applied across the base and collector of Q_3 which forms part of the power stage bias circuit. So the bias voltage applied to Q_3 will be in excess by the same amount that the voltage across points P and Q is increased (by positive portion of the signal) above the voltage level when no signal is being applied. Consequently, the increase in voltage across points P and Q cancels the decrease in voltage across points Q and R, thereby maintaining the idle current without cutting the PNP power stage off (noting that there actually is a slight decrease in current). For the negative portions of the signal, Q_3 and Q_4 are operated in the same manner, thereby preventing the NPN power stage from being cut off.

In other words, the NSA circuit acts to prevent any "power stage cut-off" signals from being applied to the power stage (see Fig. 5-9).

Note:
The pre-driver current actually decreases when the positive portion of the signal is applied, resulting in a decrease in the voltage across points P and R.

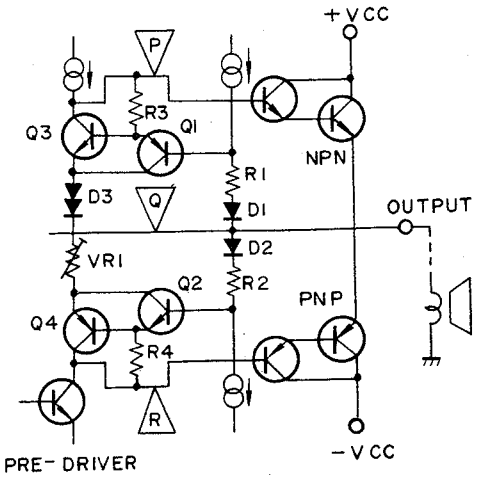

Fig. 5-7 NSA Circuit

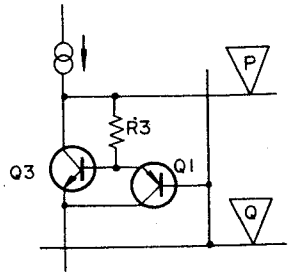

Fig. 5-8 NSA Circuit

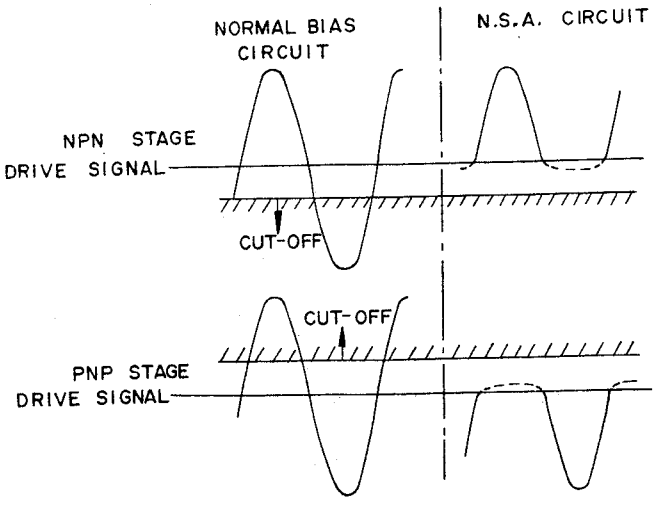

Fig. 5-9 Driving Signal of Power Stage

5.3 INDICATOR CIRCUIT

The SA-8800 output power and function indicators feature fluorescent indicator tube (FL tube). In this tube, thermionic emissions from the cathode are accelerated into the fluorescent substance of the segmental anodes, resulting in the emission of light. This tube is used to indicate numerals, letters, and other symbols.

An outline of the FL tube drive circuit is shown in Fig. 5-10. The output circuit signal is first passed through a low-pass filter and a compressor circuit before being applied to pin no.6 (4) of the IC (TA7318P-A). The compressor circuit makes use of the non-linearity of the rising portion of the diode's Vd — Id characteristics to contract the signal dynamic range by 20dB. The IC contains a detector circuit, compressor (40dB), and peak hold circuit for both left and right channels. The dynamic range of the signal is thus contracted by 60dB to obtain a "peak held" DC voltage.

The output power indicator segments of the FL tube are driven by the HA12010 ICs (one for each channel) equipped with 12 pairs of differential amplifiers. These amplifiers are biased at increasing levels, so each amplifier will commence to operate separately as the input level increases. And since these amplifiers apply the voltages to the output power indicator segments, each successive segment will light up in turn as the input level rises.

The function indicators are lit up as a result of a voltage being applied to the corresponding function indicator segment according to the selected positions of the FUNCTION and TAPE MONITOR switches.

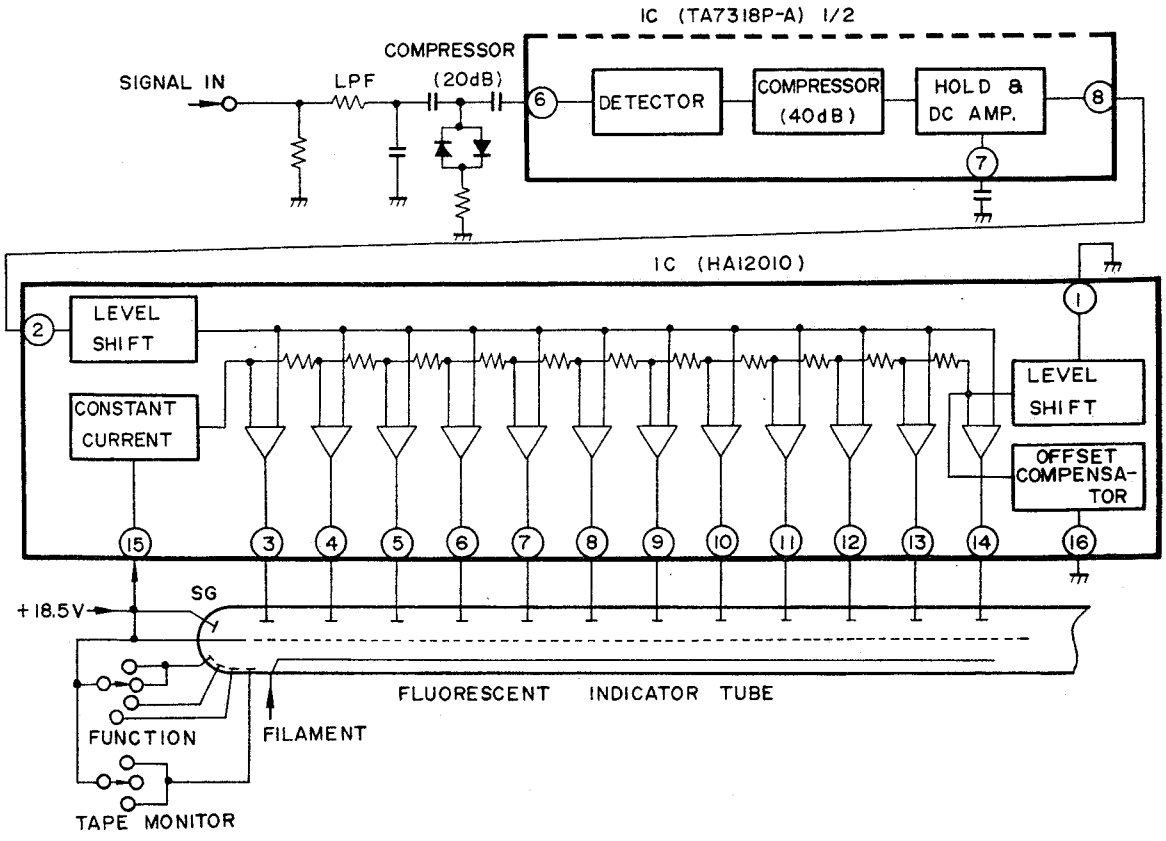

Fig. 5-10 Indicator Circuit

5.4 PROTECTION CIRCUIT

The purpose of this circuit is to protect the speakers. The relay in the output circuit is automatically opened in any of the following cases:

1. During the "transient operations" when the power supply is turned on and off.
2. Upon detection of a DC voltage in the output circuit, caused by component failure or accident.

Muting Operation when Power Supply is Turned On and Off

With reference to Fig. 5-11 when the power supply is turned on, Q_1 turns off due to $-B_1$ (The time constant of the $-B_1$ circuit is very small.). If there is no input (DC) on Q_3 and Q_4, they will be off, and the timing capacitor C_{24} charges up through R_7 and R_{12}, and thus Q_2 turns on. When Q_2 conducts, the relay operates, and the output muting on the power amplifier will be removed.

When the power supply is turned off, $-B_1$ will abruptly decay, and Q_1 will conduct owing to the residual component of $+B_1$. As a result, C_{24} will rapidly discharge, Q_2 will cease to conduct, whereupon the relay will become de-energized and restore muting.

DC Voltage Detector

The output circuit is connected to the Q_3 emitter and Q_4 base via a low-pass filter (R_{13}, C_{25}). Any DC voltages appearing the output circuit of the power amplifier, it will be applied to the Q_3 emitter and the Q_4 base. If the voltage is positive, Q_4 turns on. C_{24} will rapidly discharge. If the voltage is positive, Q_4 turns on. C_{24} will rapidly discharge. As consequence, Q_2 will turn on and the relay will become de-energized, thus causing the output circuit to open.

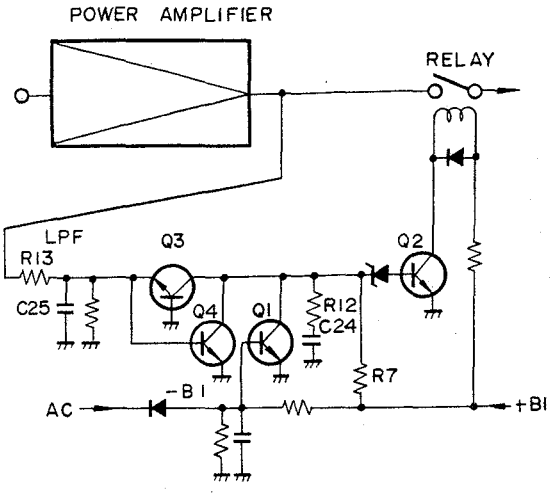

Fig. 5-11 Protection Circuit

6. DISASSEMBLY

Wooden Cover

Remove the two screws on each side of the wooden cover.

Bottom Plate

Remove the nine screws to detach the bottom plate.

Front Panel

Loosen the set screws of VOLUME knob with a hexagonal wrench. Remove all the knobs by pulling. Remove the three screws from the top edge of the front panel. Remove the two nuts from the control shafts.

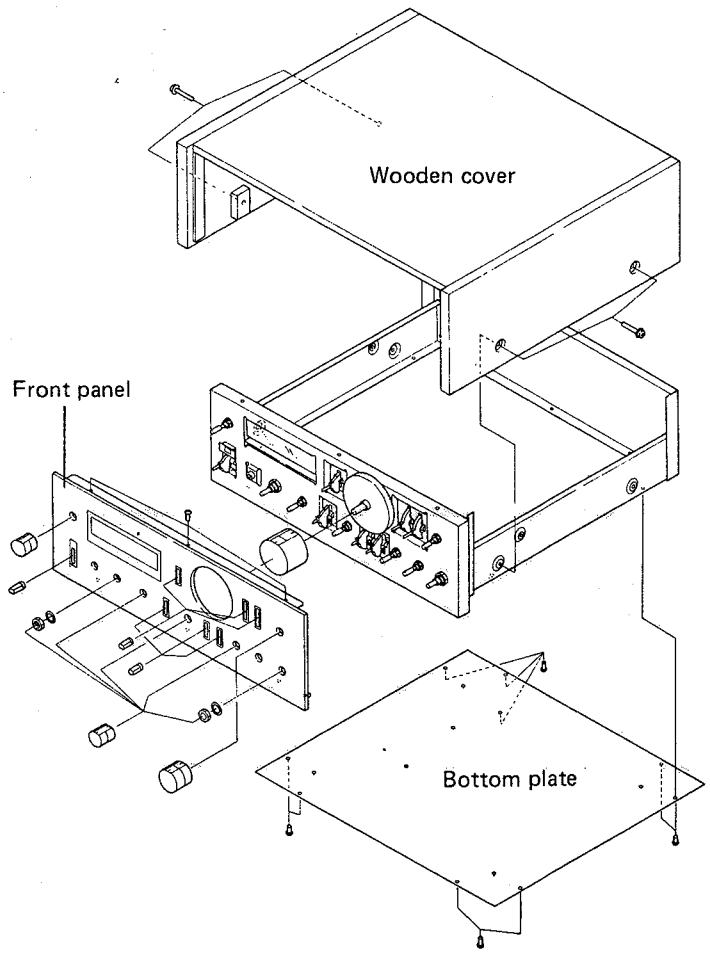

7. PARTS LOCATION

NOTE:

- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

Front Panel View

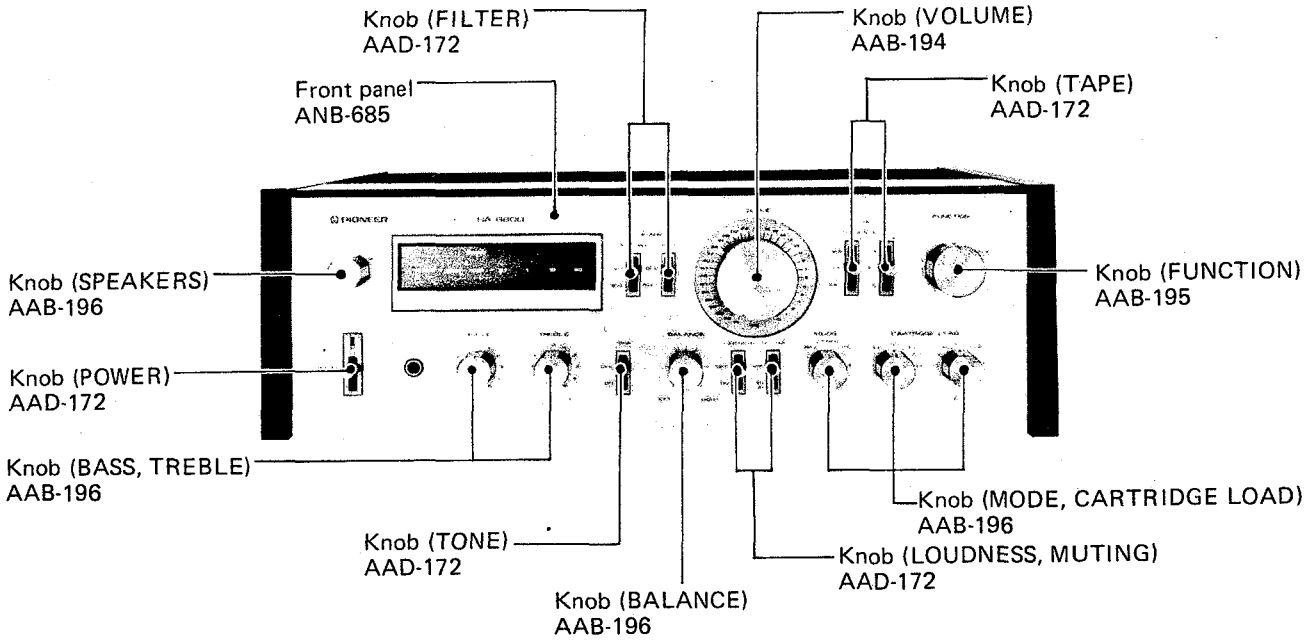

Front View with Panel Removed

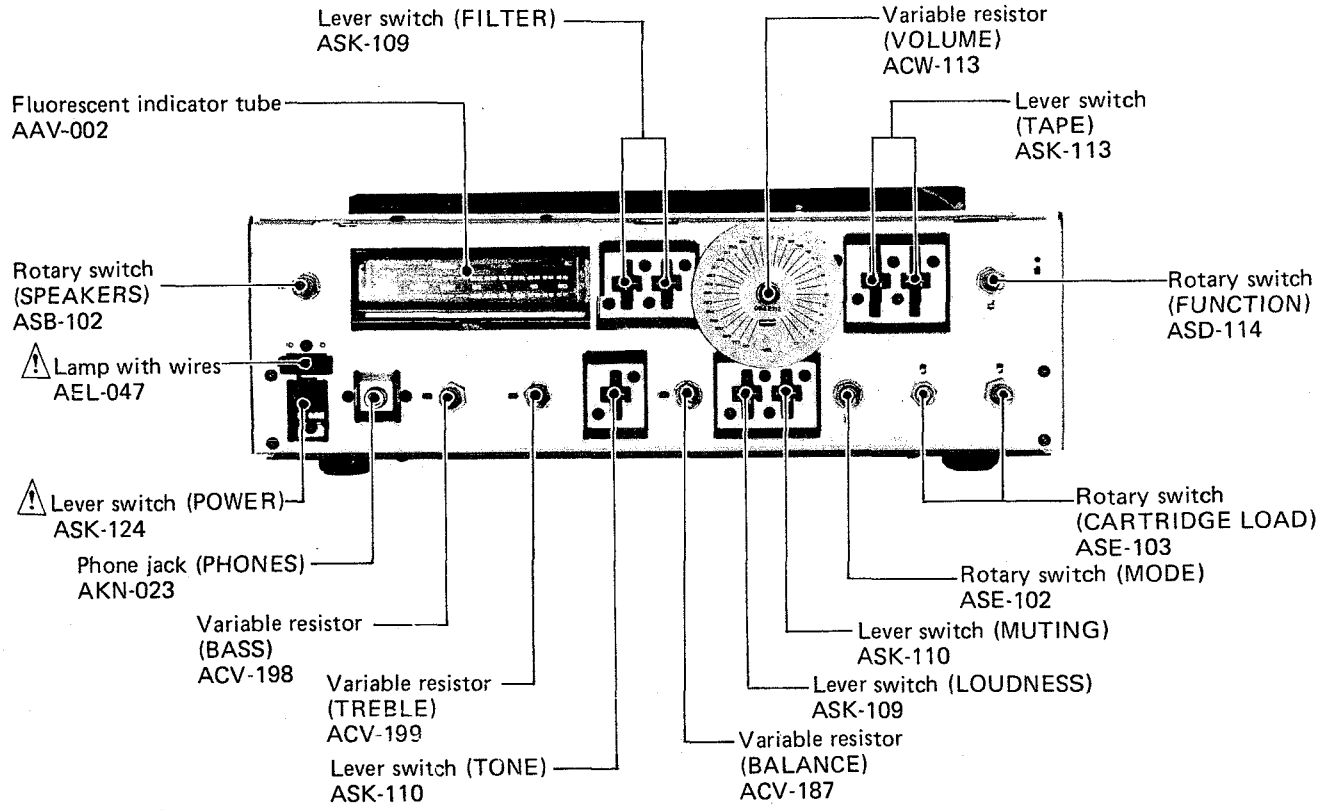

Top View

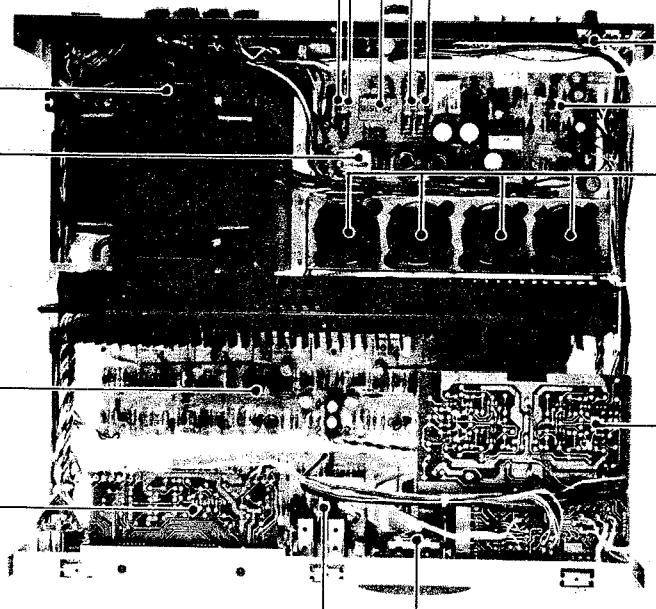

Bottom View

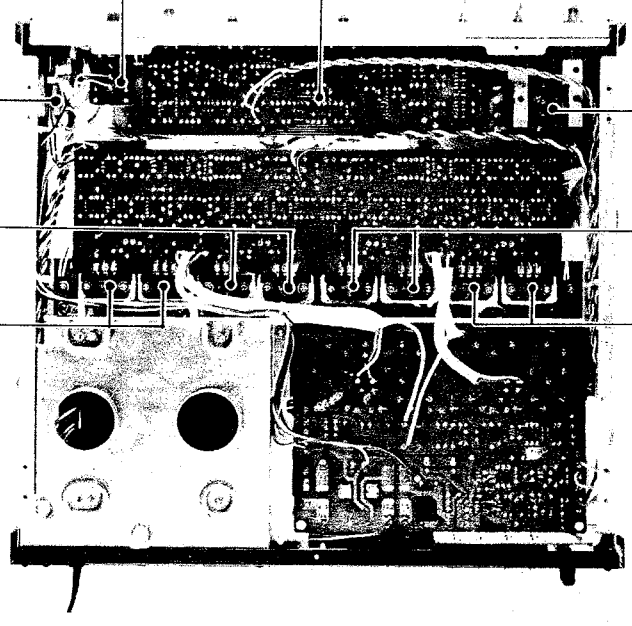

Rear Panel View

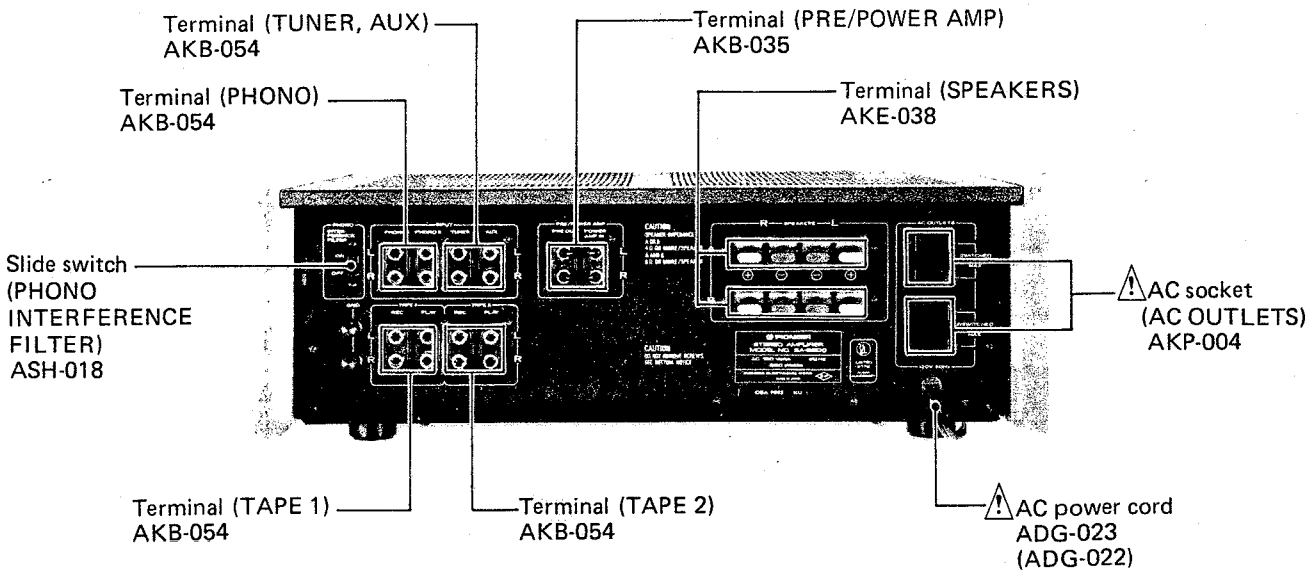

8. PACKING

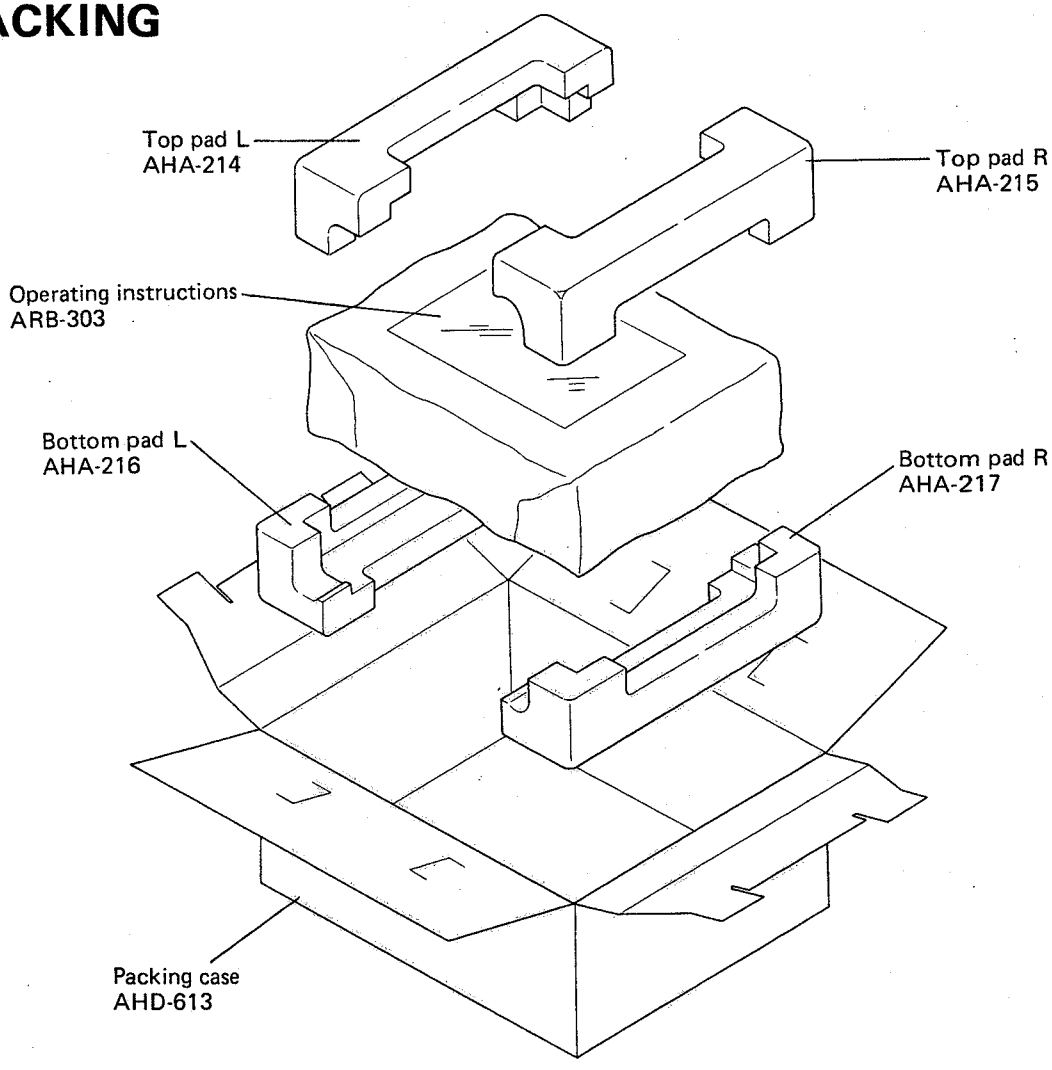

9. ADJUSTMENTS

Power Amplifier

Turn VR_7, VR_9 (L) and VR_8, VR_{10} (R) fully around in the counter-clockwise direction, but set VR_5 (L) and VR_6 (R) to the center positions. Without any load or input signal, turn the POWER switch ON.

DC Balance

1. Adjust VR_5 (L) for 0V (to within ±30mV) between terminal No.15 and ground.
2. Adjust VR_6 (R) for 0V (to within ±30mV) between terminal No.20 and ground.

Idle Current

1. Adjust VR_7 (L) for 56mV between terminals TP_1 (+) and TP_3 (−). The potential difference between terminals TP_2 (+) and TP_4 (−) should register about 56mV at this time.
2. Adjust VR_8 (R) for 56mV between terminals TP_7 (+) and TP_5 (−). The potential difference between terminals TP_8 (+) and TP_6 (−) should register about 56mV at this time.
3. Adjust VR_9 (L) for 70mV between terminals TP_1 (+) and TP_3 (−). The potential difference between terminals TP_2 (+) and TP_4 (−) should register about 70mV at this time.
4. Adjust VR_{10} (R) for 70mV between terminals TP_7 (+) and TP_5 (−). The potential difference between terminals TP_8 (+) and TP_6 (−) should register about 70mV at this time.

Output Power Indicator Calibration

1. Apply a 1kHz signal to the POWER AMP IN terminals (or any other input power amplifier input terminals).
2. Adjust the level of this input signal so that the voltage on the output terminals (SPEAKERS) read 8.9V (AC).
3. Adjust VR_1 (L) and VR_2 (R) so that the output power indicator read 10 watts.

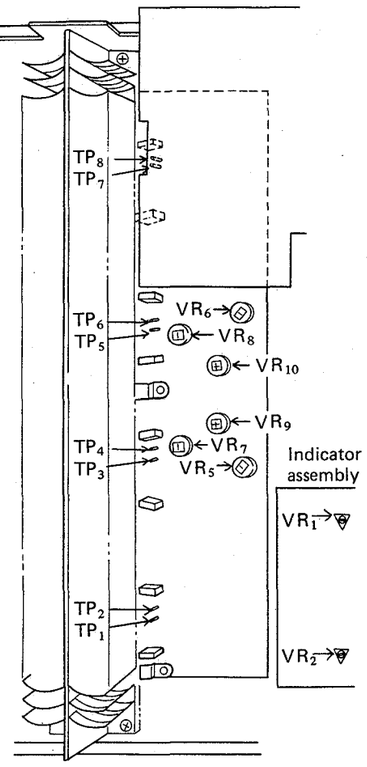

10. EXPLODED VIEW

NOTES:
- ☐ *marked parts cannot be supplied.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

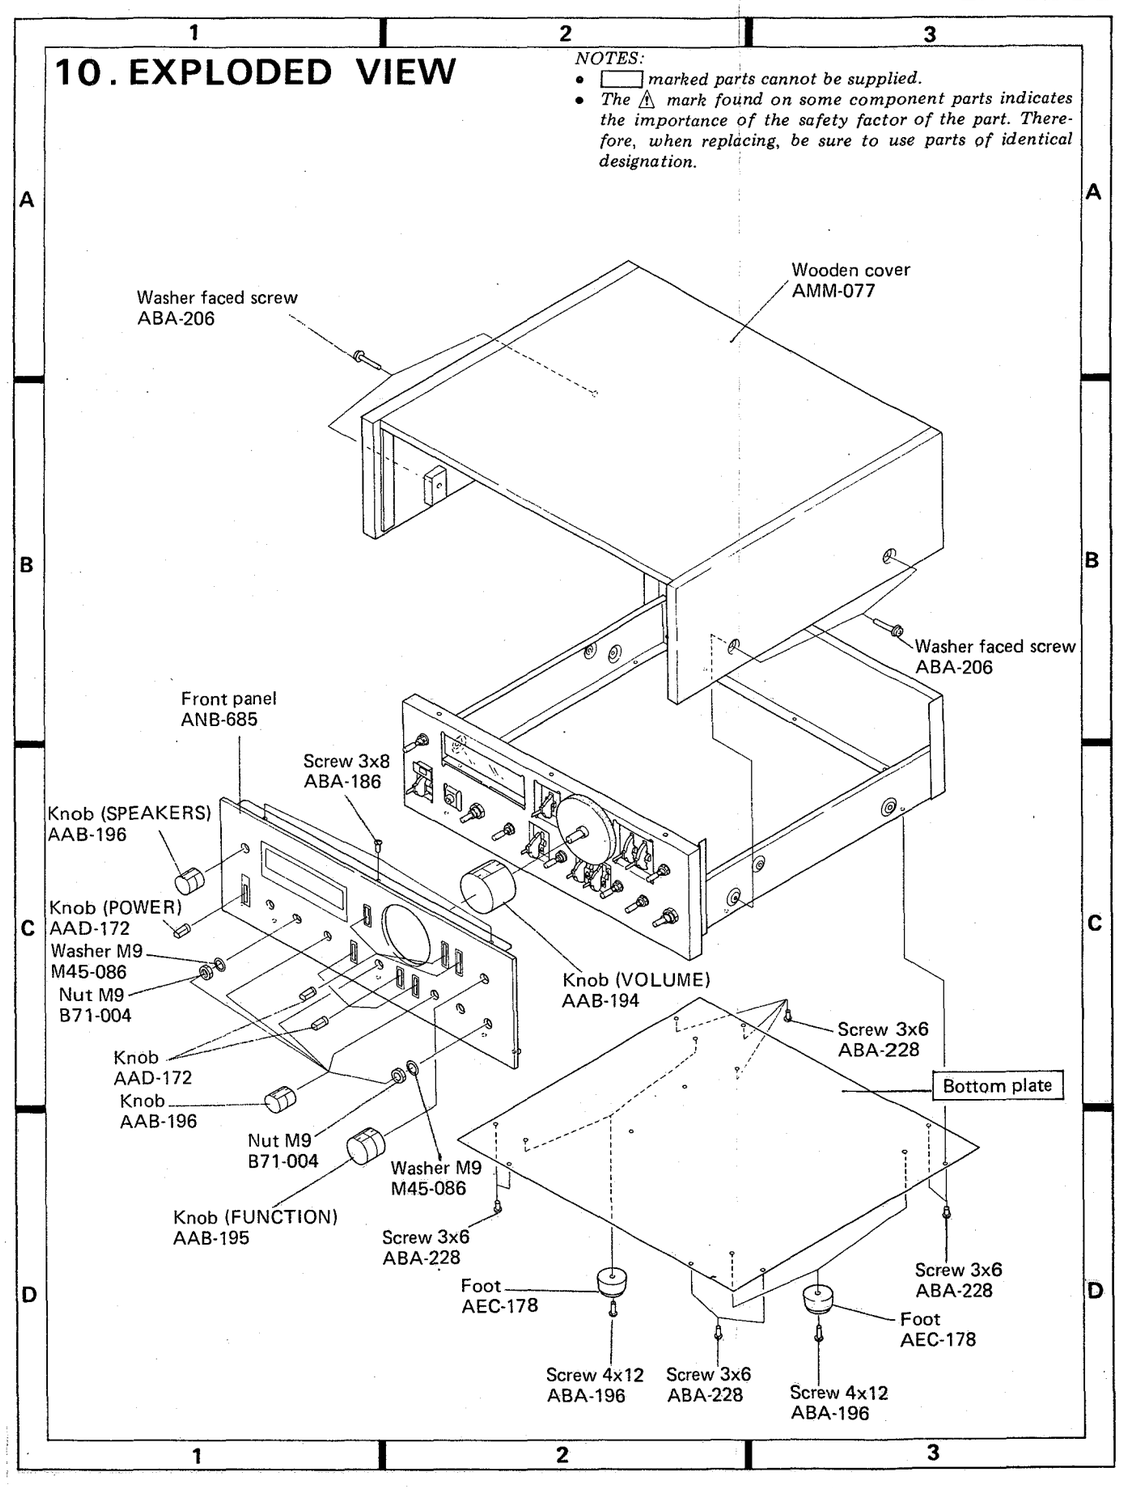

NOTES:

- ▭ *marked parts cannot be supplied.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

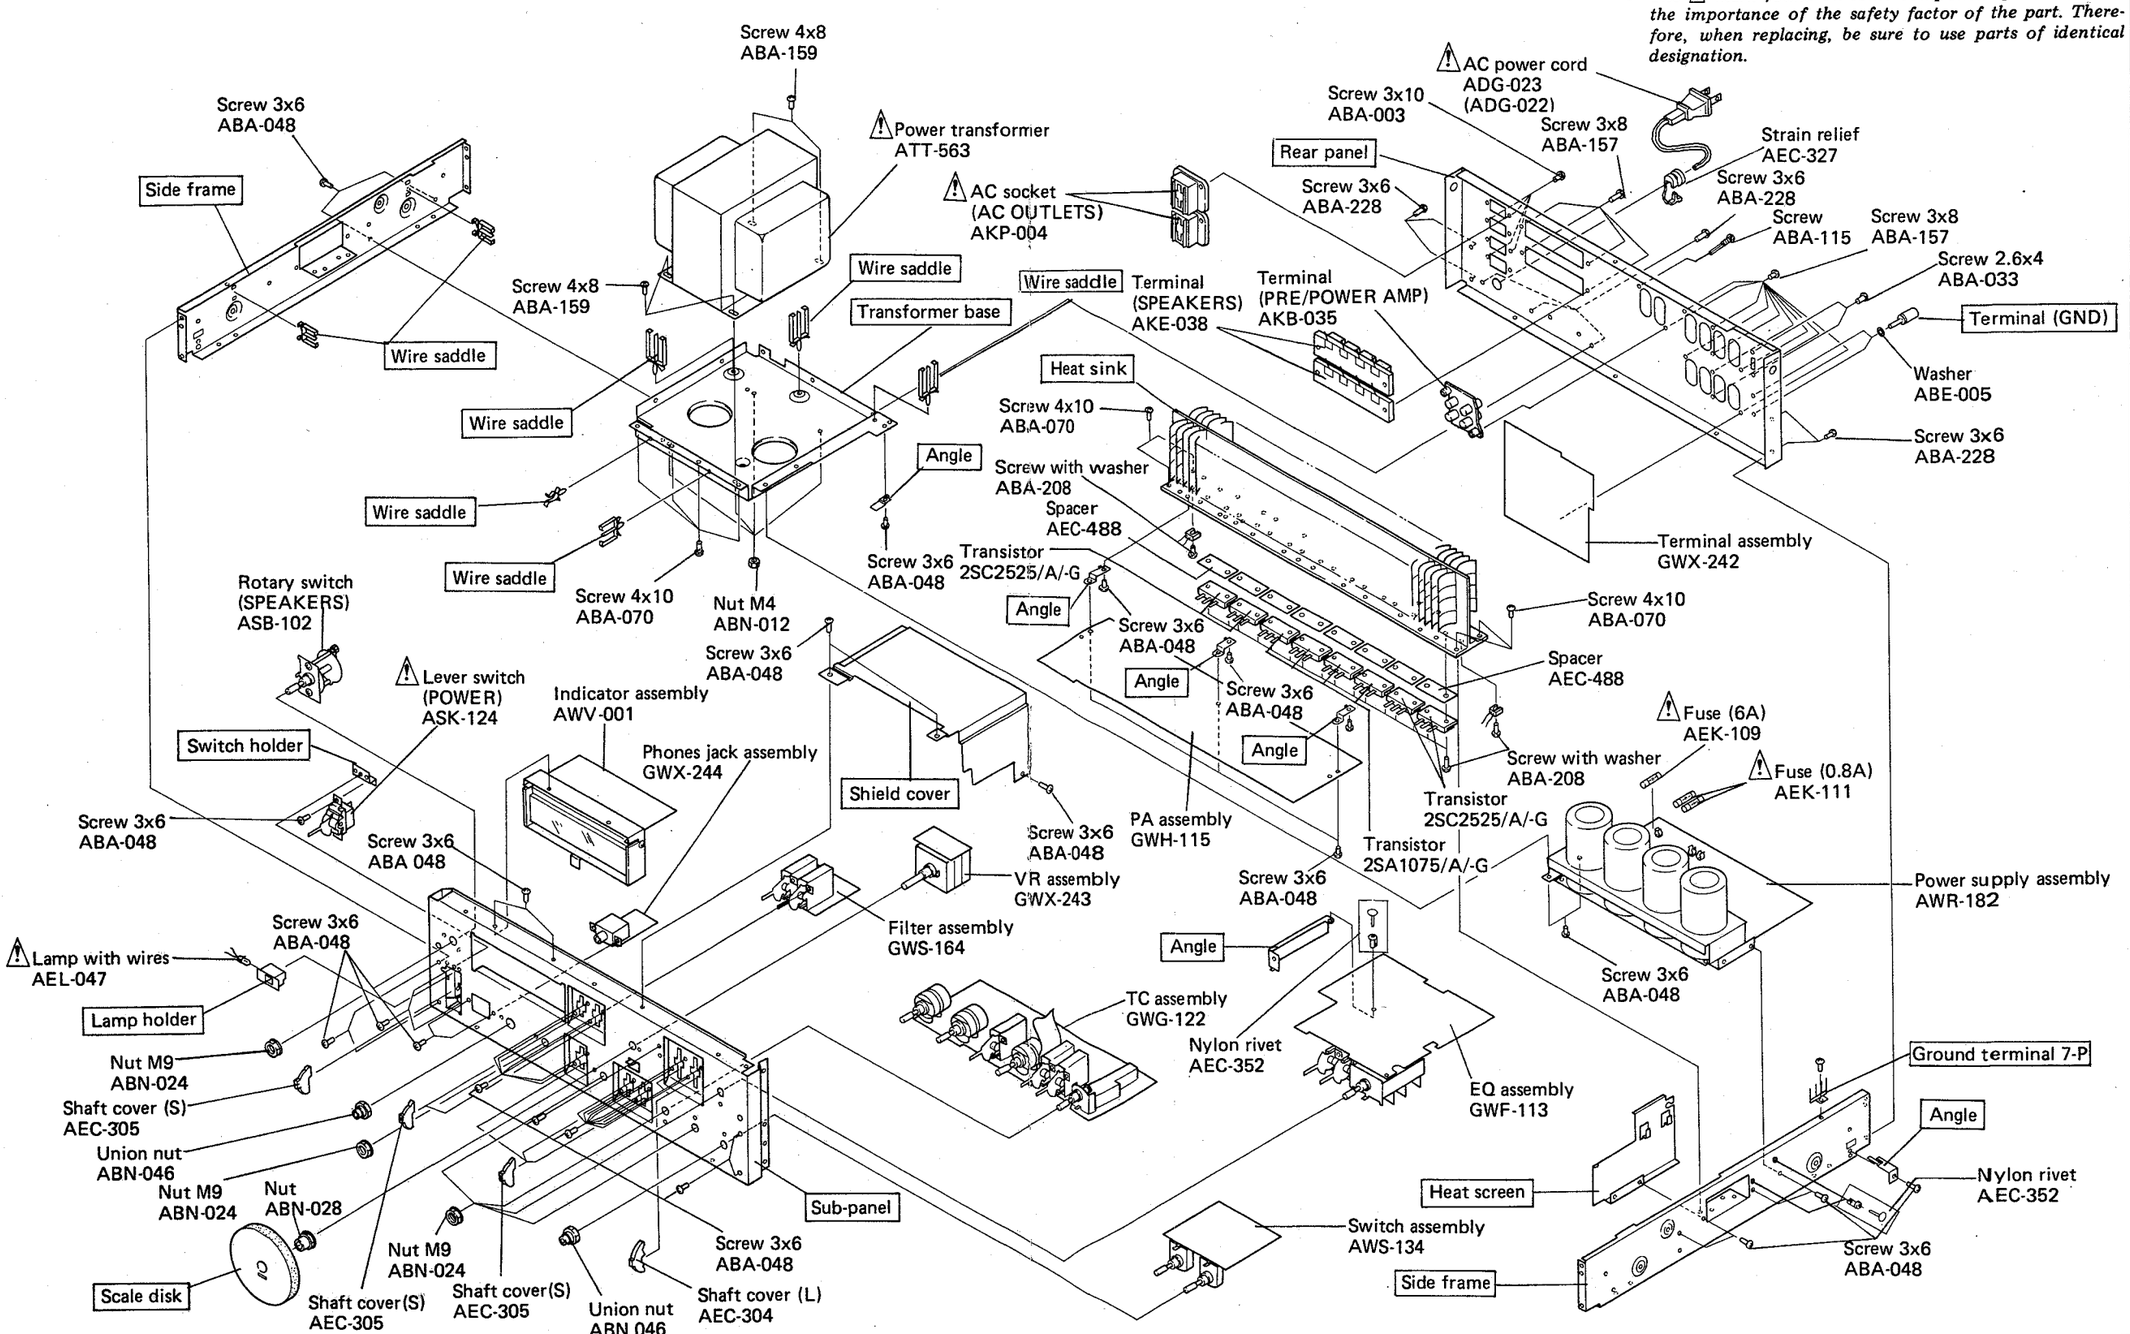

11. SCHEMATIC DIAGRAMS, P.C. BOARD PATTERNS AND PARTS LIST

NOTES:

- *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

  Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω	*56 × 10¹*	*561*	*RD¼PS 5 6 1 J*
47kΩ	*47 × 10³*	*473*	*RD¼PS 4 7 3 J*
0.5Ω	*0R5*		*RN2H 0 R 5 K*
1Ω	*010*		*RSIP 0 1 0 K*

  Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ	*562 × 10¹*	*5621*	*RN¼SR 5 6 2 1 F*

- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

11.1 MISCELLANEA

Miscellaneous Parts

P. C. BOARD ASSEMBLIES

Part No.	Description
AWV-001	Indicator assembly
AWS-134	Switch assembly
AWR-182	Power supply assembly
GWH-115	PA assembly
GWG-122	TC assembly
GWS-164	Filter assembly
GWX-243	VR assembly
GWX-244	Phones jack assembly
GWF-113	EQ assembly
GWX-242	Terminal assembly

LAMP AND FUSES

Part No.	Symbol & Description	
⚠AEL-047	PL1	Lamp with wires
⚠AEK-109	FU1	Fuse (6A)
⚠AEK-111	FU2, FU3	Fuse (0.8A)

SEMICONDUCTORS

Part No.	Symbol & Description
2SC2525/A/-G	Q1–Q4
2SA1075/A/-G	Q5–Q8

SWITCHES

Part No.	Symbol & Description	
ASB-102	S13	Rotary (SPEAKERS)
⚠ASK-124	S14	Lever (POWER)

CAPACITORS

Part No.	Symbol & Description		
⚠ACG-001	C1	Ceramic	0.01/250V
CKDYF 473Z 50	C2, C4		
CCDSL 221K 50	C5, C6		

OTHERS

Part No.	Symbol & Description	
⚠ATT-563	T1	Power transformer
⚠ADG-023		AC power cord
⚠(ADG-022)		
⚠AKP-004		AC socket (AC OUTLETS)
AKE-038		Terminal (SPEAKERS)
AKB-035		Terminal (PRE/POWER AMP)

List of Changed Parts for Factory Modification

List of changed parts information will be furnished whenever necessary and you are requested to amend parts number in this parts list.

Symbol	Part No.	Description

11.2 SCHEMATIC DIAGRAM

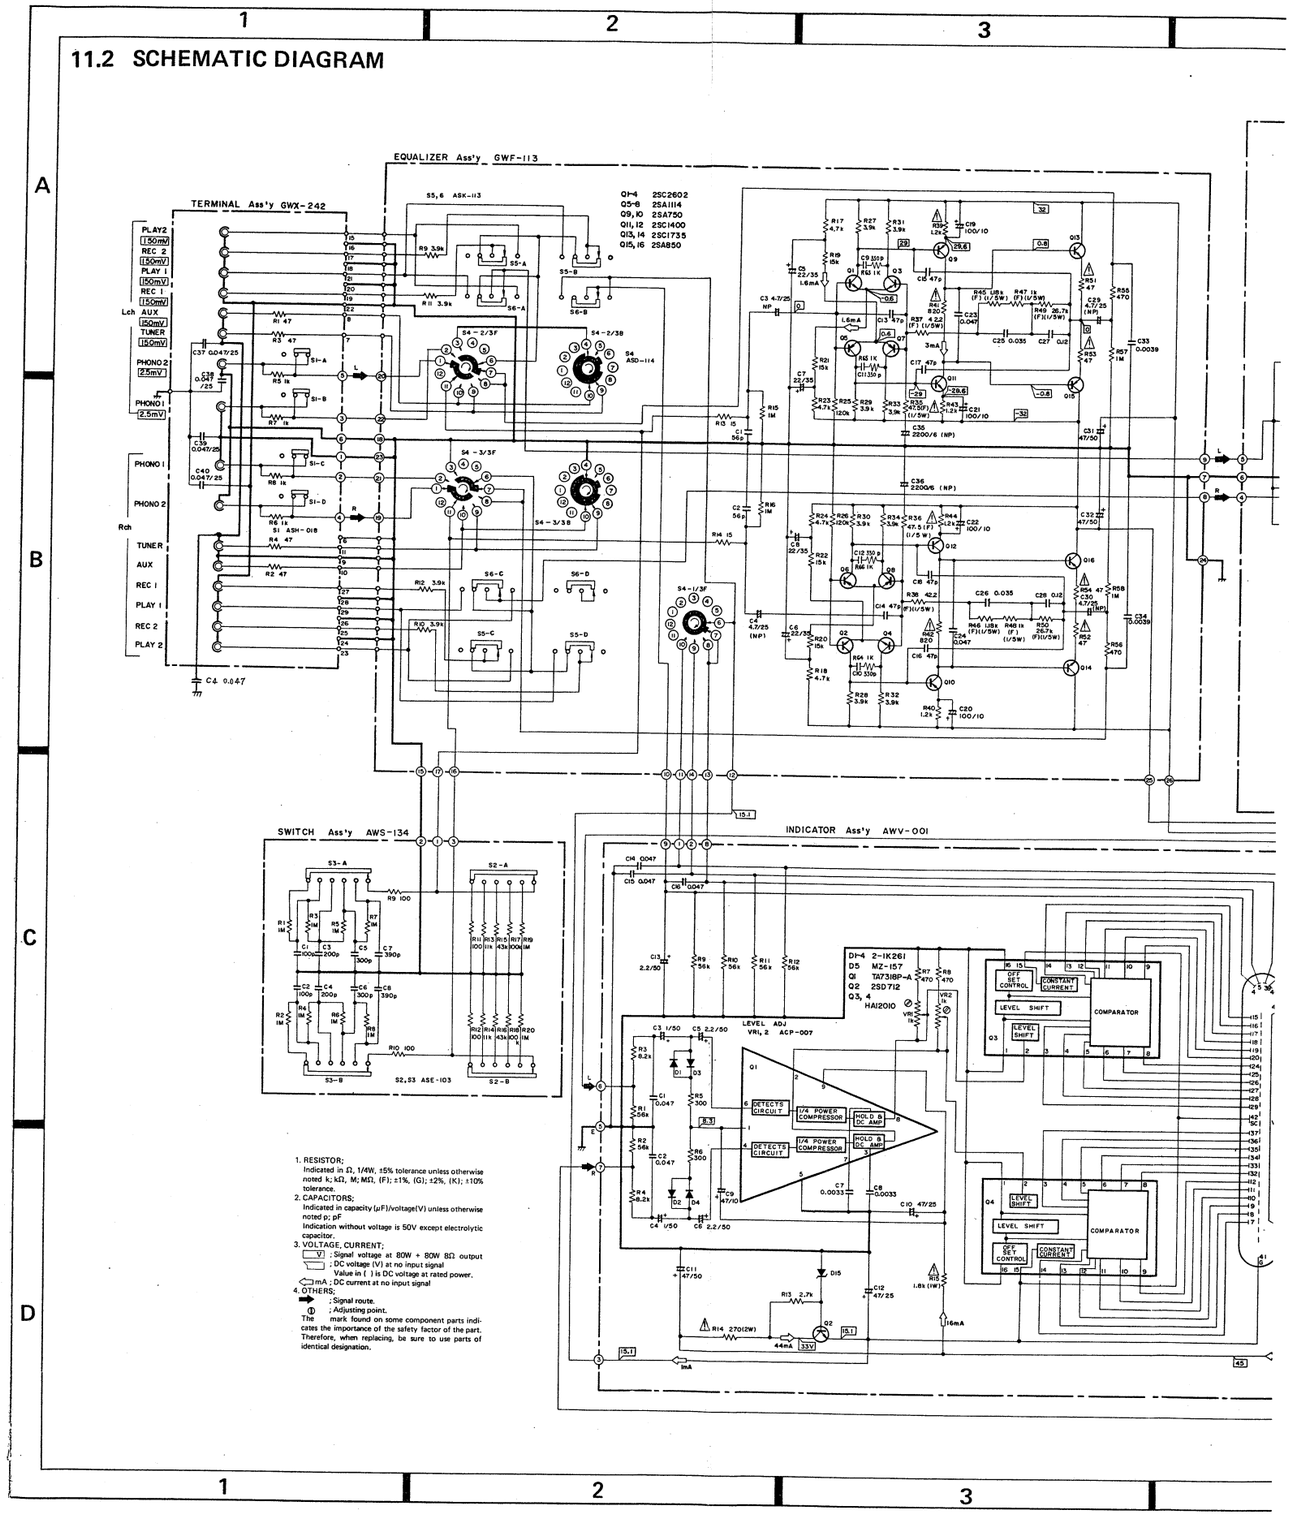
EQUALIZER Ass'y GWF-113
TERMINAL Ass'y GWX-242
SWITCH Ass'y AWS-134
INDICATOR Ass'y AWV-001
Q1-4 2SC2602
Q5-8 2SA1114
Q9, 10 2SA750
Q11, 12 2SC1400
Q13, 14 2SC1735
Q15, 16 2SA850
D1-4 2-1K261
D5 MZ-157
CI TA7318P-A
Q2 2SD712
Q3, 4 HAI2010
LEVEL ADJ VR1, 2 ACP-007
1. RESISTOR;
Indicated in Ω, 1/4W, ±5% tolerance unless otherwise noted k; kΩ, M; MΩ, (F); ±1%, (G); ±2%, (K); ±10% tolerance.
2. CAPACITORS;
Indicated in capacity (μF)/voltage(V) unless otherwise noted p; pF
Indication without voltage is 50V except electrolytic capacitor.
3. VOLTAGE, CURRENT;
V ; Signal voltage at 80W + 80W 8Ω output
; DC voltage (V) at no input signal
Value in ( ) is DC voltage at rated power.
mA ; DC current at no input signal
4. OTHERS;
; Signal route.
; Adjusting point.
The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

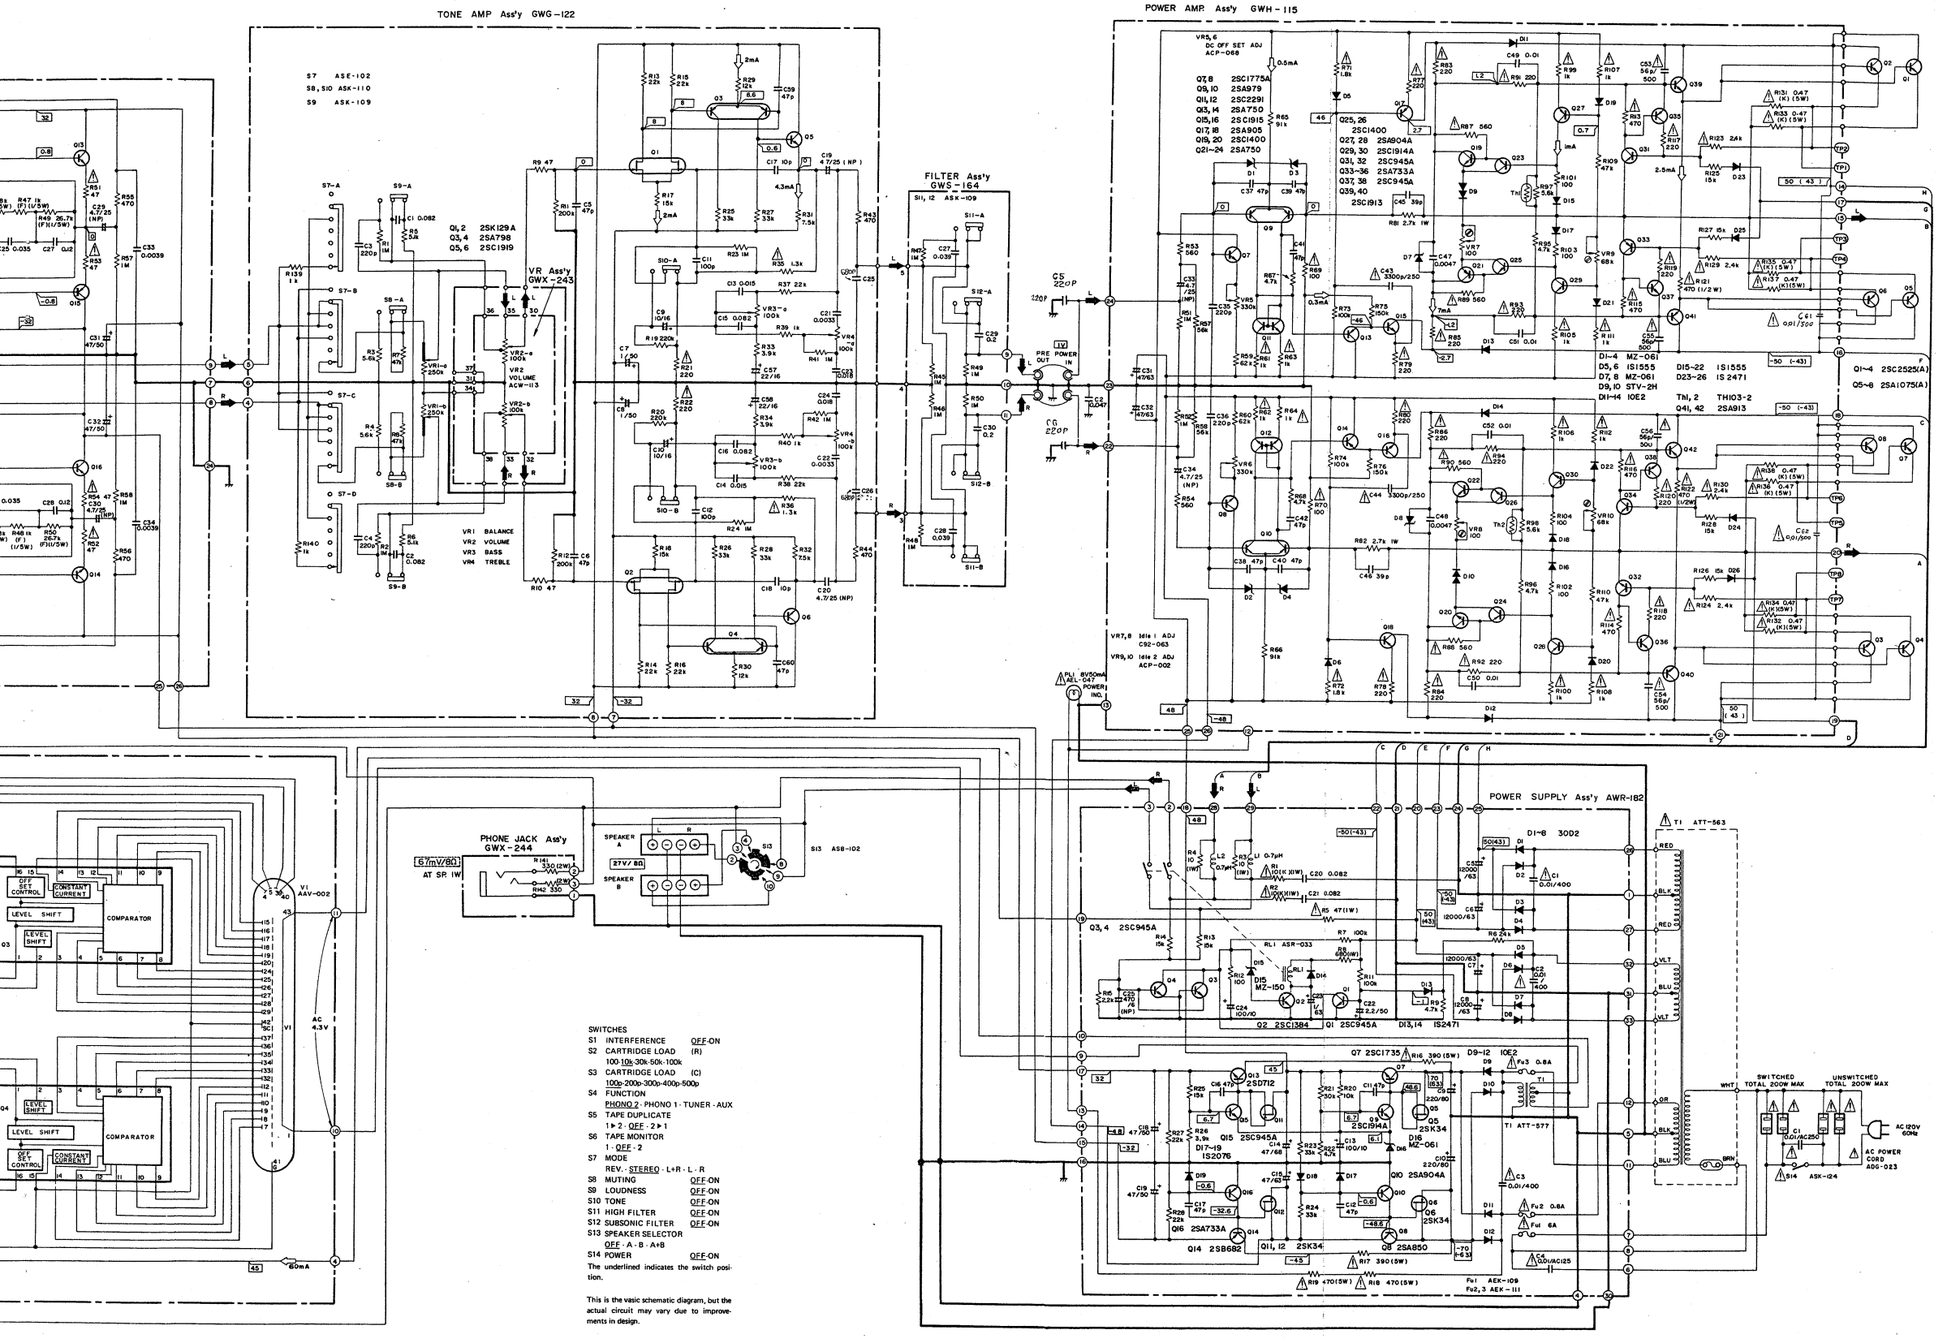

External Appearance of Transistors and ICs

2SA904A 2SC1919
2SA1114 2SC2602
2SC1914A

2SA733A 2SC1400
2SA750 2SC1775A
2SC945A



2SA850 2SC1735
2SA905 2SC1915



2SA913
2SC1913



2SB682
2SD712



2SA798
2SA979



2SK129A



2SC2291



2SC1384



2SK34



TA7318P

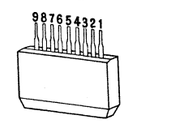

HA12010



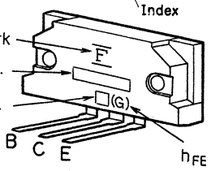

2SA1075/A/-G
2SC2525/A/-G

11.3 P.C. BOARDS CONNECTION DIAGRAM

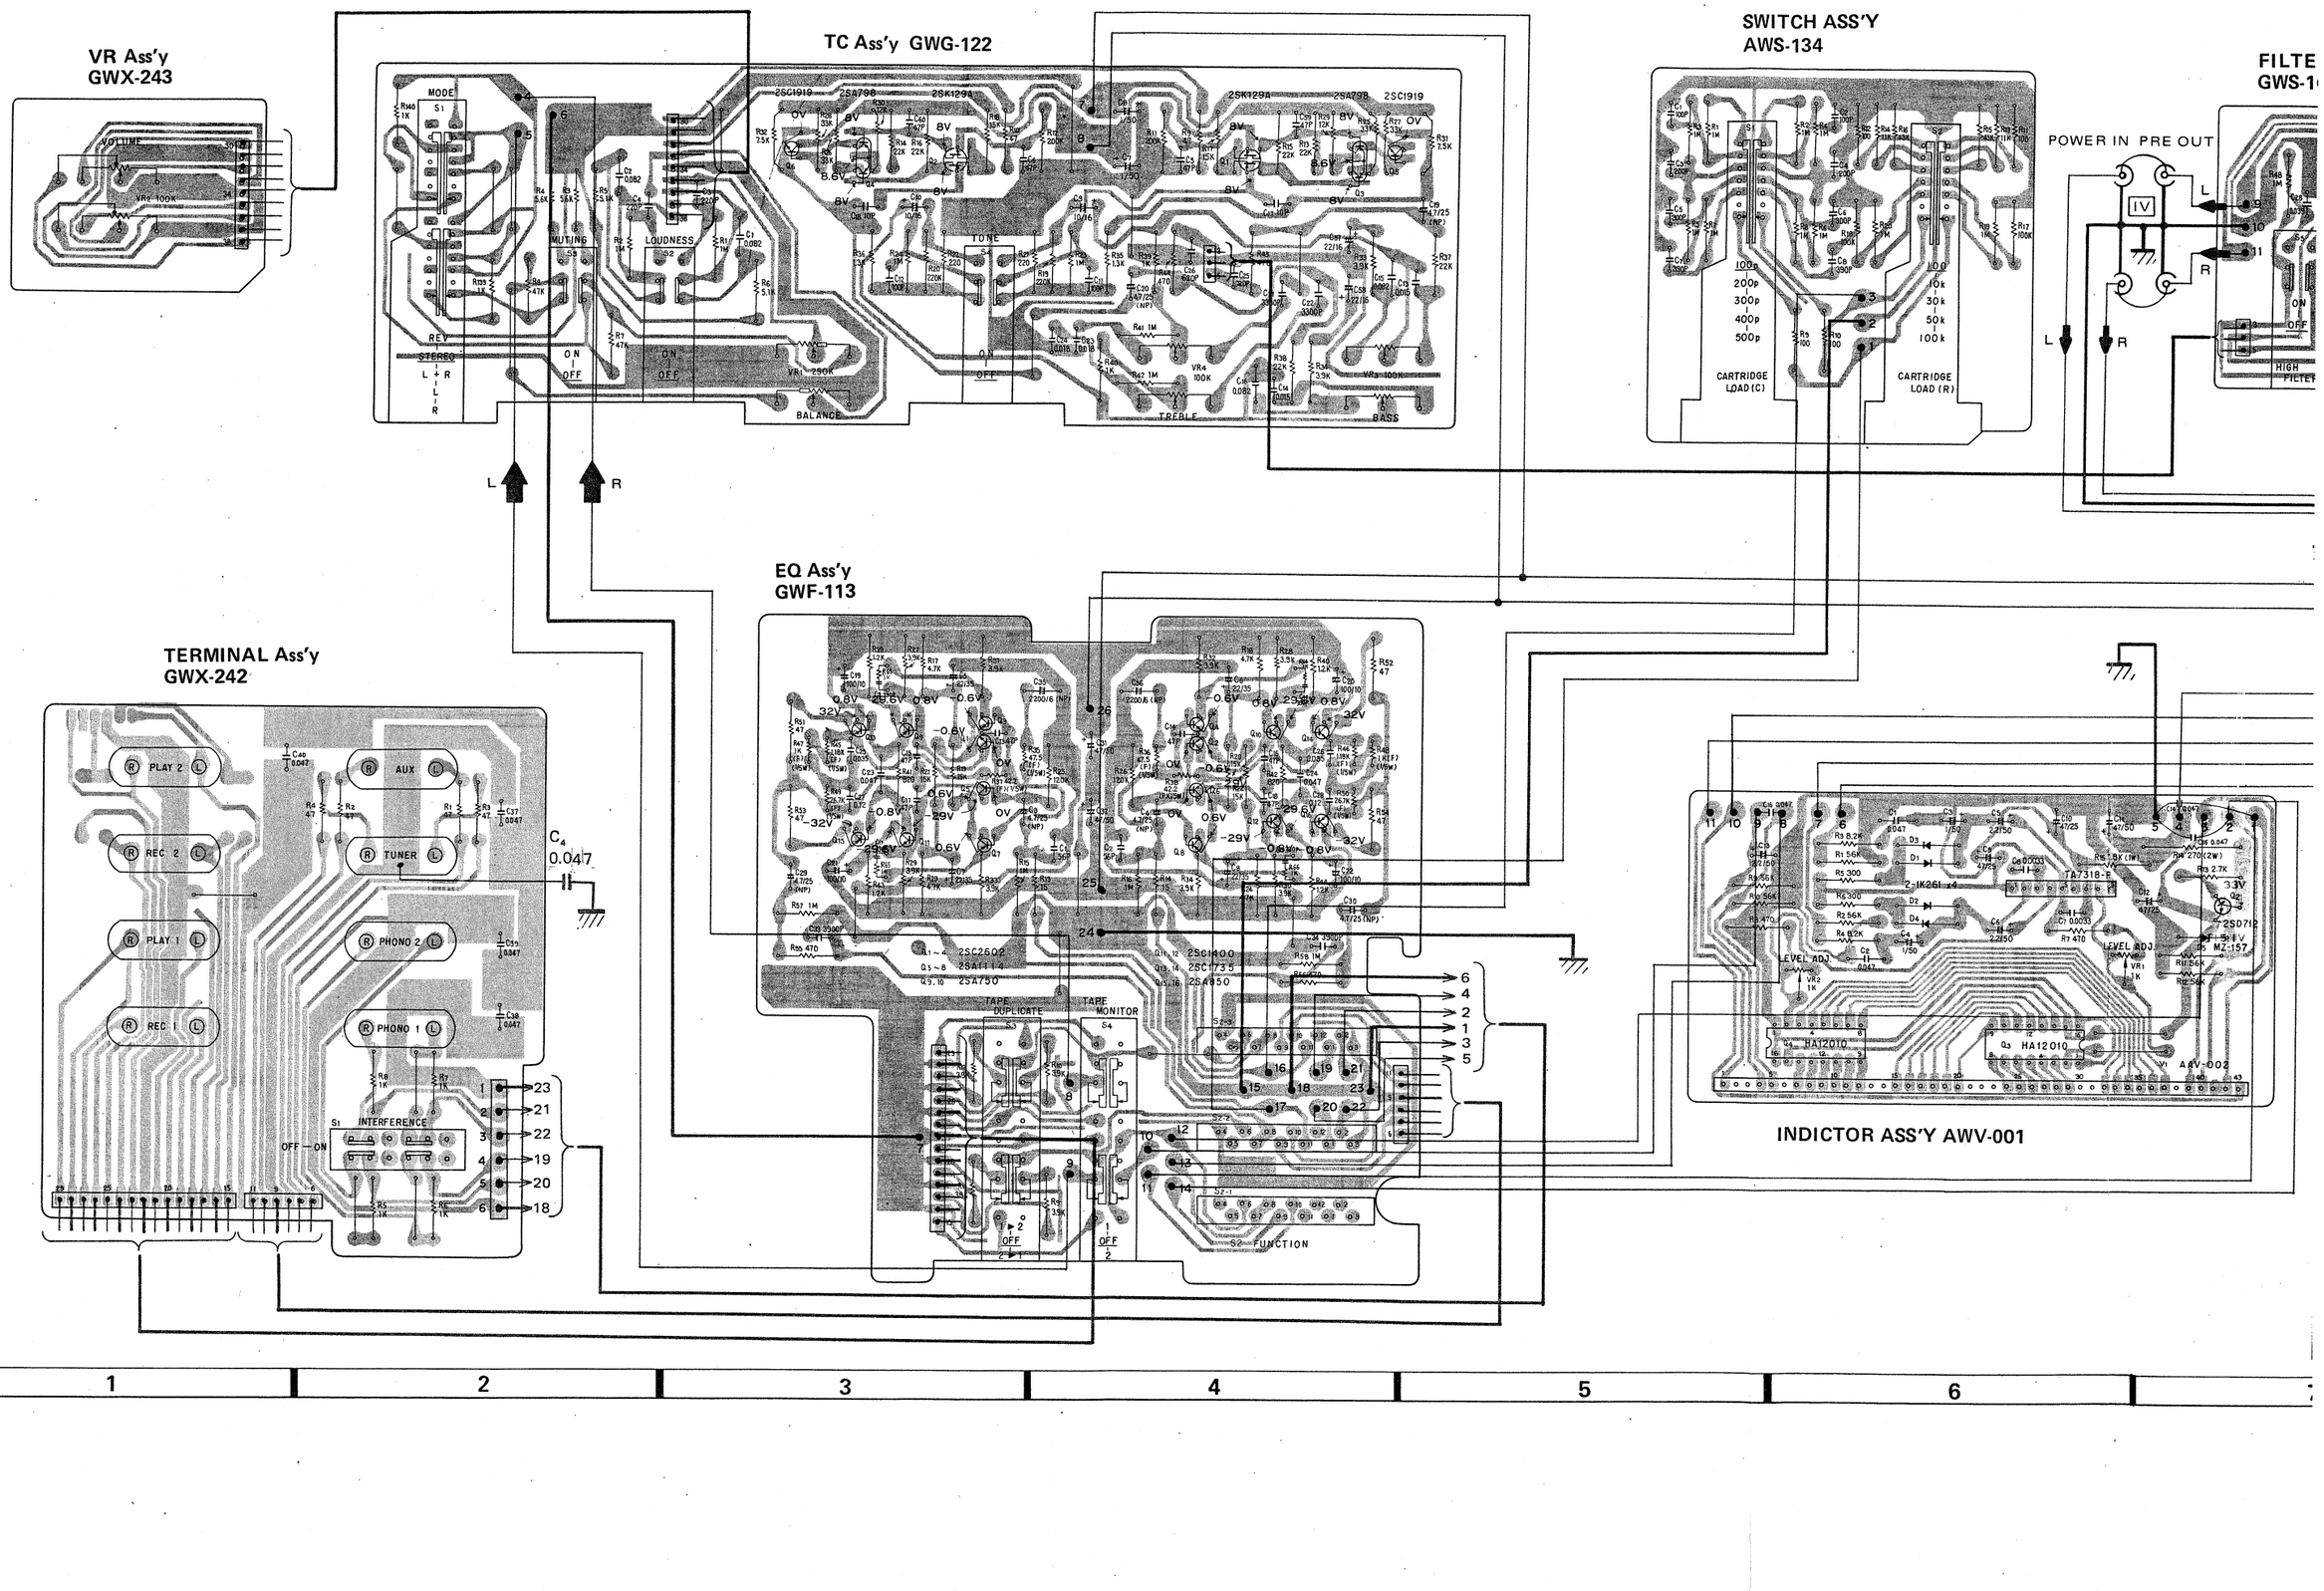

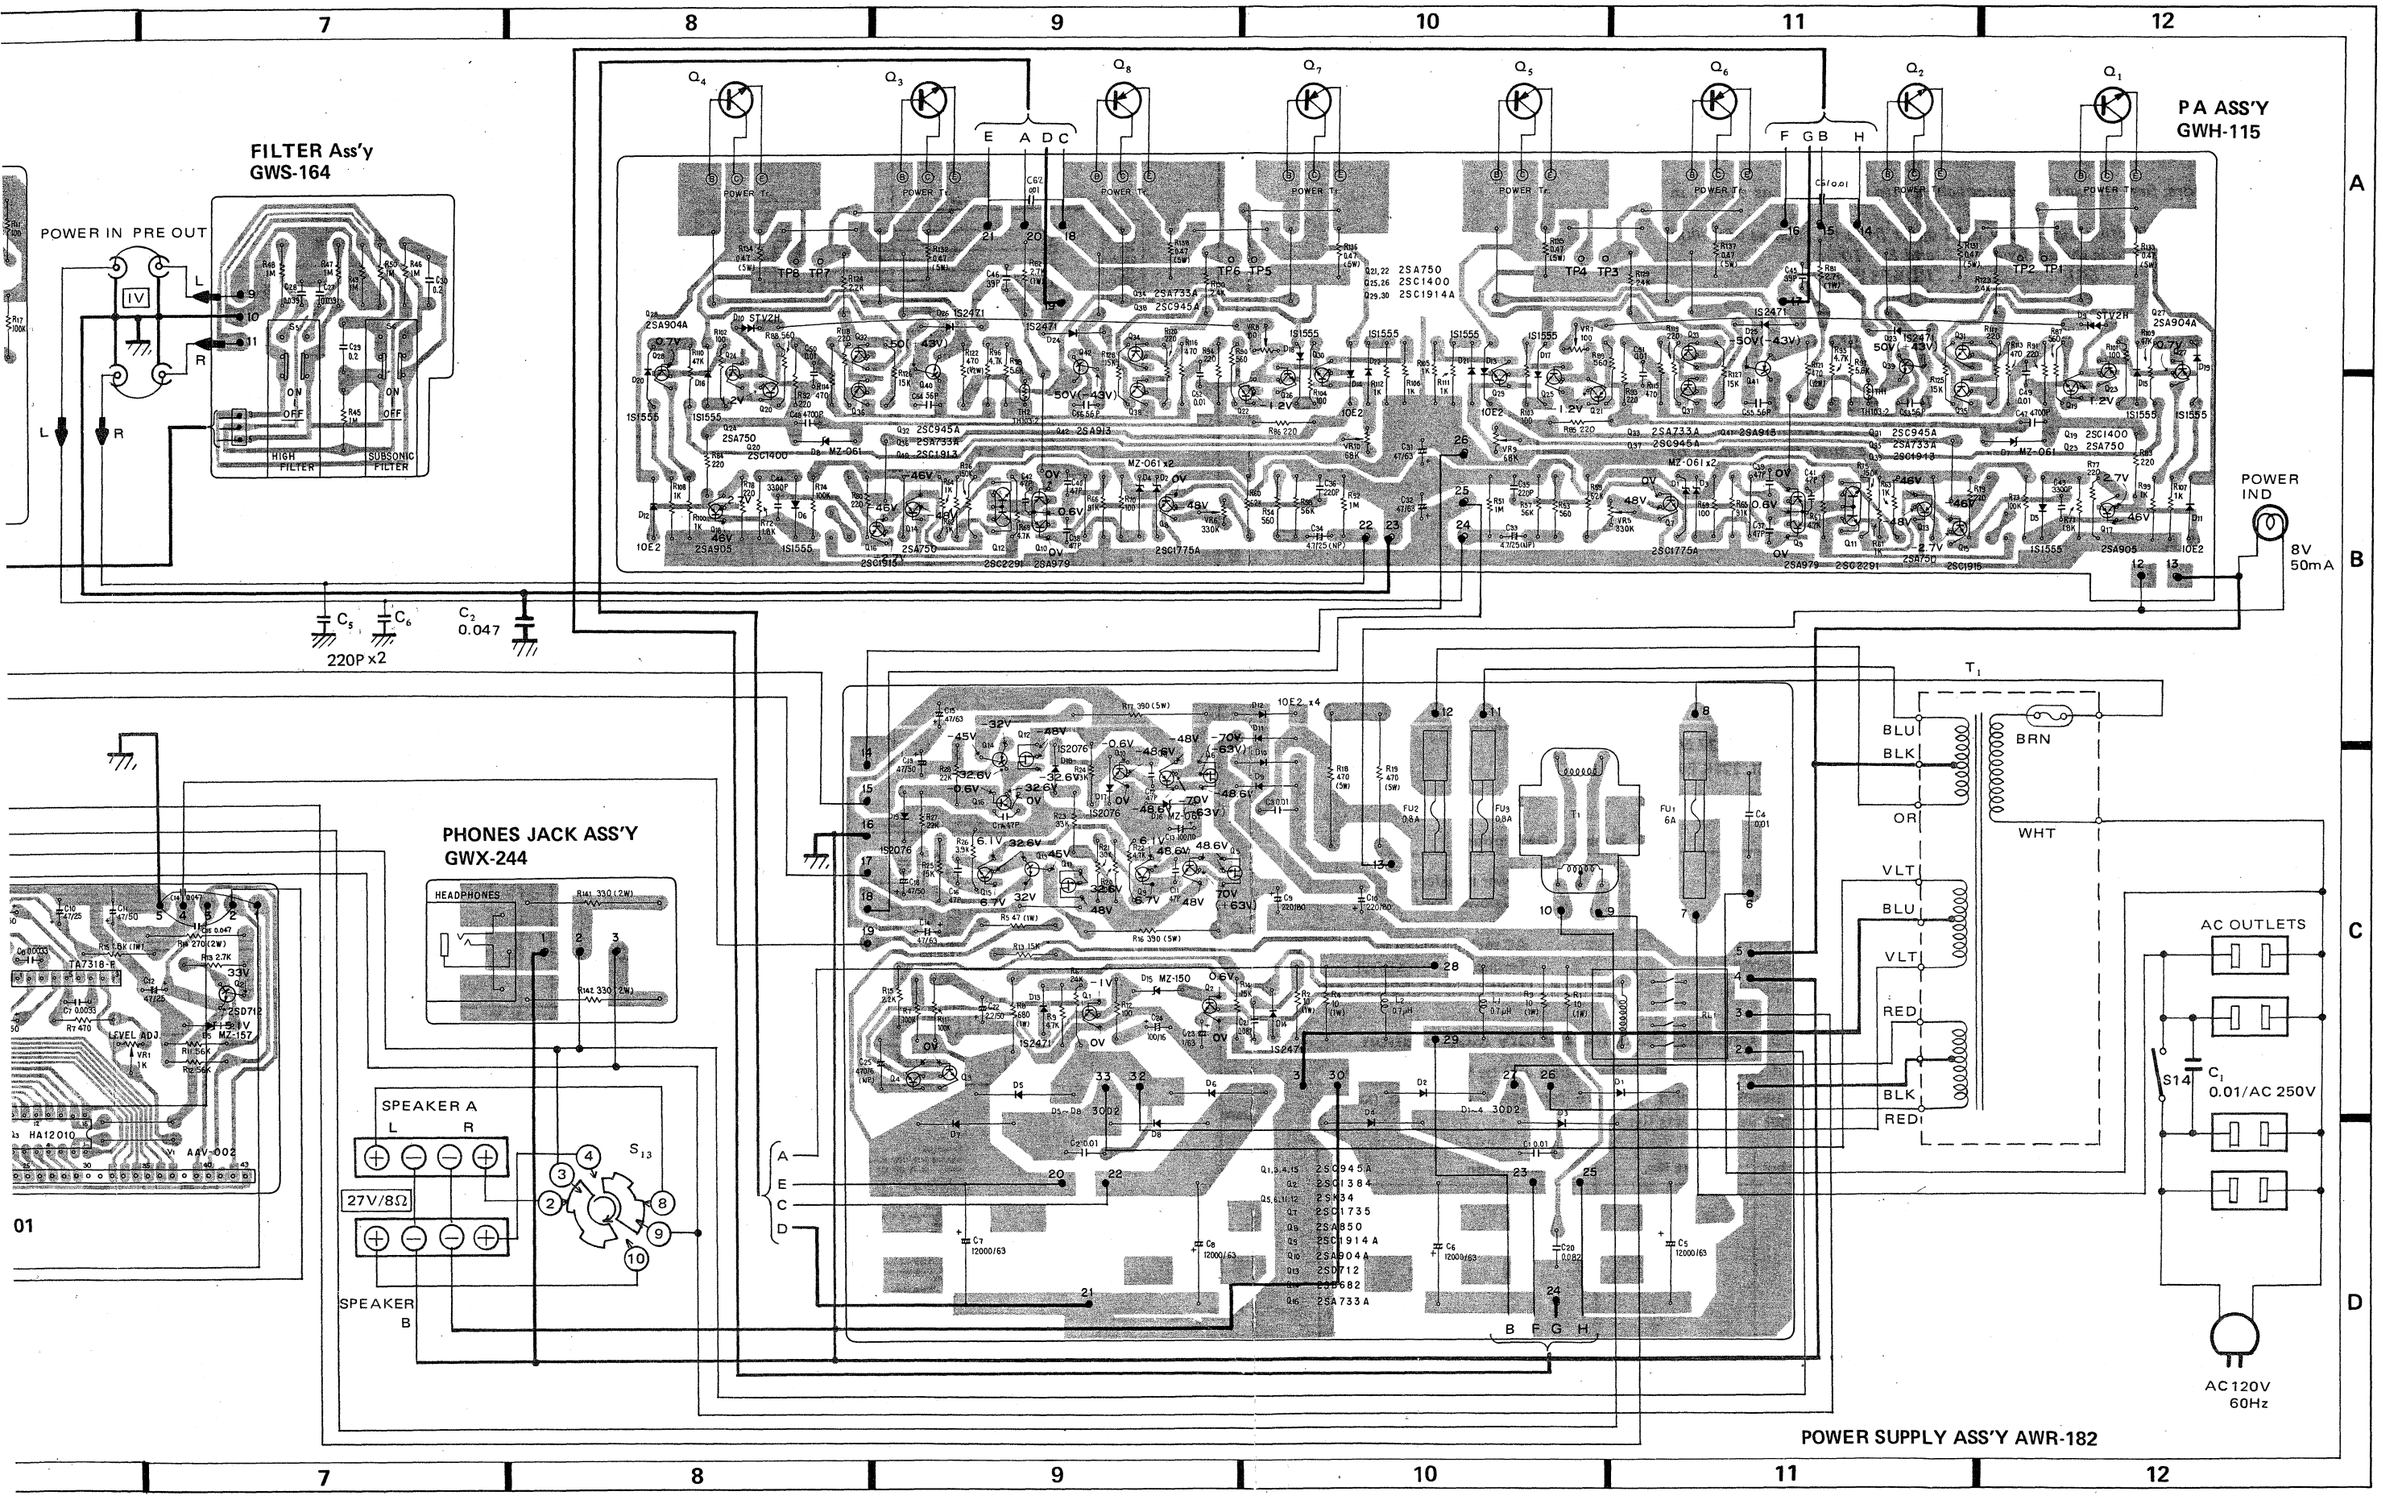
7
8
9
10
11
12
A
B
C
D
FILTER Ass'y
GWS-164
POWER IN PRE OUT
IV
L
R
ON
OFF
HIGH FILTER
SUBSONIC FILTER
PA ASS'Y
GWH-115
POWER IND
8V
50mA
E A D C
F G B H
2SA904A
2SA750
2SC1400
2SC1914A
2SA735A
2SC945A
2SA913
2SC1775A
2SA979
2SC2291
2SA905
2SA733A
2SC945A
MZ-061
1S1555
1S2471
STV2H
PHONES JACK ASS'Y
GWX-244
HEADPHONES
SPEAKER A
L R
27V/8Ω
SPEAKER B
S13
TA7318-P
LEVEL ADJ
2SD712
MZ-157
AAV-002
HA12010
POWER SUPPLY ASS'Y AWR-182
T1
BLU
BLK
OR
BRN
WHT
VLT
BLU
VLT
RED
BLK
RED
AC OUTLETS
S14
C1
0.01/AC 250V
AC120V
60Hz
C2
0.047
C5 C6
220P x2
10E2 x4
2SC945A
2SC1384
2SK34
2SC1735
2SA850
2SC1914A
2SA904A
2SD712
2SD682
2SA733A
30D2
MZ-150
MZ-061
S2076

11.4 TERMINAL ASSEMBLY (GWX-242)

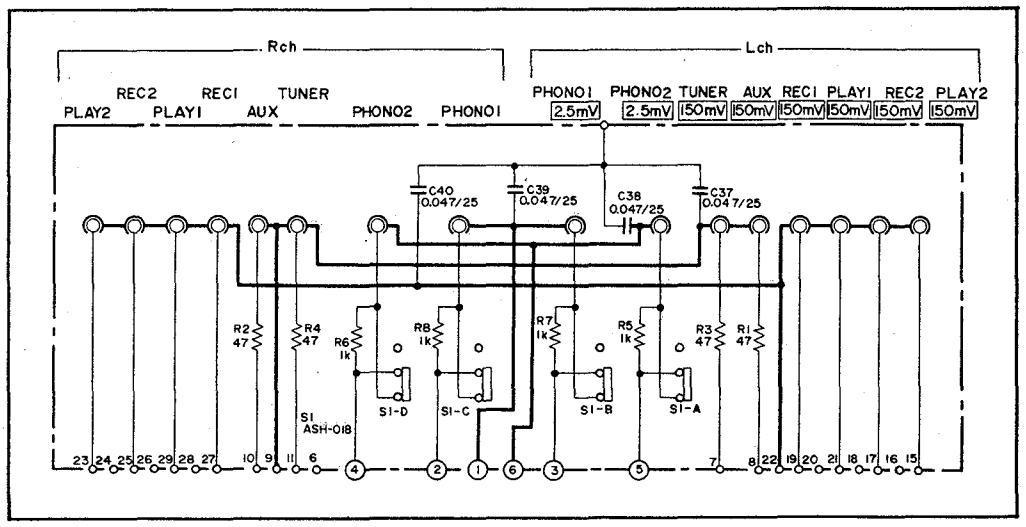

Parts List

CAPACITORS

Part No.	Symbol & Description
CKDBC 473Z 25	C37-C40

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
RD¼PM □□□ J	R1–R8

OTHERS

Part No.	Symbol & Description	
ASH-018	S1	Slide switch (PHONO INTERFERENCE)
AKB-054		Terminal (INPUT, TAPE)

11.5 SWITCH ASSEMBLY (AWS-134)

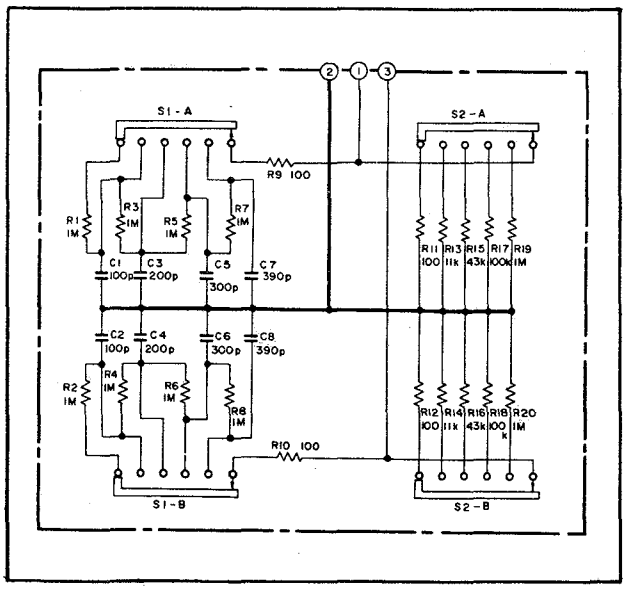

Parts List

SWITCHES

Part No.	Symbol & Description	
ASE-103	S1, S2	Rotary (CARTRIDGE LOAD)

CAPACITORS

Part No.	Symbol & Description
CQSH 101K 50	C1, C2
CQSH 201K 50	C3, C4
CQSH 301K 50	C5, C6
CQSH 391K 50	C7, C8

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
RD¼PM □□□ J	R1–R20

11.6 EQ ASSEMBLY (GWF-113)

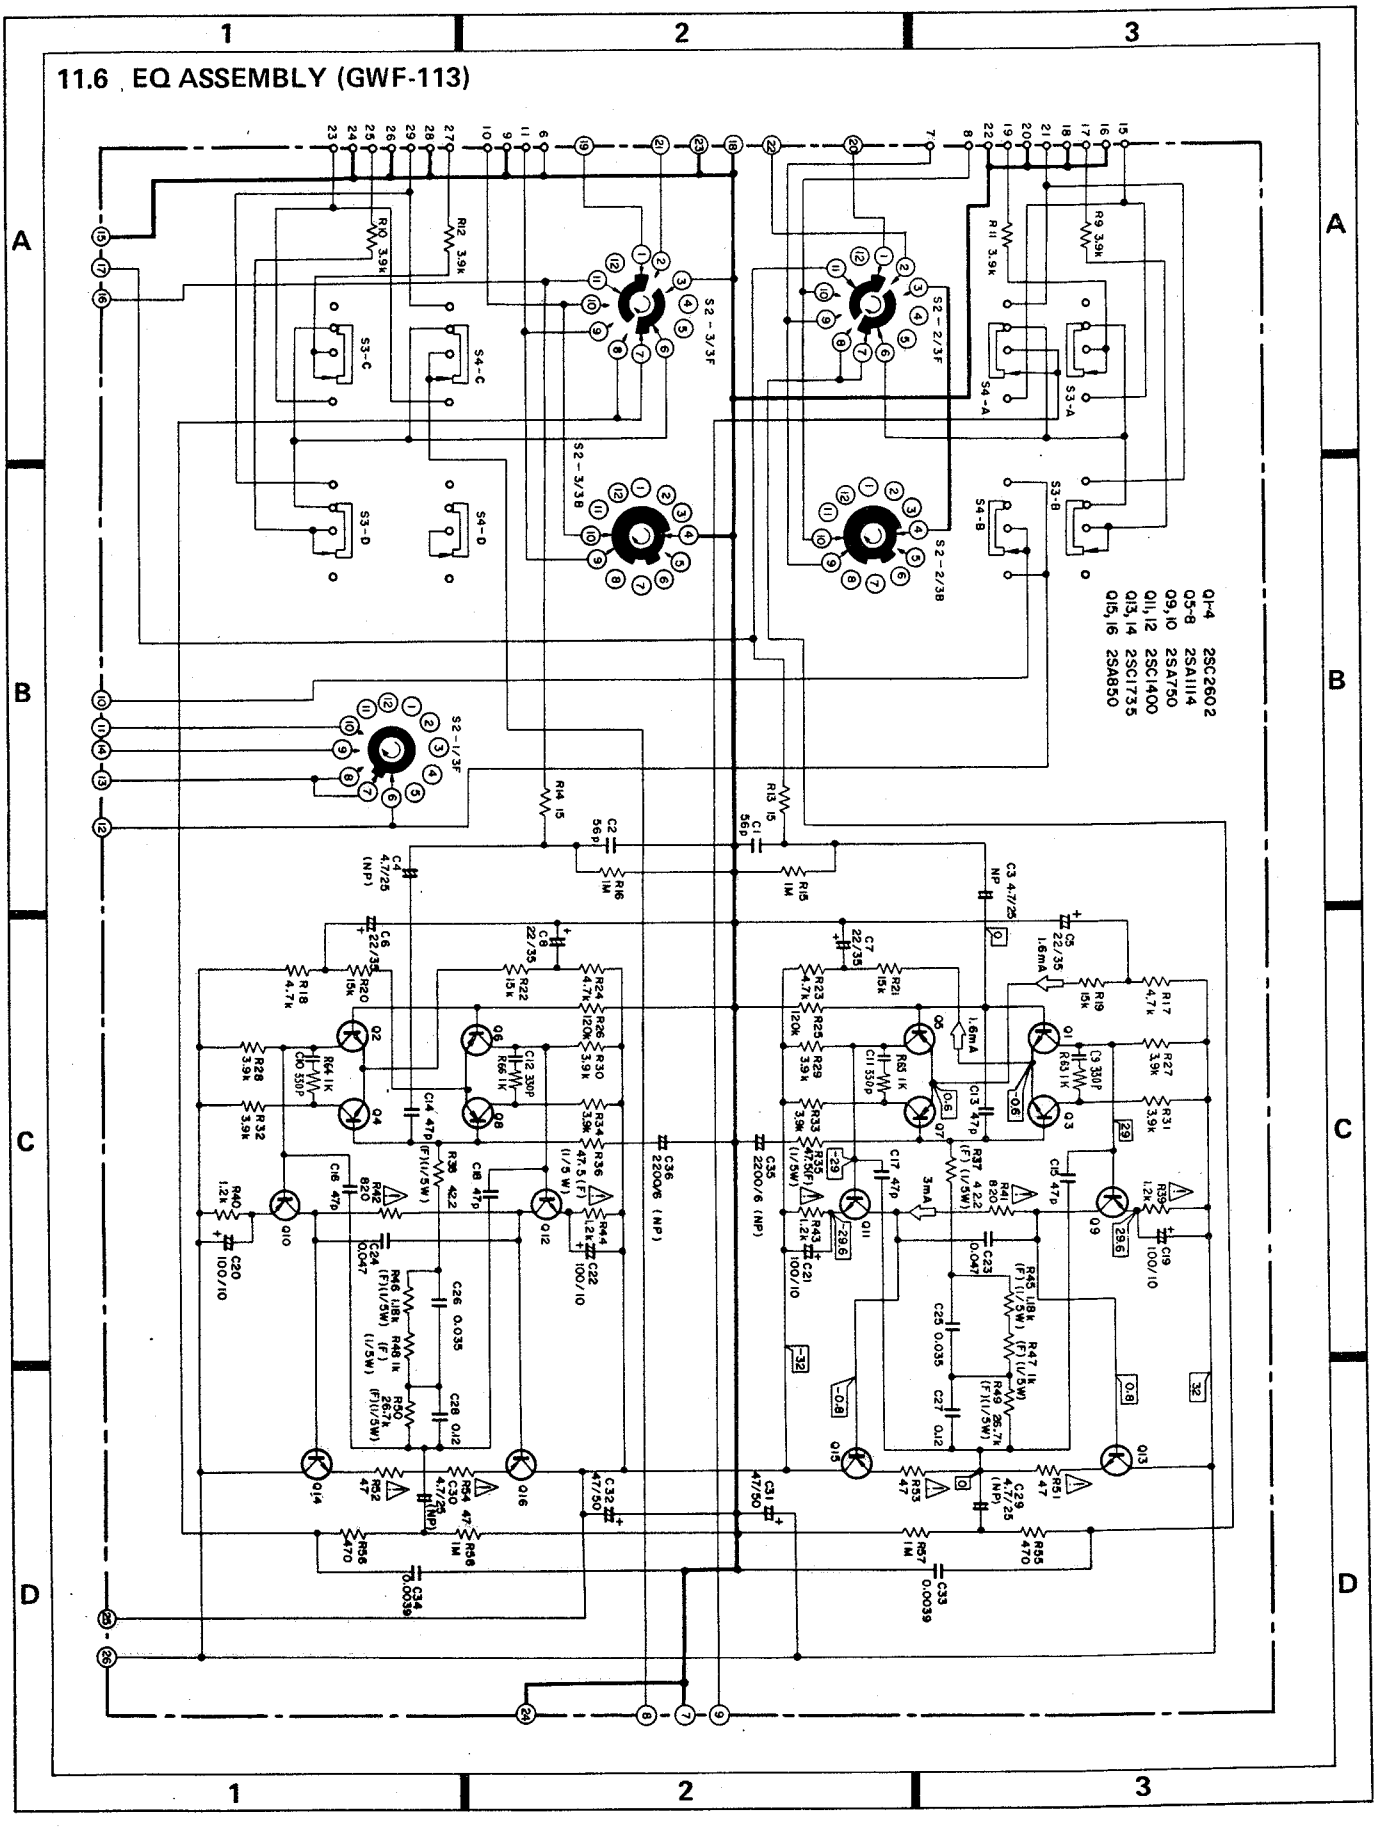

Parts List of EQ Assembly (GWF-113)

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

SWITCHES

Part No.	Symbol & Description	
ASD-114	S2	Rotary (FUNCTION)
ASK-113	S3	Lever (DUPLICATE)
ASK-113	S4	Lever (MONITOR)

RESISTORS

Part No.	Symbol & Description
RD¼PM □□□ J	R9–R34, R55–R58, R63–R66
RN½SQ □□□□ F	R35–R38, R45–R50
⚠RD¼PSF □□□ J	R39–R44, R51–R54

CAPACITORS

Part No.	Symbol & Description		
CQSH 560K 50	C1, C2		
ACH-318	C3, C4, C29, C30	Electrolytic	4.7/25 (NP)
CEA 220P 35	C5–C8		
CCDSL 470K 50	C13–C18		
CEA 101P 10	C19–C22		
CKDYB 331K 50	C9–C12		
CQMA 473K 50	C23, C24		
CQPA 353G 50	C25, C26		
CQPA 124G 50	C27, C28		
CEA 470P 50	C31, C32		
CQMA 392J 50	C33, C34		
ACH-339	C35, C36	Electrolytic	2200/6V (NP)

SEMICONDUCTORS

Part No.	Symbol & Description
2SC2602	Q1–Q4
2SA1114	Q5–Q8
2SA750	Q9, Q10
2SC1400	Q11, Q12
2SC1735	Q13, Q14
2SA850	Q15, Q16

11.7 FILTER ASSEMBLY (GWS-164)

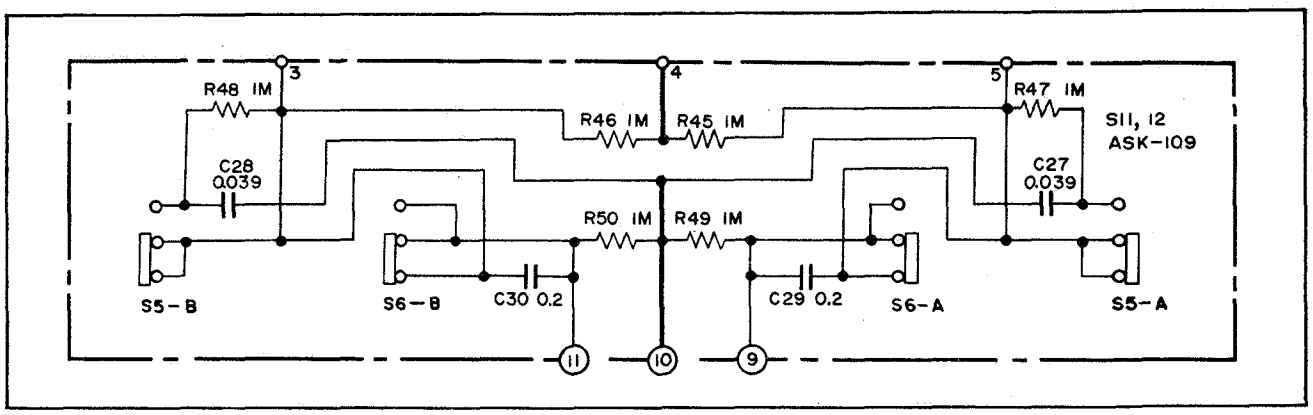

Parts List

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

SWITCHES

Part No.	Symbol & Description	
ASK-109	S5, S6	Lever (FILTER)

RESISTORS

Part No.	Symbol & Description
RD¼PM □□□ J	R45–R50

CAPACITORS

Part No.	Symbol & Description
CQMA 393K 50	C27, C28
CQMA 204J 50	C29, C30

11.8 TC ASSEMBLY (GWG-122)

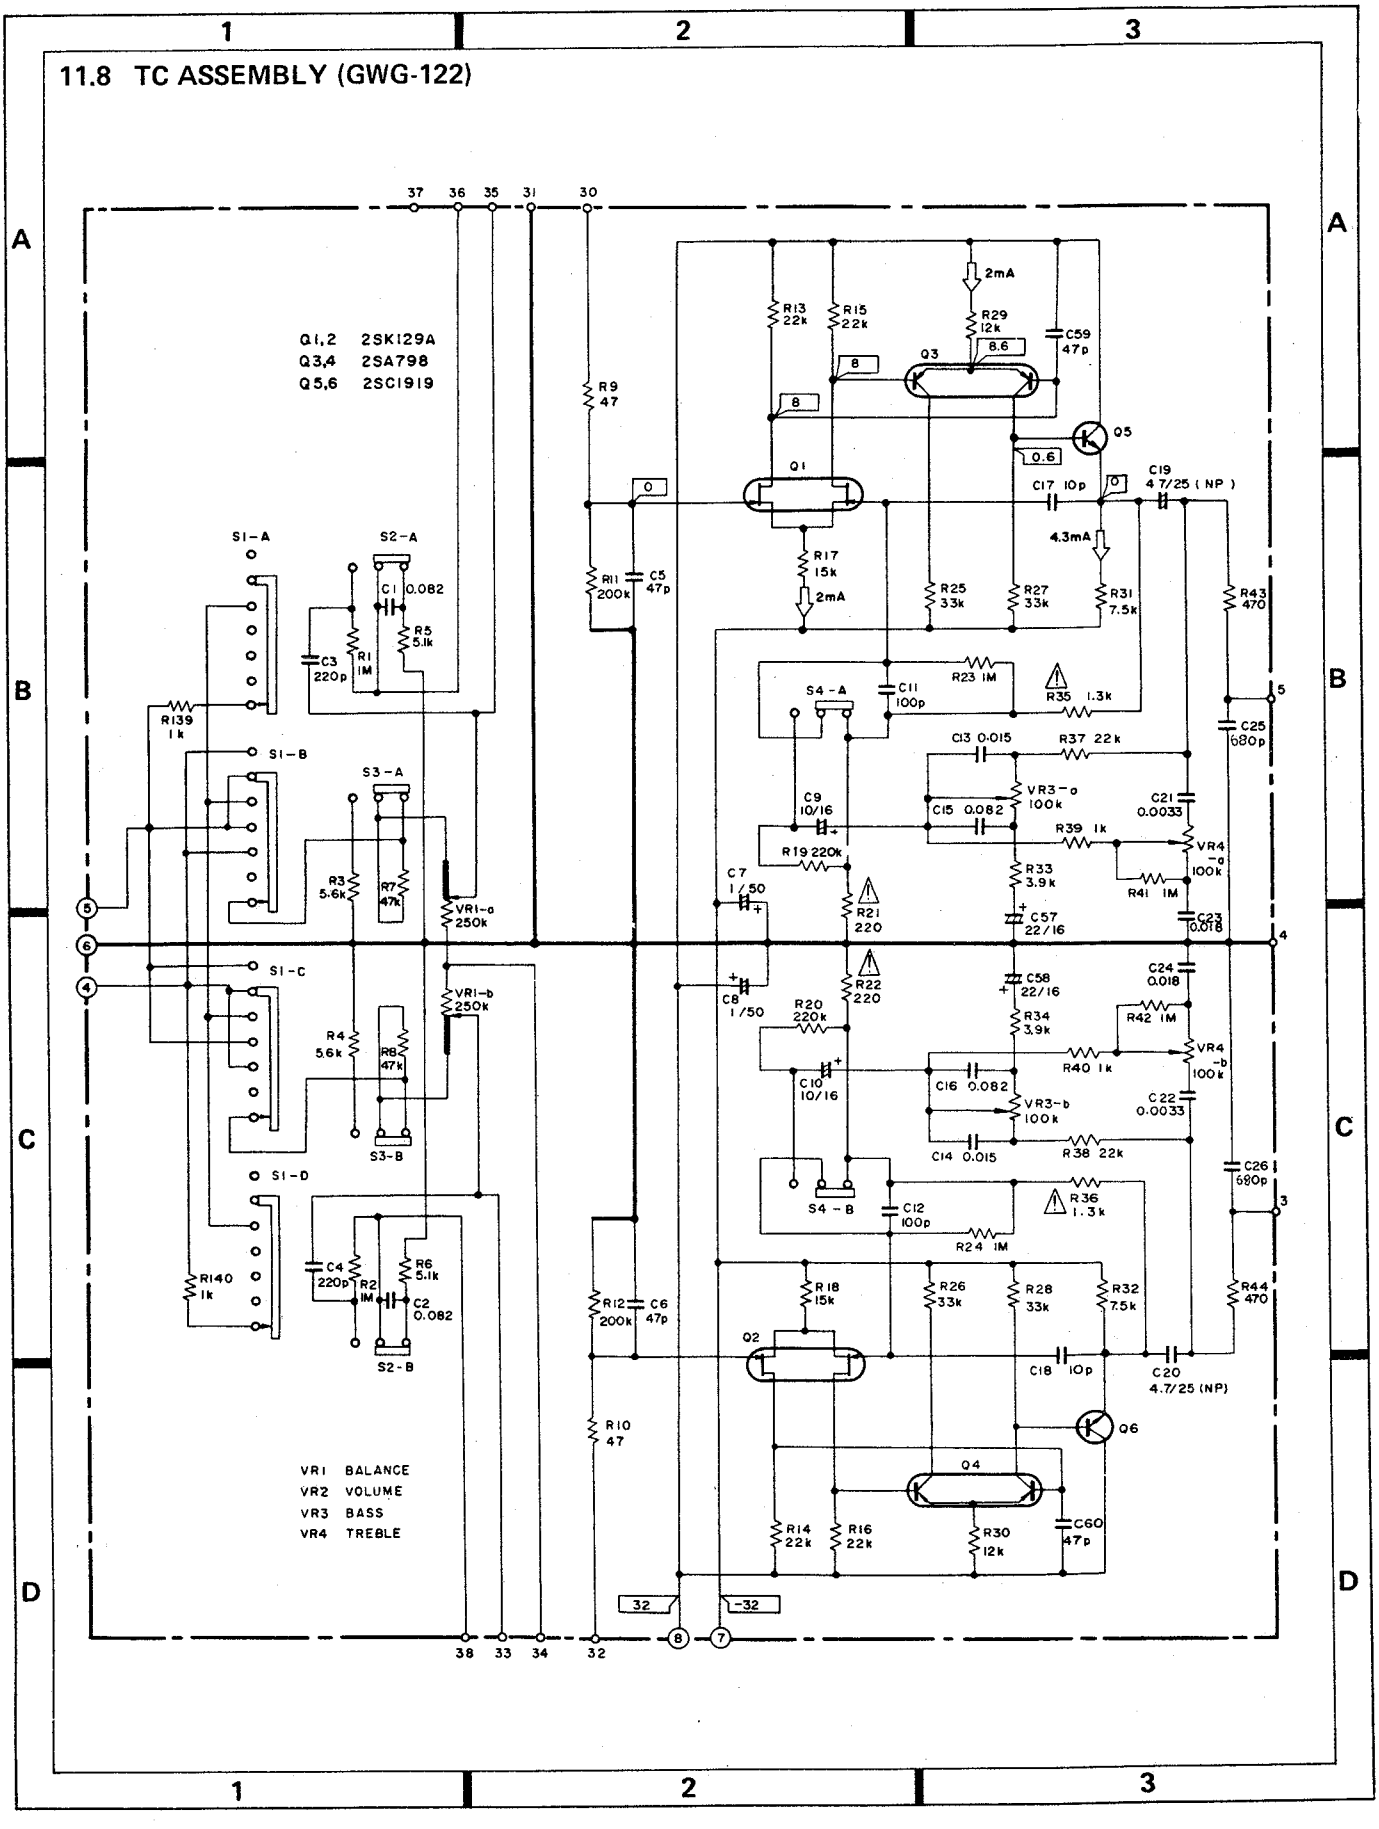

Parts List of TC Assembly (GWG-122)

SWITCHES

Part No.	Symbol & Description	
ASE-102	S1	Rotary (MODE)
ASK-109	S2	Lever (LOUDNESS)
ASK-110	S3	Lever (MUTING)
ASK-110	S4	Lever (TONE)

CAPACITORS

Part No.	Symbol & Description		
CQMA 823J 50	C1, C2, C15, C16		
CCDSL 221K 50	C3, C4,		
CCDSL 470K 50	C5, C6, C59, C60		
CEA 010P 50	C7, C8		
CEANL 100M 16	C9, C10		
CCDSL 101K 50	C11, C12		
CQMA 153J 50	C13, C14		
CCDSL 100F 50	C17, C18		
ACH-318	C19, C20	Electrolytic	4.7/25(NP)
CQMA 332J 50	C21, C22		
CCDSL 681K 50	C25, C26		
CQMA 183J 50	C23, C24		
CEANL 220M 16	C57, C58		

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description	
ACV-187	VR1	Variable (BALANCE)
ACV-198	VR3	Variable (BASS)
ACV-199	VR4	Variable (TREBLE)
RD¼PM □□□ J	R1–R20, R23–R34, R37–R44, R139, R140	
⚠ RD¼PSF □□□ J	R21, R22, R35, R36	

SEMICONDUCTORS

Part No.	Symbol & Description
2SK129A	Q1, Q2
2SA798	Q3, Q4
2SC1919 (2SC1400)	Q5, Q6

List of Changed Parts for Factory Modification

List of changed parts information will be furnished whenever necessary and you are requested to amend parts number in this parts list.

Symbol	Part No.	Description

11.9 VR ASSEMBLY (GWX-243)

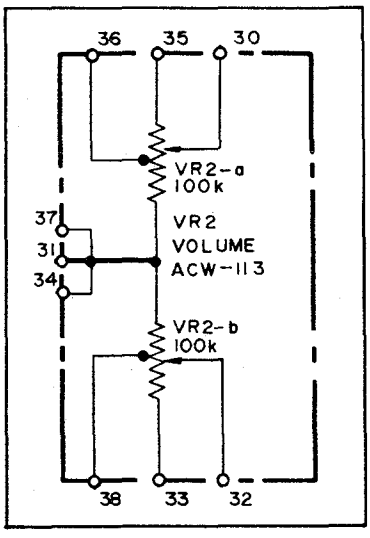

Parts List

Part No.	Symbol & Description
ACW-113	Variable resistor (VOLUME)

11.10 PA ASSEMBLY (GWH-115)

Parts List

CAPACITORS

Part No.	Symbol & Description
CEA 470P 63	C31, C32
ACH-318	C33, C34 Electrolytic 4.7/25V (NP)
CCDSL 221K 50	C35, C36
CCDSL 470K 50	C37–C40
CCDSL 470K 50	C41, C42
⚠CQMA 332K 250	C43, C44
CCDSL 390K 50	C45, C46
CQMA 472K 50	C47, C48
CQMA 103K 50	C49–C52
⚠CCDSL 560K 500	C53–C56
⚠CKDYF 103Z 500	C61, C62

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
ACP-068	VR5, VR6 Semifixed 330k-B
C92-063	VR7, VR8 Semifixed 100-B
ACP-002	VR9, VR10 Semifixed 68k-B
RD¼PM □□□ J	R51–R54, R57–R60, R65–R68, R73–R76
RD¼PM □□□ J	R95–R98, R101–R104, R109, R110
RD¼PM □□□ J	R125–R128
⚠RD¼PSF □□□ J	R61–R64, R69–R72, R77–R80, R83–R90
⚠RD¼PSF □□□ J	R91–R94, R99, R100, R105–R108
⚠RD½PSF □□□ J	R111–R120, R123, R124, R129, R130
RS1P □□□ J	R81, R82
⚠RD½PSF □□□ J	R121, R122
⚠ACN-041	R131–R138 Wire wound 0.47/5W

SEMICONDUCTORS

Part No.	Symbol & Description
2SC1775A-E*	Q7, Q8
or -F*	
2SA979-F*	Q9, Q10
or -G*	

*hfe of Q7 and Q8 should have the E-rank, if Q9 and Q10 have the F-rank.
*hfe of Q7 and Q8 should have the F-rank, if Q9 and Q10 have the G-rank.

Part No.	Symbol & Description
2SC2291	Q11, Q12
2SA750 (2SA726S)	Q13, Q14
2SC1915	Q15, Q16
2SA905	Q17, Q18
2SC1400	Q19, Q20, Q25, Q26
2SA750	Q21–Q24
2SA904A	Q27, Q28
2SC1914A	Q29, Q30
2SC945A	Q31, Q32, Q37, Q38
2SA733A	Q33–Q36

Part No.	Symbol & Description
2SC1913-R**	Q39, Q40
or -Q**	
2SA913-R**	Q41, Q42
or -Q**	

**hfe of Q39–Q42 should have the same value.

Part No.	Symbol & Description
1S1555 (1S2473)	D5, D6, D15–D22
10E2	D11–D14
1S2471	D23–D26
MZ-061 (WZ-061)	D1–D4, D7, D8
STV2H	D9, D10
TH103-2	Th1, Th2

List of Changed Parts for Factory Modification

List of changed parts information will be furnished whenever necessary and you are requested to amend parts number in this parts list.

Symbol	Part No.	Description

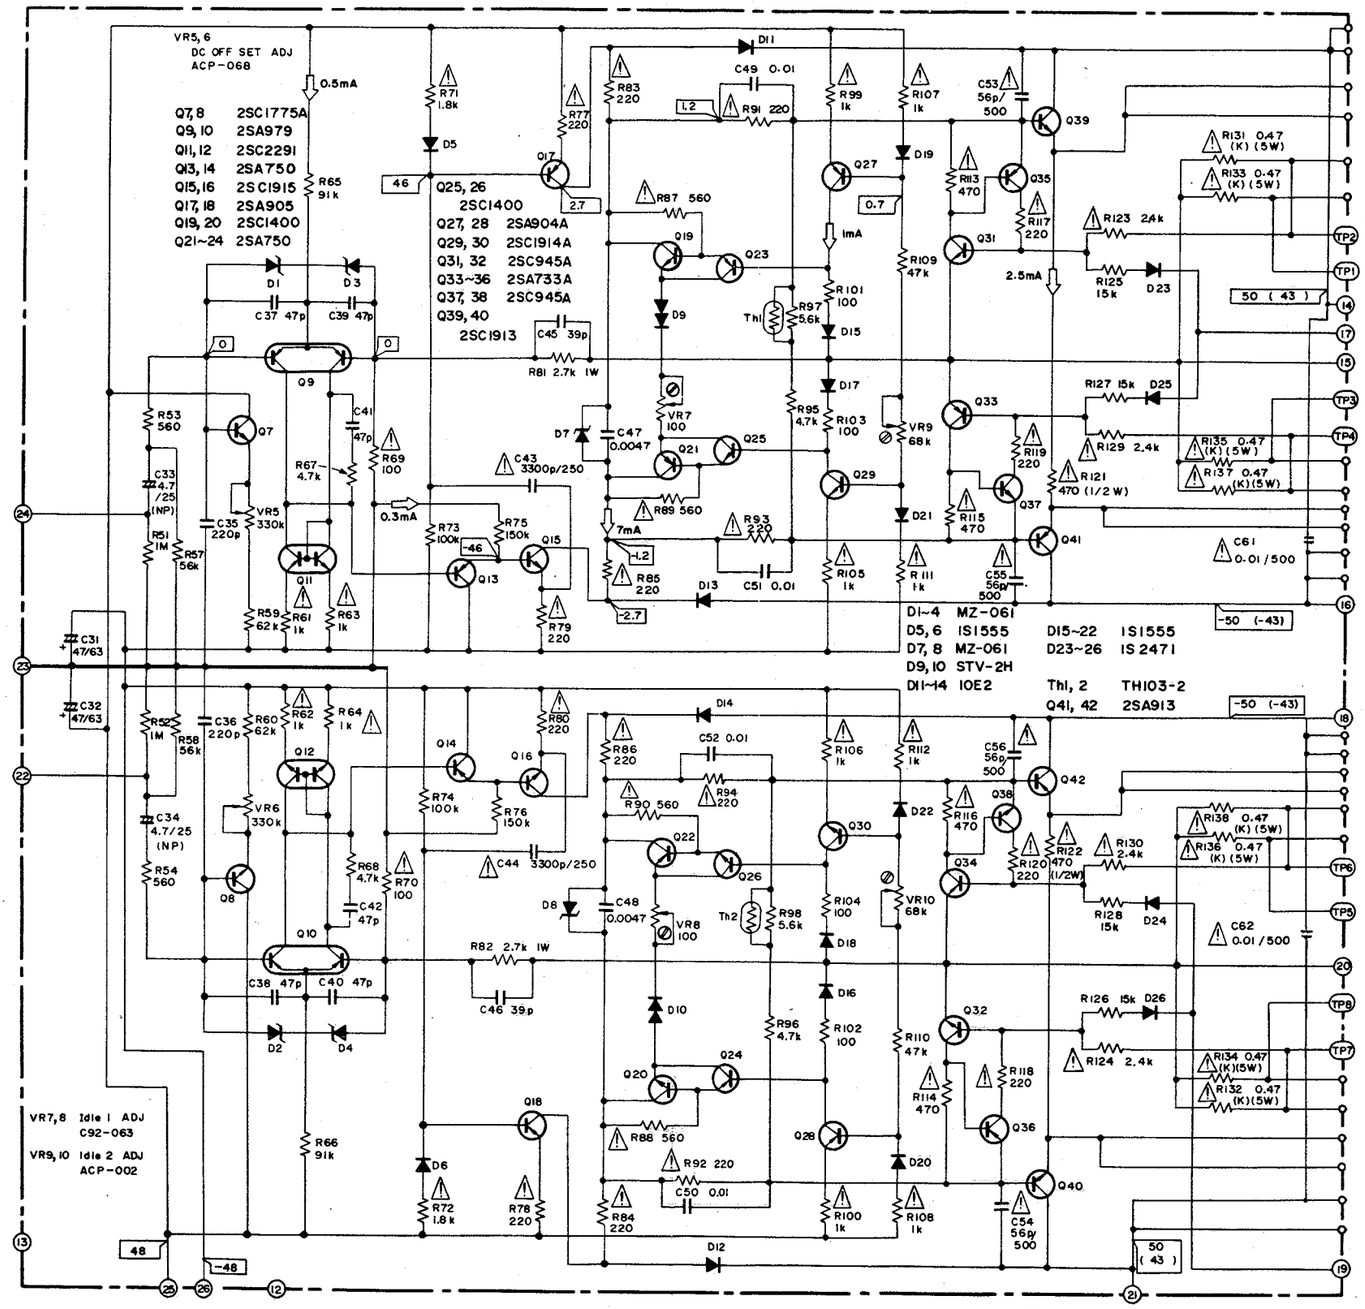
VR5, 6 DC OFF SET ADJ ACP-068
0.5mA
Q7, 8 2SC1775A
Q9, 10 2SA979
Q11, 12 2SC2291
Q13, 14 2SA750
Q15, 16 2SC1915
Q17, 18 2SA905
Q19, 20 2SC1400
Q21~24 2SA750
Q25, 26 2SC1400
Q27, 28 2SA904A
Q29, 30 2SC1914A
Q31, 32 2SC945A
Q33~36 2SA733A
Q37, 38 2SC945A
Q39, 40 2SC1913
D1~4 MZ-061
D5, 6 IS1555
D7, 8 MZ-061
D9, 10 STV-2H
D11~14 10E2
D15~22 IS1555
D23~26 IS2471
Th1, 2 TH103-2
Q41, 42 2SA913
VR7, 8 Idle 1 ADJ C92-063
VR9, 10 Idle 2 ADJ ACP-002
2.5mA
1mA
0.7mA
0.3mA
TP1
TP2
TP3
TP4
TP5
TP6
TP7
TP8

11.11 INDICATOR ASSEMBLY (AWV-001)

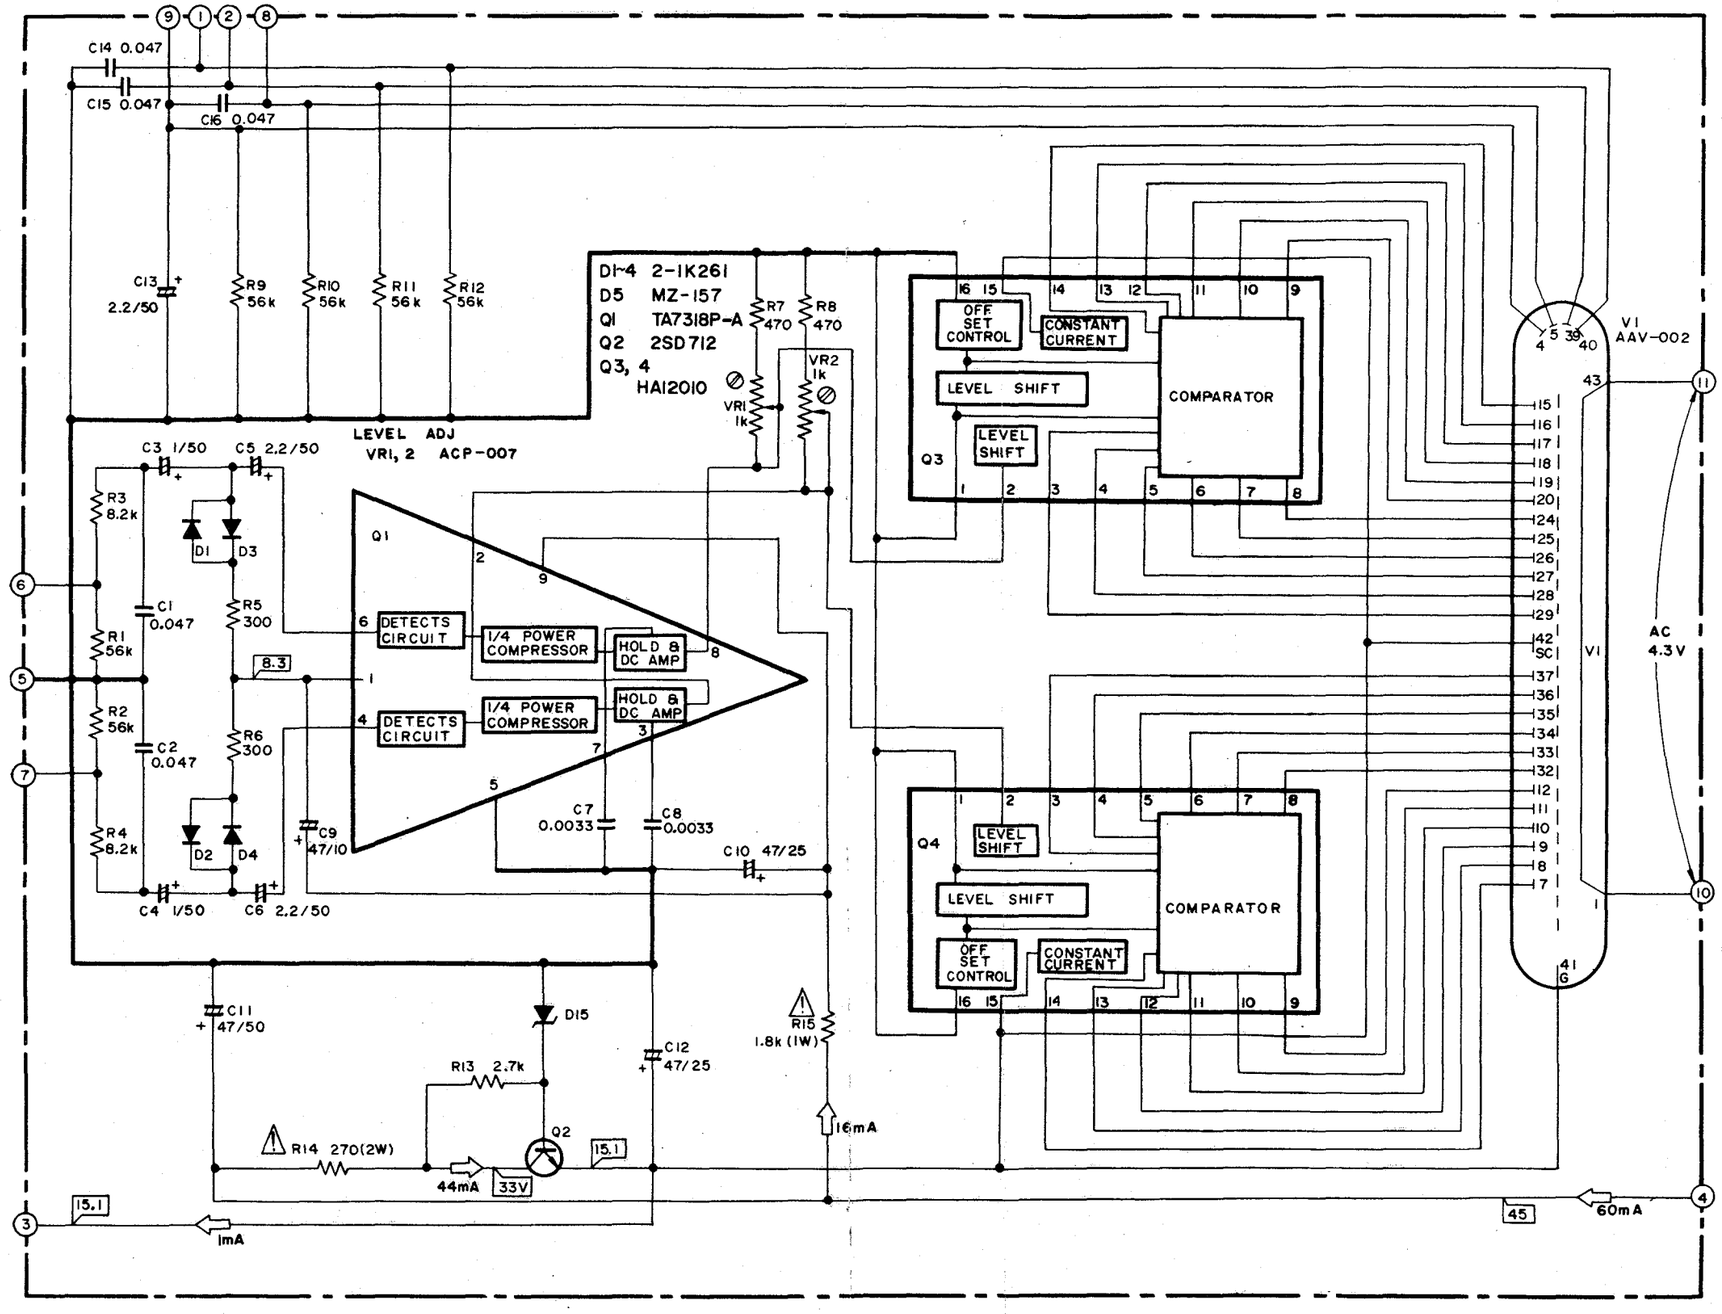

Parts List of Indicator Assembly (AWV-001)

CAPACITORS

Part No.	Symbol & Description
CQMA 473K 50	C1, C2
CEA 010P 50	C3, C4
CEA 2R2P 50	C5, C6, C13
CQMA 332K 50	C7, C8
CEA 470P 10	C9
CEA 470P 25	C10, C12
CEA 470P 50	C11
CKDYF 473Z 50	C14–C16

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description		
ACP-007	VR1, VR2	Semifixed	1k-B
⚠ RS2P □□□ J	R14		
⚠ RS1P □□□ J	R15		
RD¼PM □□□ J	R1–R3		

SEMICONDUCTORS

Part No.	Symbol & Description
TA7318P-A	Q1
2SD712	Q2
HA12010	Q3, Q4
2-1K261	D1–D4
MZ-157 (WZ-157)	D5

OTHERS

Part No.	Symbol & Description	
AAV-002	V1	Fluorescent indicator tube
ABA-048		Screw 3x6

11.12 PHONES JACK ASSEMBLY (GWX-244)

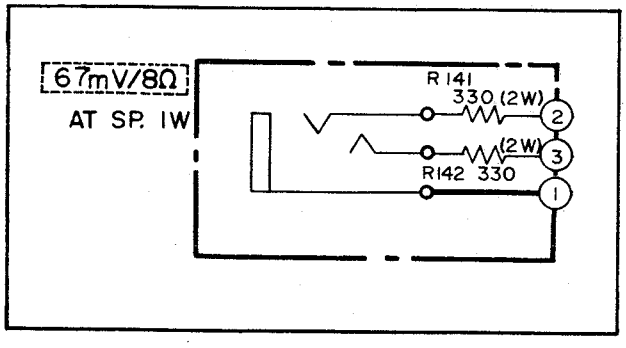

Parts List

Part No.	Symbol & Description
RS2P 331J	R141, R142
AKN-023	Phone jack (PHONES)

11.13 POWER SUPPLY ASSEMBLY (AWR-182)

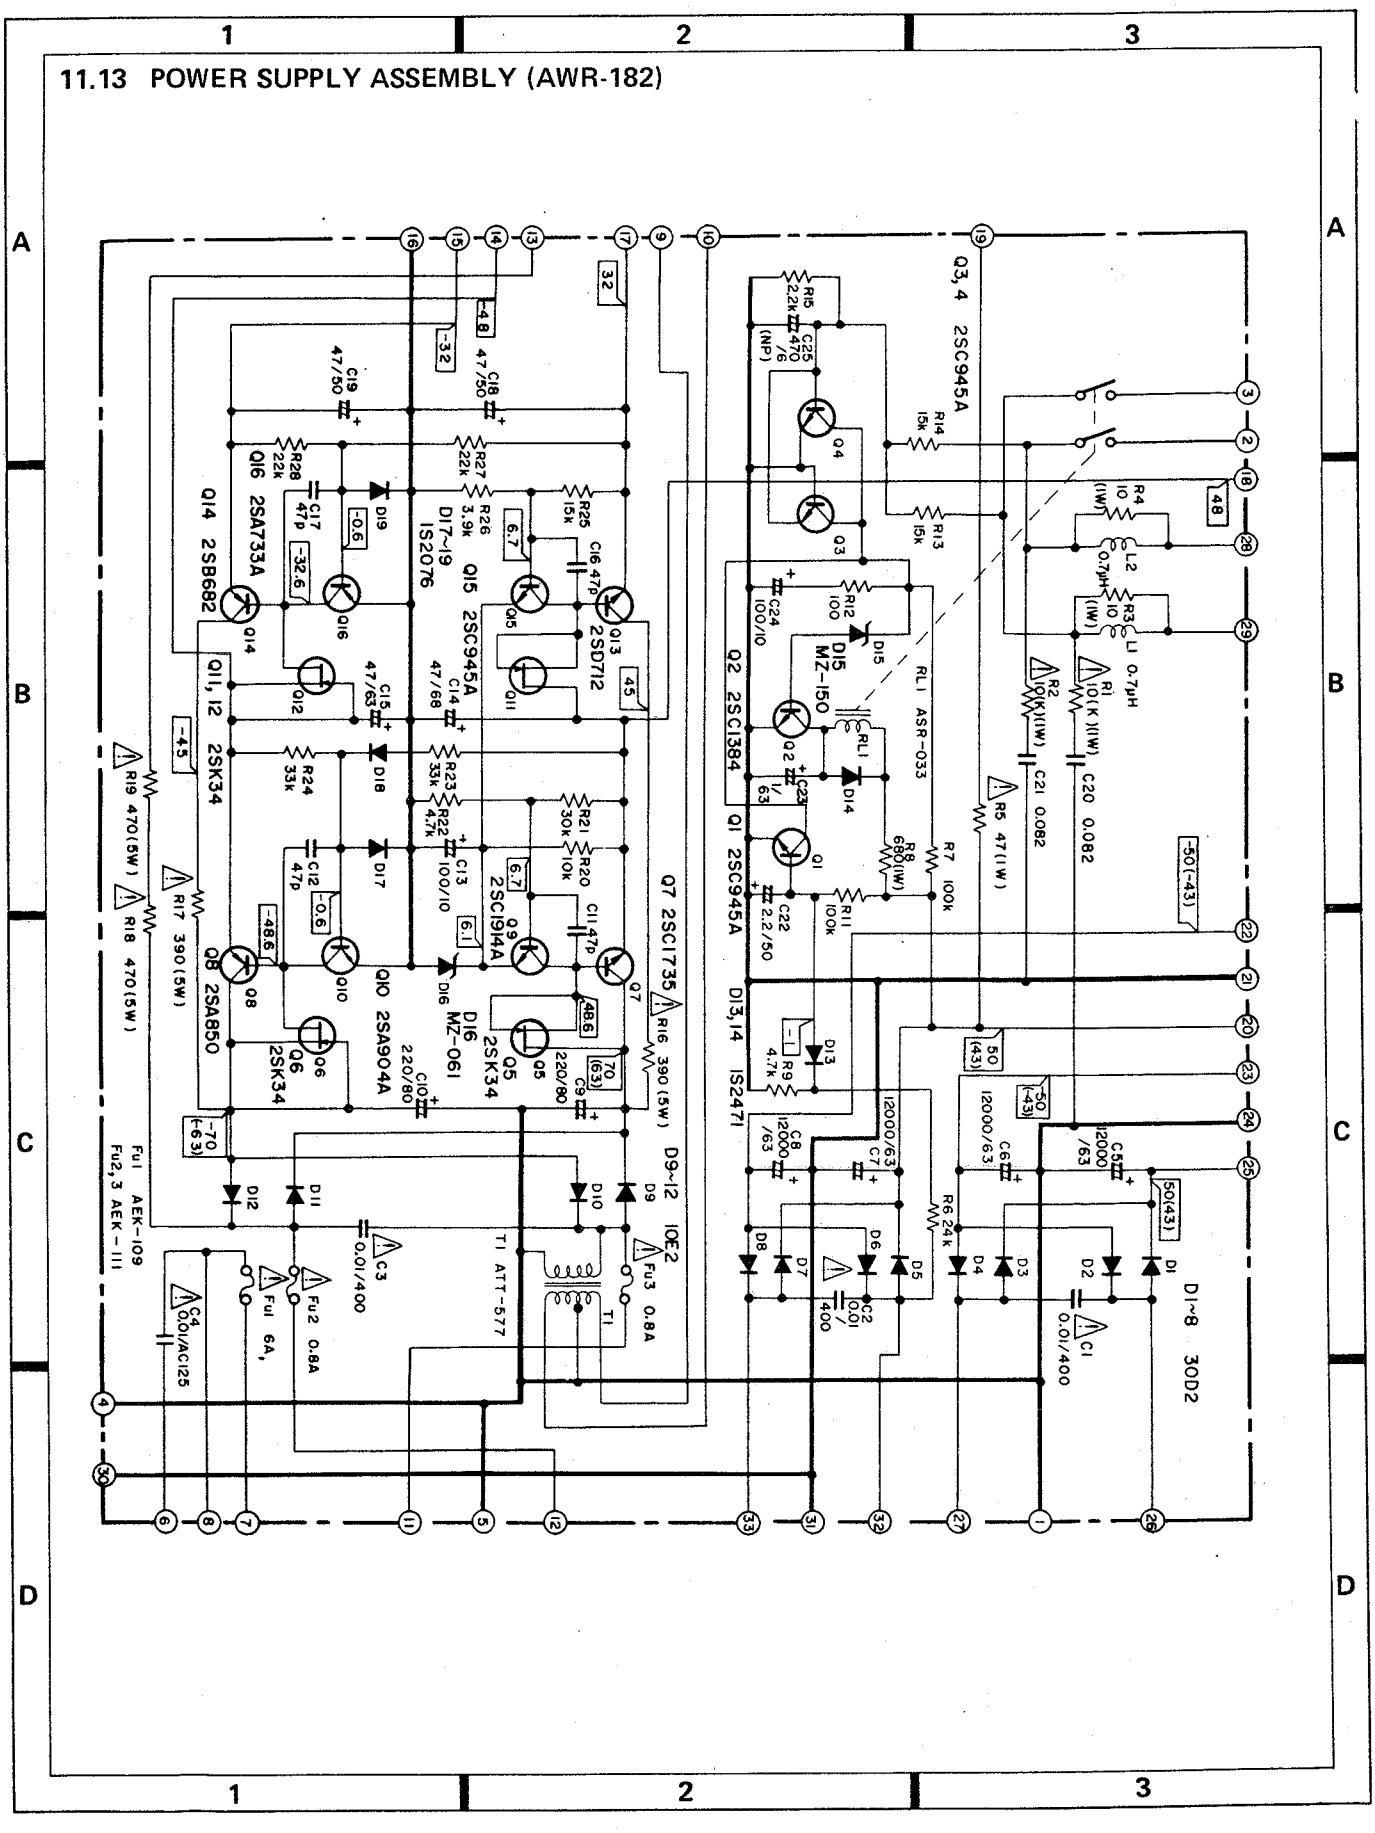

Parts List of Power Supply Assembly (AWR-182)

CAPACITORS

Part No.	Symbol & Description		
CQMA 103K 400	C1—C3		
⚠ACG-003	C4	Ceramic	0.01/125V
ACH-209	C5—C8	Electrolytic	12000/63V
CEA 221P 80	C9, C10		
CCDSL 470K 50	C11, C12, C16, C17		
CEA 101P 10	C13		
CEA 470P 63	C14, C15		
CEA 470P 50	C18, C19		
CQMA 823K 50	C20, C21		
CEANL 2R2M 50	C22		
CEA 010P 63	C23		
CEA 101P 16	C24		
ACH-340	C25		

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

RESISTORS

Part No.	Symbol & Description
⚠RN1H □□□ K	R1, R2
RS1P □□□ J	R3, R4, R8
⚠RS1P □□□ J	R5
⚠RT5B □□□ K	R16—R19
RD¼PM □□□ J	R6, R7, R9, R11—R15, R20—R28

SEMICONDUCTORS

Part No.	Symbol & Description
2SC945A	Q1, Q3, Q4, Q15
2SC1384	Q2
2SK34	Q5, Q6, Q11, Q12
2SC1735	Q7
2SA850	Q8
2SC1914A	Q9
2SA904A	Q10
2SD712	Q13
2SB682	Q14
2SA733A	Q16
30D2 (GP-25D)	D1—D8
10E2 (SIB01-02)	D9—D12
1S2471	D13, D14
WZ-150	D15
WZ-061	D16
1S2076 (1S1555)	D17—D19

OTHERS

Part No.	Symbol & Description	
ATT-577	T1	Transformer (for FL)
⚠ASR-033 (⚠ASR-023)	RL1	Relay
⚠AEC-279		Capacitor cover
ABA-048		Screw 3x6
ABA-051		Screw 3x12
ABE-020		Washer

List of Changed Parts for Factory Modification

Symbol	Part No.	Description

ADDITIONAL

Service Manual

PIONEER

STEREO AMPLIFIER

SA-8800 KC S S/G

The basic performance of the KC, S and S/G types are the same as the KU type. The KU, KC and S/G types have wooden cover (Walnut grained finished), while S type employs metal (Black). This additional service manual is applicable to the KC, S and S/G types, please refer to the KU type service manual (ART-342) with the exception of this supplements.

SPECIFICATIONS FOR S AND S/G TYPES

The specifications for S and S/G types are the same as the KU type except for following sections;

Miscellaneous

Power Requirements . AC110/120/220/240V (Switchable), 50/60Hz

Demensions . . . . . 420(W)x150(H)x425(D)mm
16-17/32(W)x5-29/32(H)x16-3/4(D)in

Weight

S type . . . . . .Without Package; 15.0kg (33 lb 1 oz)

S/G type . . . . . .Without Package; 16.1kg (35 lb 8 oz)

Furnished Parts

Fuse (3A) 1

Fuse (6A) 1

SPECIFICATION FOR KC TYPE

The specifications for KC type is the same as the KU type.

CONTRAST OF MISCELLANEOUS PARTS

- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

P.C. BOARD ASSEMBLIES

Symbol	Description	Part No.			
		KU type	KC type	S type	S/G type
	Terminal assembly	GWX-242	GWX-290	GWX-274	GWX-274
	EQ assembly	GWF-113	GWF-119	GWF-117	GWF-117
	Filter assembly	GWS-164	GWS-177	GWS-177	GWS-177
	VR assembly	GWX-243	GWX-275	GWX-275	GWX-275
	Phones jack assembly	GWX-244	GWX-276	GWX-276	GWX-276
	TC assembly	GWG-122	GWG-125	GWG-125	GWG-125
	PA assembly	GWH-115	GWH-124	GWH-124	GWH-124
	Power supply assembly	AWR-182	AWR-198	AWR-193	AWR-193
	Indicator assembly	AWV-001	AWV-003	AWV-001	AWV-001
	Switch assembly	AWS-134	AWS-134	AWS-134	AWS-134

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
U.S. PIONEER ELECTRONICS CORPORATION 85 Oxford Drive, Moonachie, New Jersey 07074, U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V. Luithagen-Haven 9, 2030 Antwerp, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia

Y © MAR. 1979 Printed in Japan

<ART-353-0>

FUSE

Symbol	Description	Part No.			
		KU type	KC type	S type	S/G type
⚠ FU1	Fuse (6A) (for 110V, 120V) Fuse (3A) (for 220V, 240V)	AEK-109	AEK-109	(AEK-109) AEK-101	AEK-109 (AEK-101)

SWITCHES

Symbol	Description	Part No.			
		KU type	KC type	S type	S/G type
⚠ S14 ⚠ S15	Lever (POWER) Plug in selector (with fuse holder)	ASK-124	ASK-124	ASK-128 AKR-031	ASK-128 AKR-031

CAPACITORS

Symbol	Description	Part No.			
		KU type	KC type	S type	S/G type
⚠ C1 ⚠ C3	Ceramic 0.01/125V Ceramic 0.01/250V Ceramic 0.01/250V	..... ACG-001	ACG-014	..... ACG-001 ACG-001	..... ACG-001 ACG-001

OTHERS

Symbol	Description	Part No.			
		KU type	KC type	S type	S/G type
⚠ T1	Power transformer	ATT-563	ATT-564	ATT-580	ATT-565
⚠	AC socket (AC OUTLETS)	AKP-004	AKP-004	AKP-021	AKP-021
⚠	AC power cord	ADG-023	ADG-023	ADG-016	ADG-016
	Capacitor cover	AEC-294	AEC-365	AEC-294	AEC-294
	Top cover (wooden)	AMM-079	AMM-079	.....	AMM-079
	Top cover (metal)	.....	.....	ANE-222	.....
	Washerfaced screw (for metal top cover)	.....	.....	ABA-079	.....
	Screw 4x30 (for wooden top cover)	ABA-243	ABA-243	.....	ABA-243
	Spring washer 4ϕ	ABE-056	ABE-056	.....	ABE-056
	Flat washer	B11-033	B11-033	.....	B11-033

PACKING AND FURNISHED PARTS

Symbol	Description	Part No.			
		KU type	KC type	S type	S/G type
	Packing case	AHD-613	AHD-619	AHD-621	AHD-620
	Top pad L	AHA-214	AHA-214	.....	AHA-214
	Top pad R	AHA-215	AHA-215	.....	AHA-215
	Bottom pad L	AHA-216	AHA-216	.....	AHA-216
	Bottom pad R	AHA-217	AHA-217	.....	AHA-217
	Side pad	.....	.....	AHA-218	.....
	Cardboard spacer	.....	.....	.....	AHB-099
	Operating instructions	ARB-303	ARB-303	ARB-309	ARB-309
⚠	Fuse (6A)	.....	.....	AEK-109	AEK-109
⚠	Fuse (3A)	.....	.....	AEK-101	AEK-101

Schematic Diagram S and S/G Types

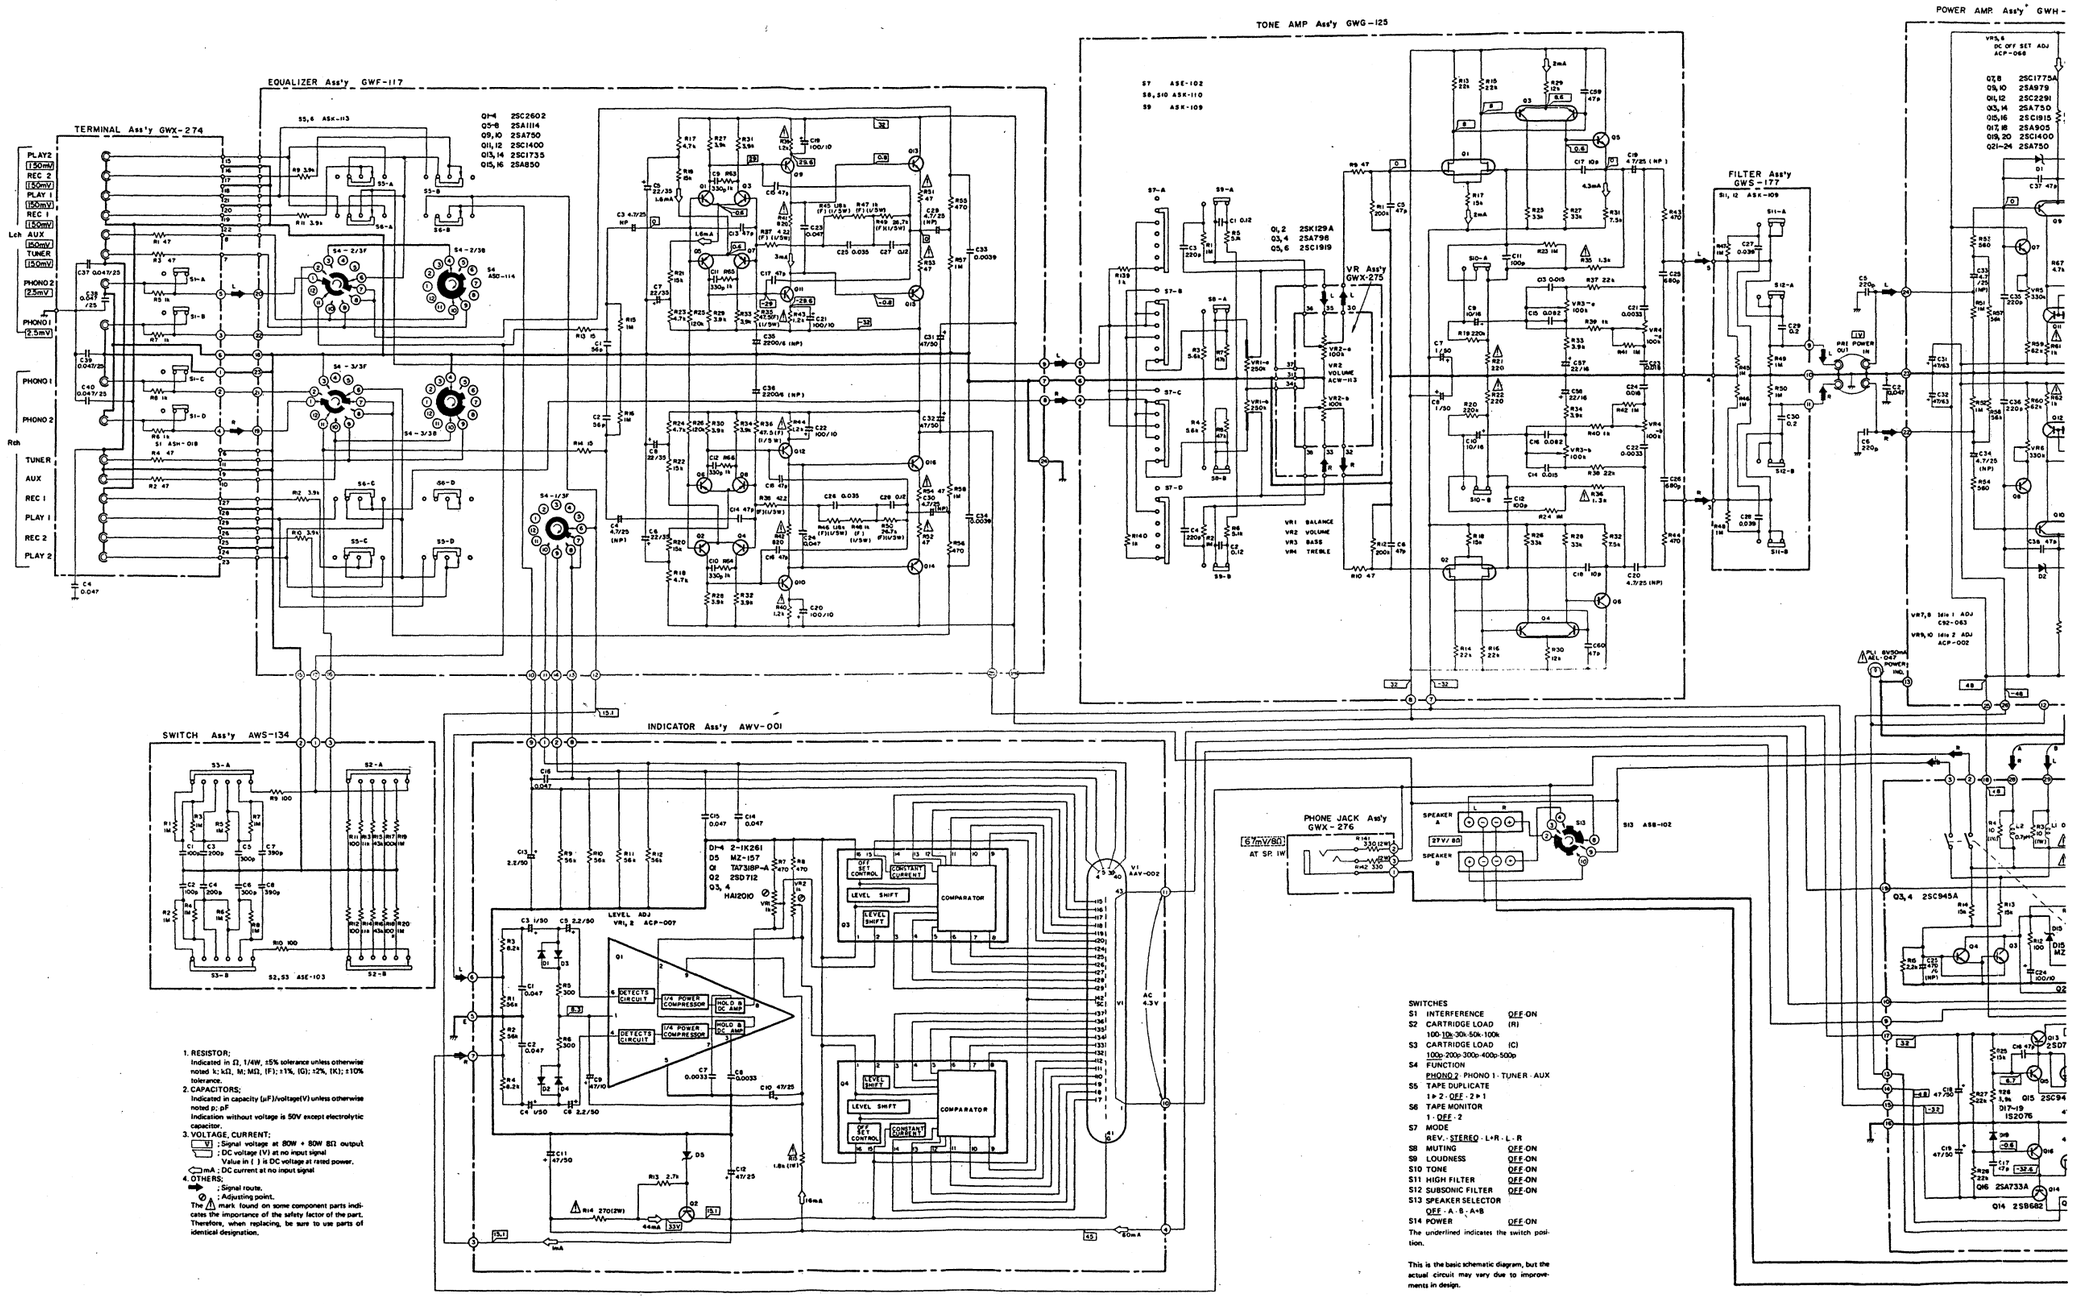

NOTE:
The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.

TONE AMP Ass'y GWG-125

POWER AMP Ass'y GWH-124

FILTER Ass'y GWS-177

VR Ass'y GWX-275

VR1 BALANCE
VR2 VOLUME
VR3 BASS
VR4 TREBLE

POWER SUPPLY Ass'y AWR-193

POWER SUPPLY CIRCUIT FOR US ARMY MODEL

PHONE JACK Ass'y GWX-276

SWITCHES

S1	INTERFERENCE	OFF-ON
S2	CARTRIDGE LOAD	(R)
	100-10k-30k-50k-100k	
S3	CARTRIDGE LOAD	(C)
	100p-200p-300p-400p-500p	
S4	FUNCTION	
	PHONO 2 - PHONO 1 - TUNER - AUX	
S5	TAPE DUPLICATE	
	1 ▶ 2 - OFF - 2 ▶ 1	
S6	TAPE MONITOR	
	1 - OFF - 2	
S7	MODE	
	REV. - STEREO - L+R - L - R	
S8	MUTING	OFF-ON
S9	LOUDNESS	OFF-ON
S10	TONE	OFF-ON
S11	HIGH FILTER	OFF-ON
S12	SUBSONIC FILTER	OFF-ON
S13	SPEAKER SELECTOR	
	OFF - A - B - A+B	
S14	POWER	OFF-ON

The underlined indicates the switch position.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

Part No.			
KU type	KC type	S type	S/G type
AEK-109	AEK-109	(AEK-109) AEK-101	AEK-109 (AEK-101)

Part No.			
KU type	KC type	S type	S/G type
ASK-124	ASK-124	ASK-128 AKR-031	ASK-128 AKR-031

Part No.			
KU type	KC type	S type	S/G type
..... ACG-001	ACG-014	..... ACG-001 ACG-001	..... ACG-001 ACG-001

Part No.			
KU type	KC type	S type	S/G type
ATT-563 AKP-004 ADG-023 AEC-294 AMM-079 .... ABA-243 ABE-056 B11-033	ATT-564 AKP-004 ADG-023 AEC-365 AMM-079 .... ABA-243 ABE-056 B11-033	ATT-580 AKP-021 ADG-016 AEC-294 ..... ANE-222 ABA-079	ATT-565 AKP-021 ADG-016 AEC-294 AMM-079 .... ABA-243 ABE-056 B11-033

Part No.			
KU type	KC type	S type	S/G type
AHD-613 AHA-214 AHA-215 AHA-216 AHA-217 .... ARB-303	AHD-619 AHA-214 AHA-215 AHA-216 AHA-217 .... ARB-303	AHD-621 .... AHA-218 ..... ARB-309 AEK-109 AEK-101	AHD-620 AHA-214 AHA-215 AHA-216 AHA-217 ..... AHB-099 ARB-309 AEK-109 AEK-101

P.C. BOARDS

EQ Assembly (GWF-119, for KC Type)

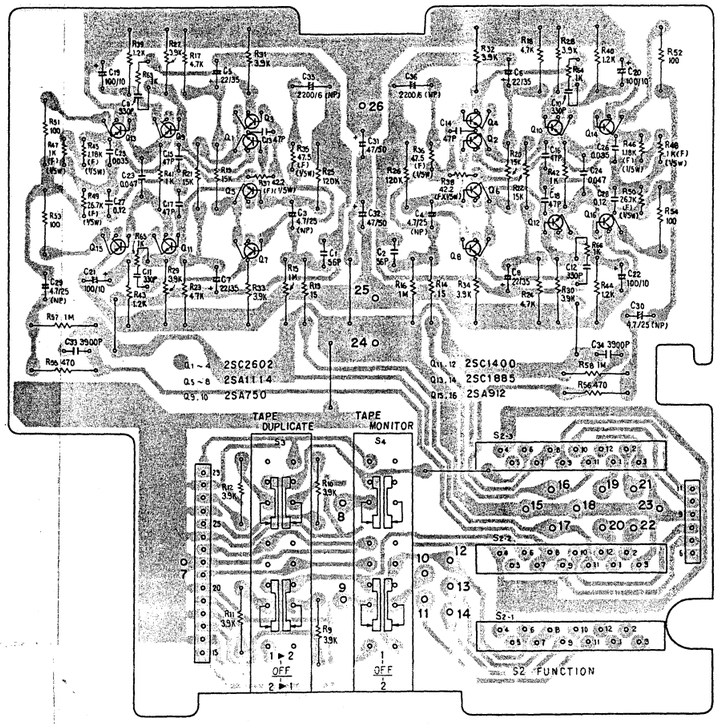

Power Supply Assembly (AWR-193, for S and S/G Type)

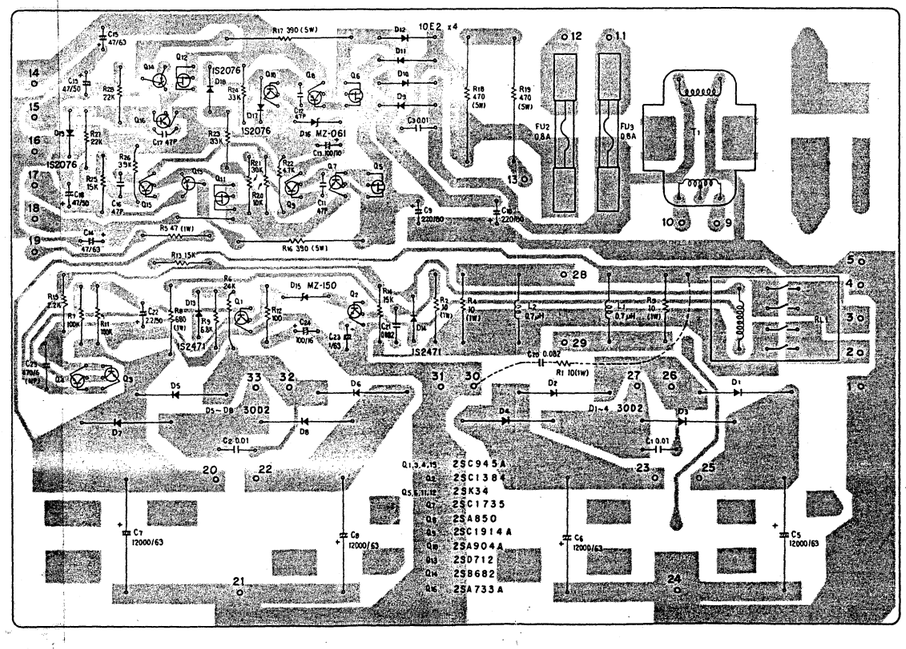

Schematic Diagram for KC Type

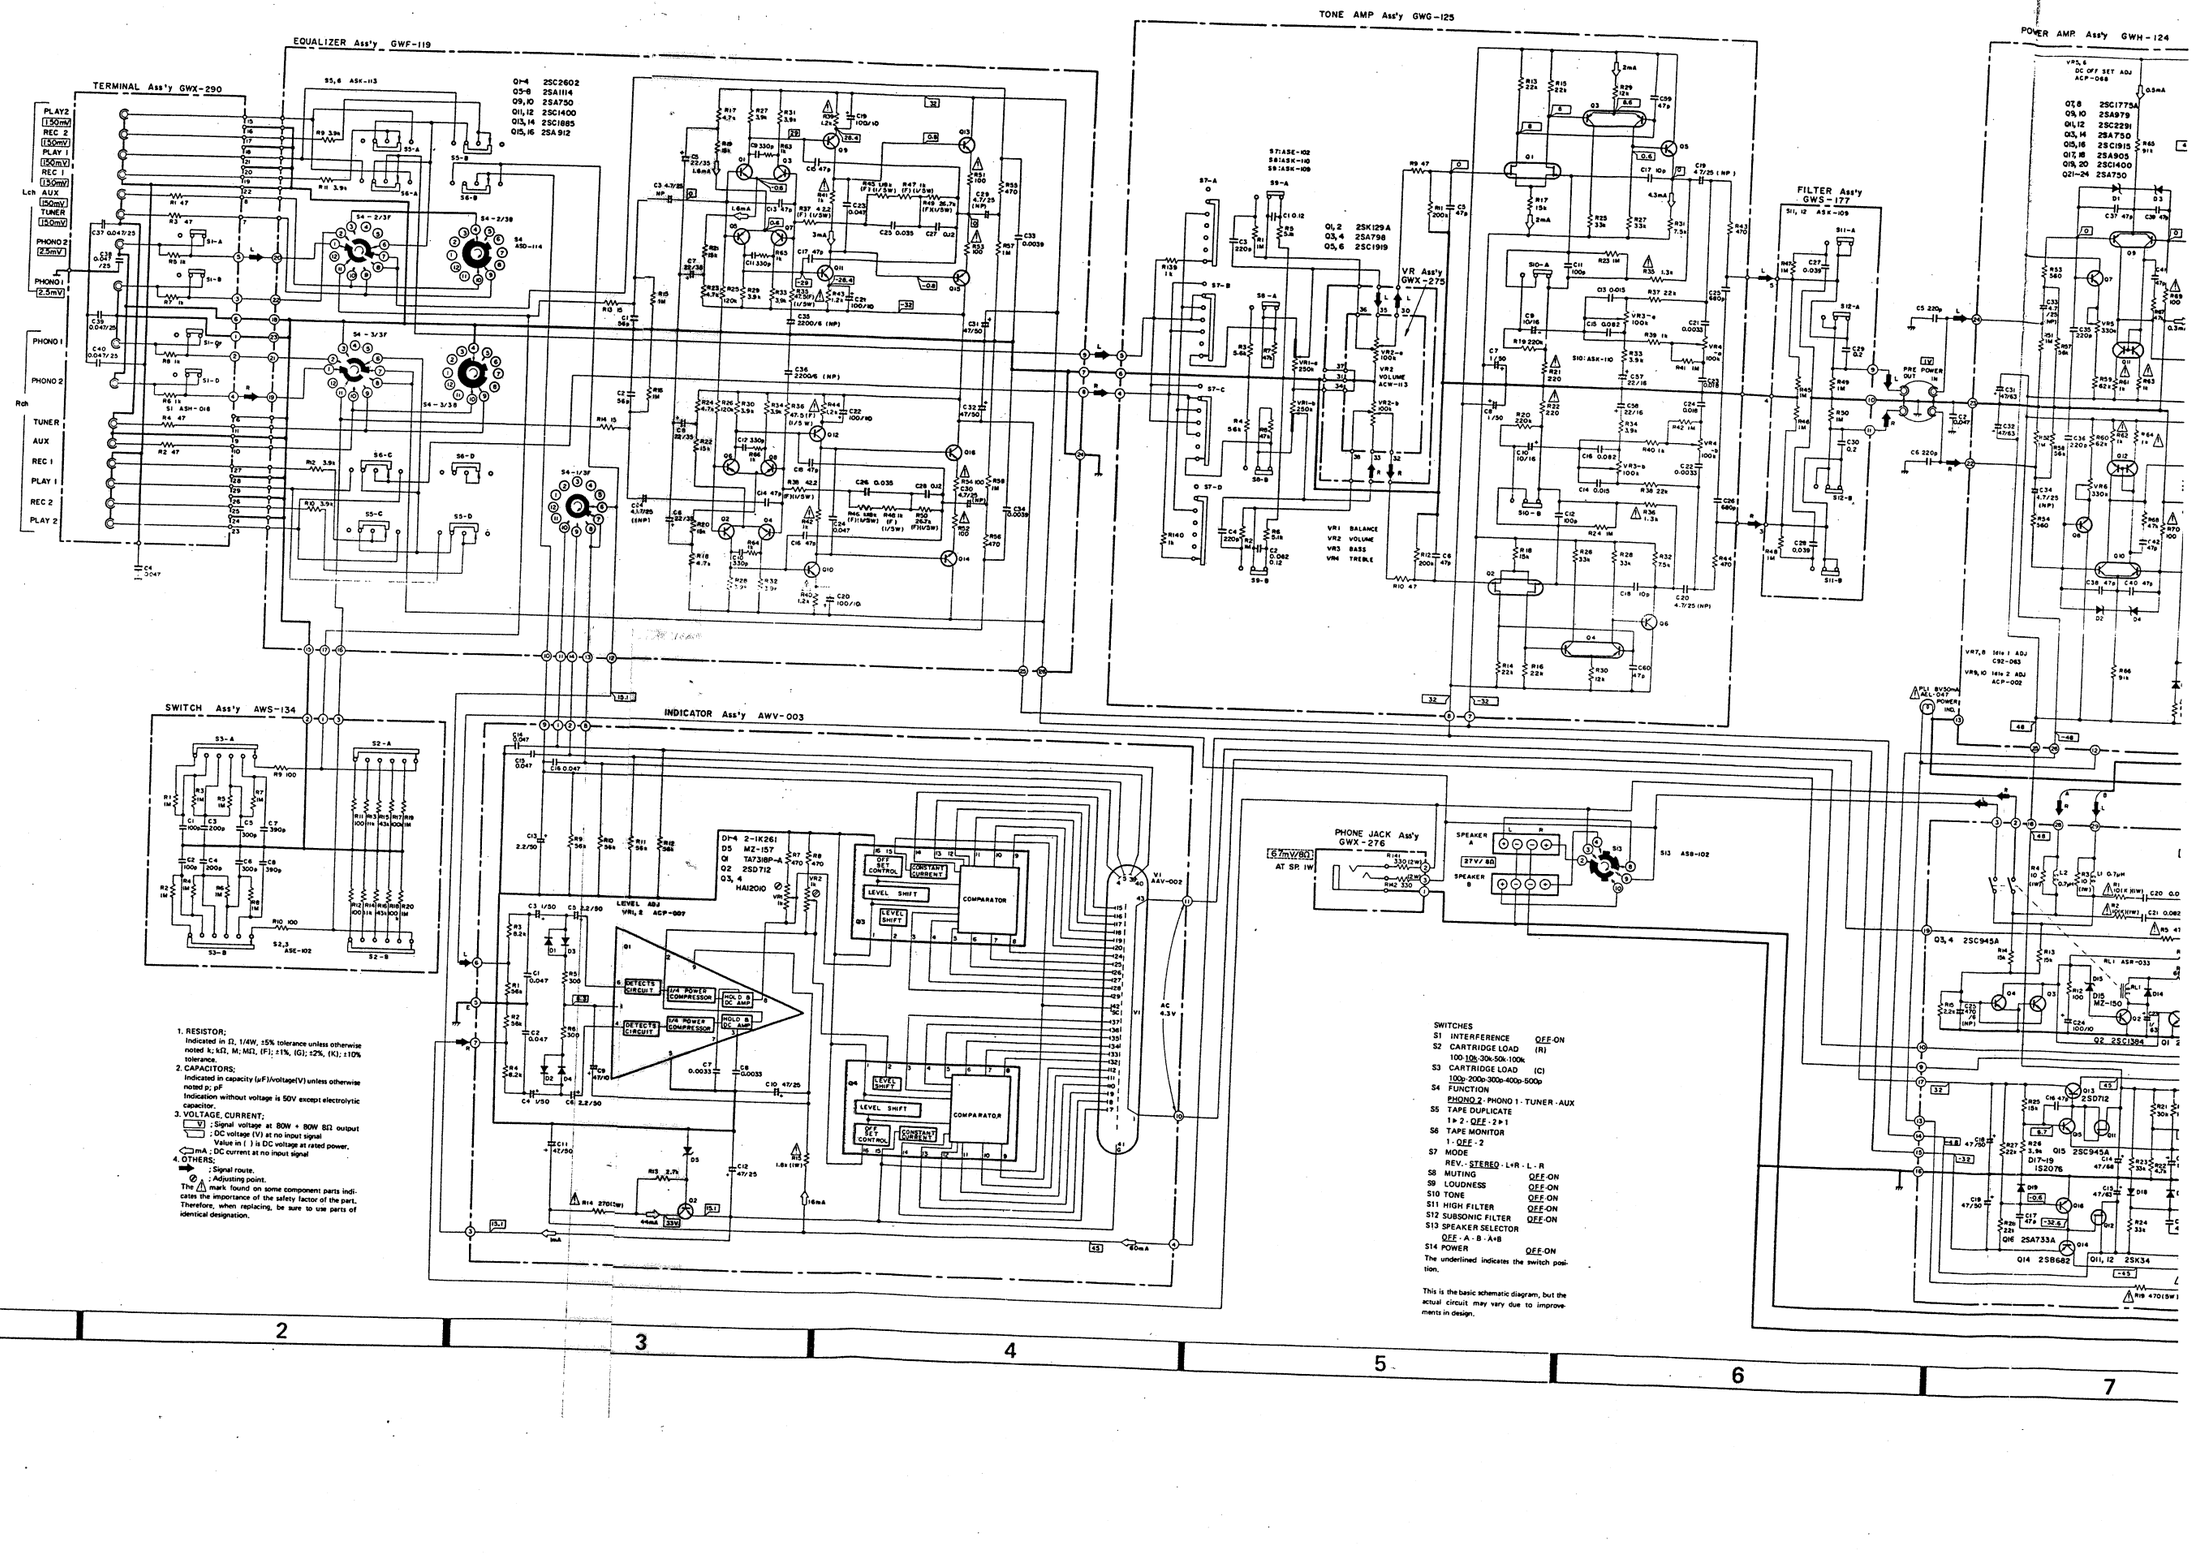
TERMINAL Ass'y GWX-290
EQUALIZER Ass'y GWF-119
TONE AMP Ass'y GWG-125
POWER AMP Ass'y GWH-124
FILTER Ass'y GWS-177
VR Ass'y GWX-275
INDICATOR Ass'y AWV-003
SWITCH Ass'y AWS-134
PHONE JACK Ass'y GWX-276
PLAY2
REC 2
PLAY 1
REC 1
AUX
TUNER
PHONO 1
PHONO 2
Lch
Rch
Q1-4 2SC2602
Q5-8 2SA1114
Q9,10 2SA750
Q11,12 2SC1400
Q13,14 2SC1885
Q15,16 2SA912
Q1,2 2SK129A
Q3,4 2SA798
Q5,6 2SC1919
Q1-4 2-1K261
Q5 MZ-157
Q7 TA7318P-A
Q8 2SD712
Q9,6 MA1201G
DC OFF SET ADJ ACP-068
Q7,8 2SC1775A
Q9,10 2SA979
Q11,12 2SC2291
Q13,14 2SA750
Q15,16 2SC1915
Q17,18 2SA905
Q19,20 2SC1400
Q21-24 2SA750
Q3,4 2SC945A
Q5 2SC945A
Q6 2SA733A
Q11,12 2SK34
Q13 2SD712
Q14 2SB682
D1-4 MZ-150
D5 MZ-157
D7-10 1S2076
LEVEL ADJ VR1, 2 ACP-007
VR7,8 Idle 1 ADJ C92-063
VR9,10 Idle 2 ADJ ACP-002
S1 INTERFERENCE OFF-ON
S2 CARTRIDGE LOAD (R) 100 10k-20k-50k-100k
S3 CARTRIDGE LOAD (C) 100p-200p-300p-400p-500p
S4 FUNCTION PHONO 2 - PHONO 1 - TUNER - AUX
S5 TAPE DUPLICATE 1 ▶ 2 - OFF - 2 ▶ 1
S6 TAPE MONITOR 1 - OFF - 2
S7 MODE REV. - STEREO - L+R - L - R
S8 MUTING OFF-ON
S9 LOUDNESS OFF-ON
S10 TONE OFF-ON
S11 HIGH FILTER OFF-ON
S12 SUBSONIC FILTER OFF-ON
S13 SPEAKER SELECTOR OFF - A - B - A+B
S14 POWER OFF-ON
The underlined indicates the switch position.
This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.
1. RESISTOR; Indicated in Ω, 1/4W, ±5% tolerance unless otherwise noted k; kΩ, M; MΩ, (F); ±1%, (G); ±2%, (K); ±10% tolerance.
2. CAPACITORS; Indicated in capacity (μF)/voltage(V) unless otherwise noted p; pF. Indication without voltage is 50V except electrolytic capacitor.
3. VOLTAGE, CURRENT; V ; Signal voltage at 80W + 80W 8Ω output; DC voltage (V) at no input signal. Value in ( ) is DC voltage at rated power. mA ; DC current at no input signal
4. OTHERS; ▶ ; Signal route. ⊘ ; Adjusting point. The △ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

NOTE:
The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.

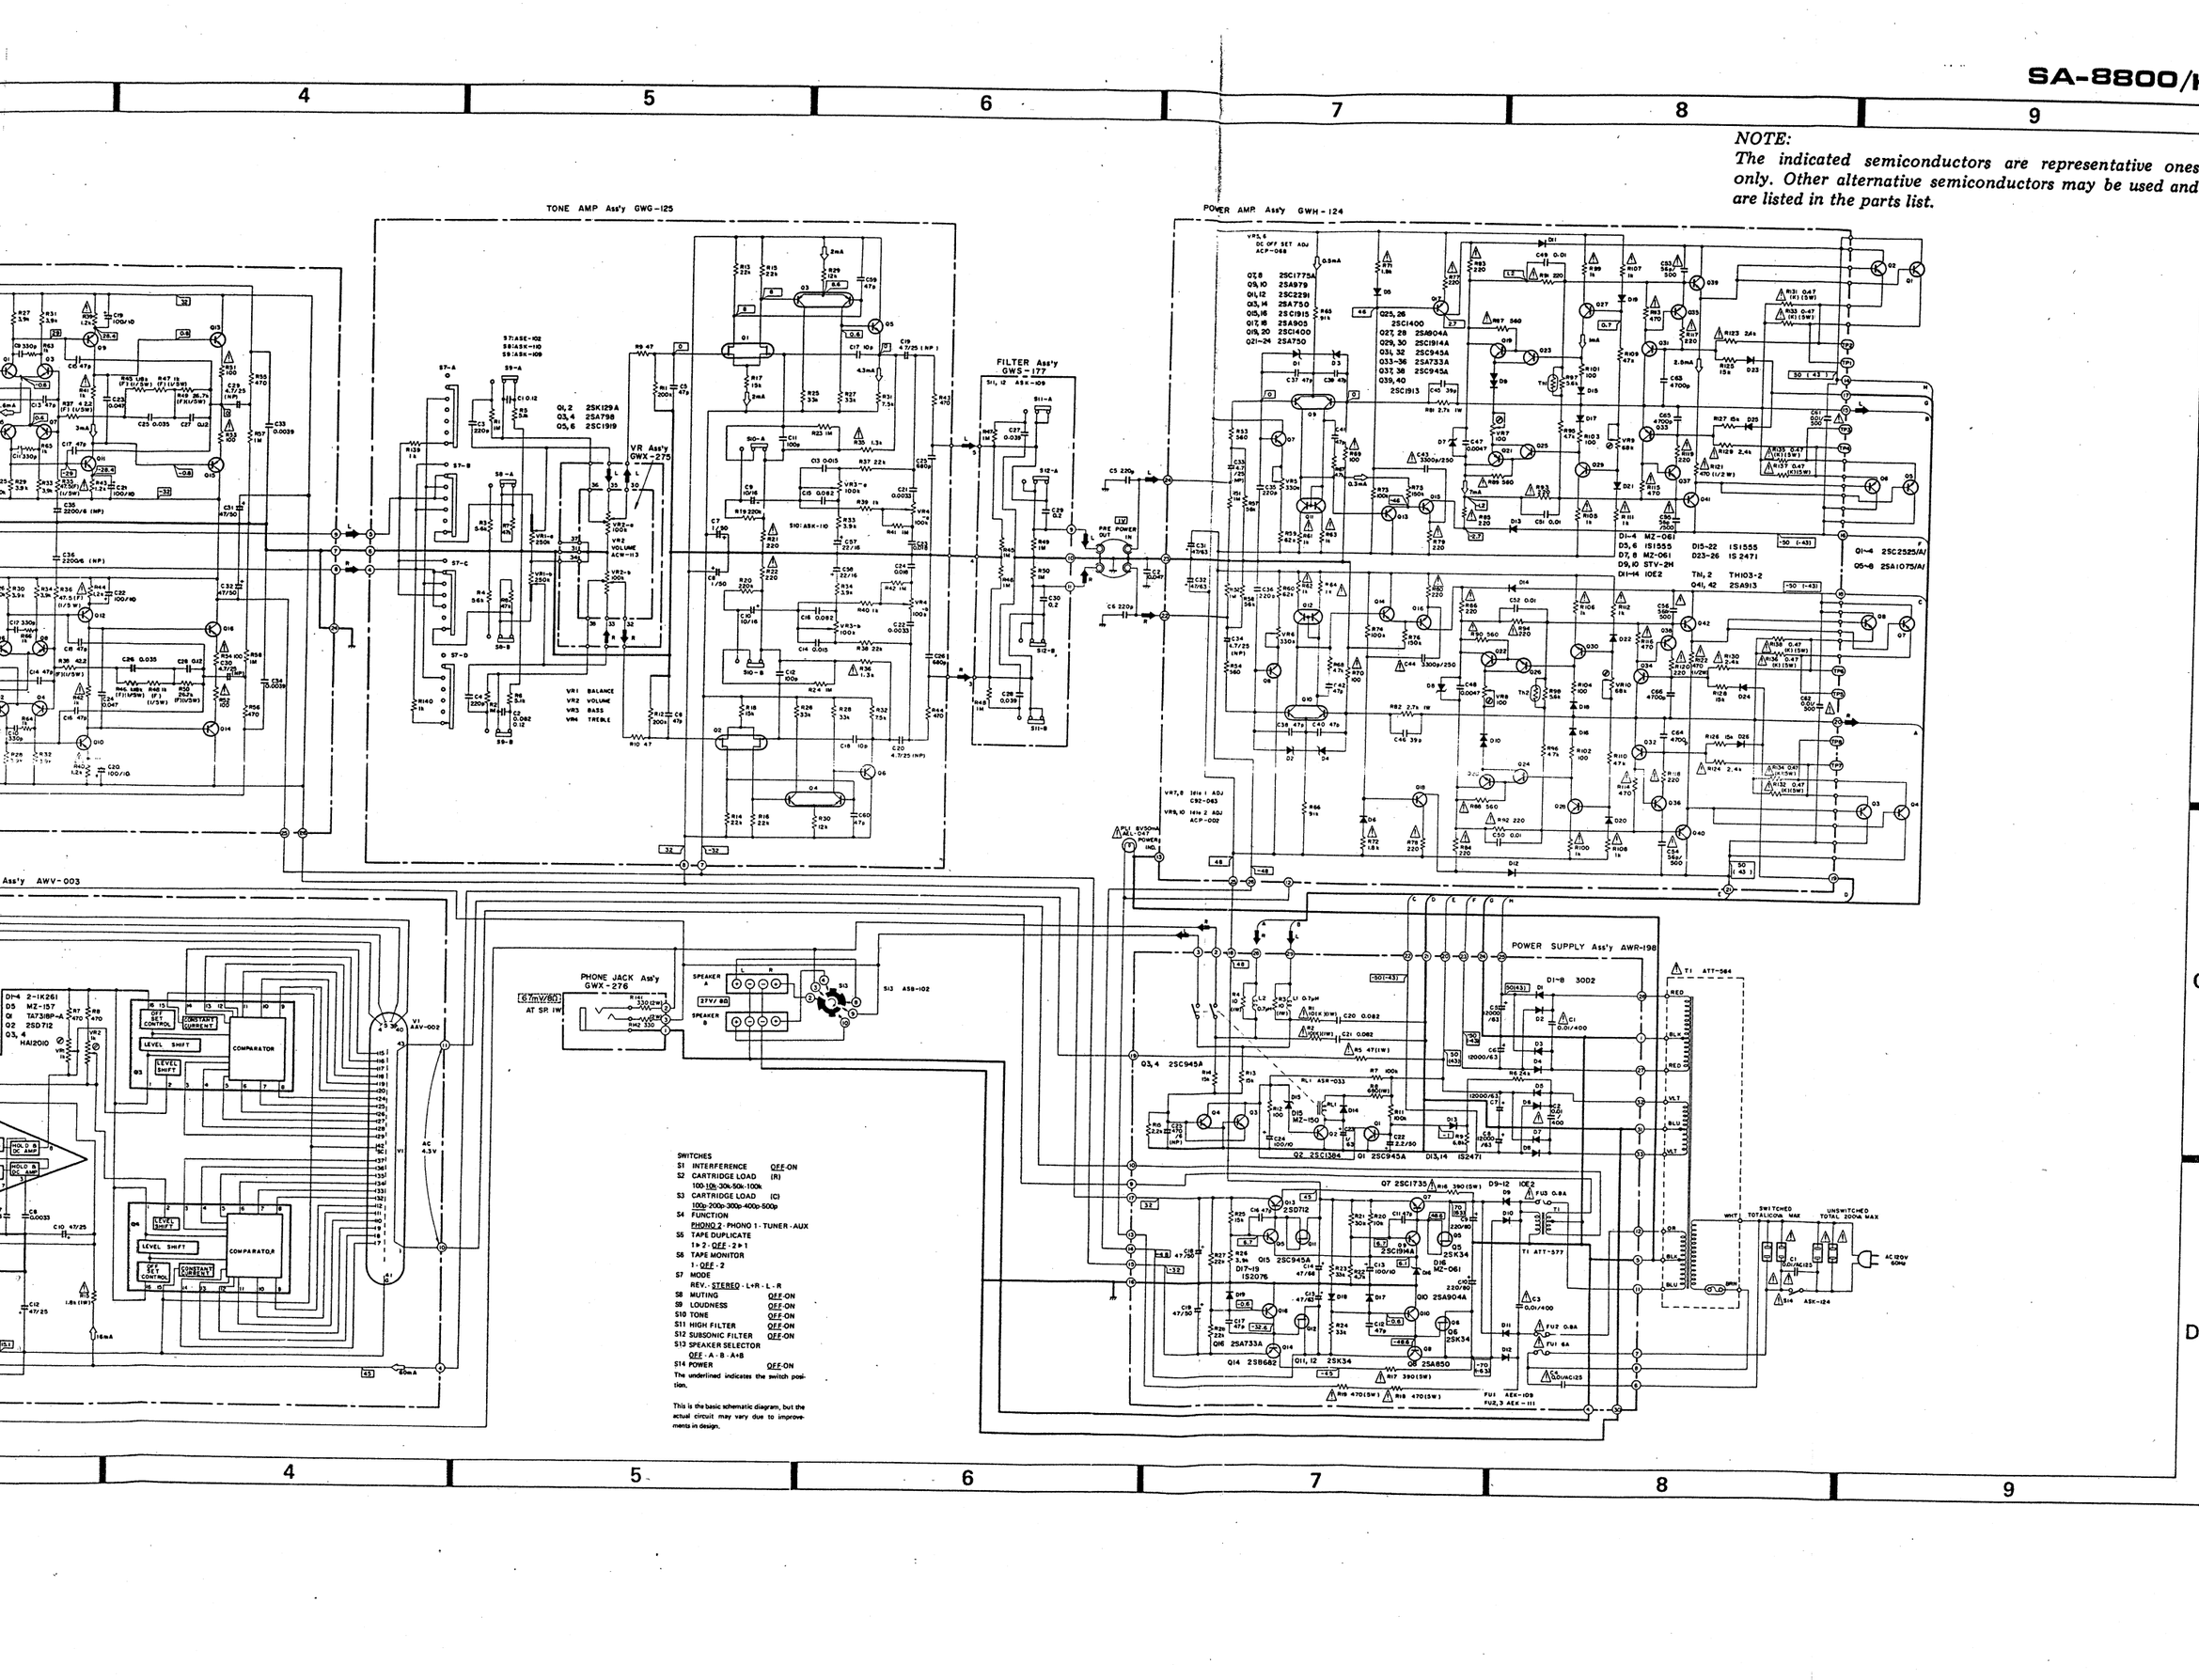
TONE AMP Ass'y GWG-125
POWER AMP Ass'y GWH-124
FILTER Ass'y GWS-177
VR Ass'y GWX-275
PHONE JACK Ass'y GWX-276
POWER SUPPLY Ass'y AWR-198
Ass'y AWV-003
SWITCHES
S1 INTERFERENCE OFF-ON
S2 CARTRIDGE LOAD (R) 100-10k-30k-50k-100k
S3 CARTRIDGE LOAD (C) 100p-200p-300p-400p-600p
S4 FUNCTION PHONO 2 - PHONO 1 - TUNER - AUX
S5 TAPE DUPLICATE 1→2 - OFF - 2→1
S6 TAPE MONITOR 1 - OFF - 2
S7 MODE REV - STEREO - L+R - L - R
S8 MUTING OFF-ON
S9 LOUDNESS OFF-ON
S10 TONE OFF-ON
S11 HIGH FILTER OFF-ON
S12 SUBSONIC FILTER OFF-ON
S13 SPEAKER SELECTOR OFF - A - B - A+B
S14 POWER OFF-ON
The underlined indicates the switch position.
This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

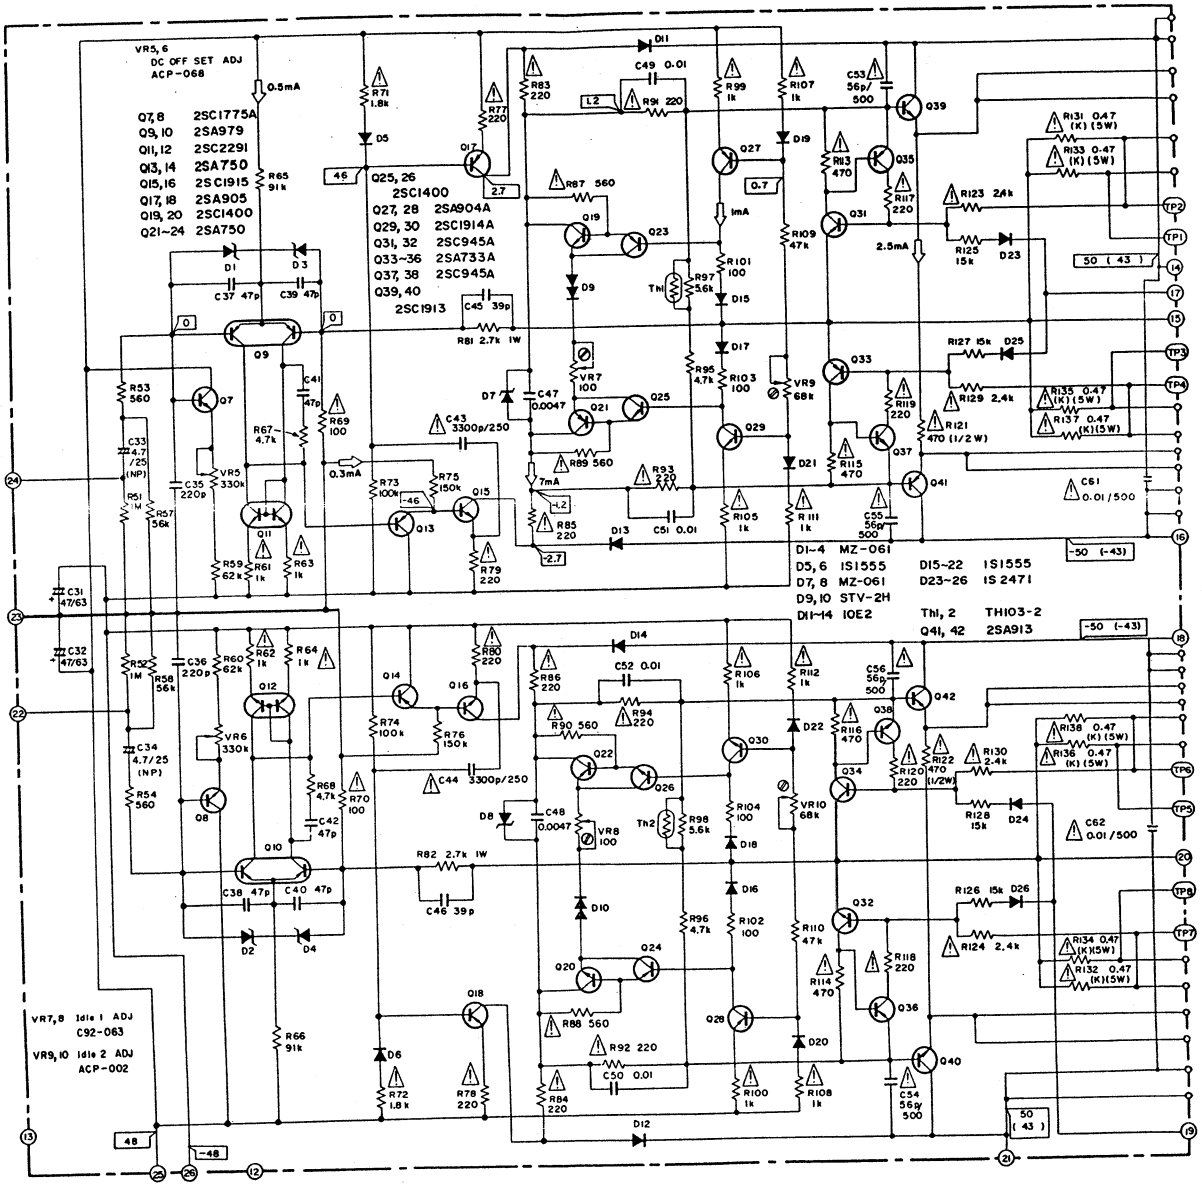
VR5,6 DC OFF SET ADJ ACP-068
0.5mA
Q7,8 2SC1775A
Q9,10 2SA979
Q11,12 2SC2291
Q13,14 2SA750
Q15,16 2SC1915
Q17,18 2SA905
Q19,20 2SC1400
Q21~24 2SA750
Q25,26 2SC1400
Q27,28 2SA904A
Q29,30 2SC1914A
Q31,32 2SC945A
Q33~36 2SA733A
Q37,38 2SC945A
Q39,40 2SC1913
D1~4 MZ-061
D5,6 1S1555
D7,8 MZ-061
D9,10 STV-2H
D11~14 10E2
D15~22 1S1555
D23~26 1S2471
Th1,2 TH103-2
Q41,42 2SA913
VR7,8 Idle 1 ADJ C92-063
VR9,10 Idle 2 ADJ ACP-002
0.3mA
7mA
1mA
2.5mA

11.11 INDICATOR ASSEMBLY (AWV-001)